THE THEORY AND PRACTICE

O F

JUTE SPINNING

BEING A COMPLETE DESCRIPTION

OF THE MACHINES USID IN THE PREPARATION

AND SPINNING OF JULE YARNS

WITH ILLUSTRATIONS OF THE VARIOUS MACHINES.

SHOWING THE CALCULATIONS, TABLES OF SPEEDS, DRAFTS, PRODUCTION, WASTE, ETC.

Including over 140 Diagrams to Scale

WILLIAM LEGGATT

manágara manhattan wolks, duñdee:

Atther of the Second Billion of Art of Weaving.

WILLIAM KOD, WHITEHALL STREET

WILLIAM KIDD, PRINTER, WHITEHALL STREET, DUNDER

Colonel Frank Stewart Sandeman, J.P., OF STANLEY. PERTHBHIRE.

THE FOLLOWING PAGES ARE RESPECTFULLY
INSCRIBED IN RECOGNITION OF MUCH KINDNESS
AND CONSIDERATION RECEIVED
DURING THE PAST TWENTY YEARS.

PREFACE.

The author has never forgotten the difficulties he had to contend with in regard to information when learning his business. It is a true saying that too much help is a bad thing, but it is quite as true that a little, just a little at the right time, is a good thing. This is the spirit in which these pages have been written. They contain information which will be found invaluable to those who are seeking with earnestness of purpose to learn their business, but they were not intended to, and will not help those who are not also willing and anxious to help themselves. Any one anxious to do this will, we feel confident, receive from a careful study of these pages a botter start than ever the author received.

Nothing has been written in the book with reference to the Jute Fibre or the growth of the plant; that part of the subject the student will find in books already to hand. My endeavour has been to confine myself strictly to the practical manipulation of the fibre and the method of working the machines, explaining as briefly as possible the calculations of speeds, etc.

The man of practical experience will perhaps not find much that is new, but the book may be of service even to him as a reference for figures which are not usually at hand.

VI. PREFACE.

Writing a mere description of Jute Muchinery will not be of much assistance to the student since there is so much detail, and that detail it is of importance to know well before you can expect to get the many wheels and pinions, &c., in your "mind's eye," hence the reason that considerable attention has been bestowed on the illustration of all the parts of the machines. These illustrations being all made to scale, very readily bring before the reader the different proportions and relations of one wheel or roller to another.

Every effort has been made to avoid errors in the calculations. There may be some, however, in the book, but, generally speaking, the figures can be relied upon.

My sincere thanks are due to A. S. Macpherson, Esq., of Messrs Fairbairn, Naylor, Macpherson, & Co., Limited, Leeds; and also to A. Gordon Thomson, Esq., of Messrs Thomson, Son, & Co., Dundee for valuable assistance rendered.

WILLIAM LEGGATT.

DUNDEF, May, 1893

CONTENTS.

Introductory Remarks,		PAGE. 1-3
BOILERS AND ENGINES,		4 17
Description of Boilers Furnace Apparatus Economiser Dimension Flues and Arrangement of Dampurs,	s of	4-10
Description of Engines - Abstract of Horse Power Coals and Water Horse Power per Hour - Pond Capacity,	per 	10 12
Engine Diagrams and now to calculate them		13-17
Sphed of Shafting,		18
JUTE BATCHING -		
Description of the Process of Batching.		19, 20
Selection of Batch for Warp and Weft Yarns for Hessian of Stan	dard 	21, 22
Particulars of Jute Oponer and Jute Softener, Speed and Diagrams.		23 26
JULE PREPARING AND PREPARING MACHINERY		
General Description of Proparing Process,		27, 28
Explanation of the Working of Draker and Finisher Cards,		29 32
Rules for Calculations of Single Doller Breaker and Finisher Draft,		33 35
Double Doffer Breaker and Finisher Draft,		36. 37
Arrangement of Single Dofter Clock - Calculations for same, with Diag	ram,	38 40
Specifications and Speed of Single Breaker Card, with Tables of Whee Speed of Workers, Dratts, &c.,	In for	41 47
Diagrams and Tables of Wheels and Pulleys for same,	·	48 51
Specifications and Speeds of Double Doffer Breakers, with tables of W for Speeds of Workers, Drafts, &c.,	heals	52 59
Arrangement of Double Doffer Clock,		60
Diagrams and Tables of Wheels and Pulleys for Double Doffer Breaker		61-64
Diagrams of Upstriker Breaker Card, with Tables of Wheels and Pulle		65 68
Diagrams of Single and Double Doffer Finisher Card, with Tables of W	•	U17 (10
and Pullors for some	1106,10	de Fo

viii, CONTENTS

4.11 . 11 . 12	, ,		,,,,,,				PAGE.
Diagrams of Upstriker Finis	shor Ca 	rd, with	Tables (or Wheels	and Pul	icys,	
Specifications and Speeds of	Single	Doffer I	inisher,	with Tab	les for S	peed	
of Workers, Drafts, &c.,		•••		•••	•••	••	80-98
Lap Machine-Diagrams and	Tables	of Whee	ls and I	ulleys for	r same,	•	99, 100
Dimensions of Card Cylinder	s and R	ollers,	•••	•••	•••	•••	101, 102
Details of Covering for Break	ters and	Finishe	rs,	••	•••		103-106
Specification of Single Doffer	Breaker	r and Fr	nisher S	taves,	•••		107, 108
Specification of Double Doffe	r Break	er and F	misher S	Staves,			109, 110
Details of Covering for Upstr for Jute Suipper	iker Bre 	caker an	d Finish 	er f or We	ftCove	ring	111
Diagrams of Breaker and Fin	isher S	taves,			•••		112-118
General Instruction as to Set	ting of l	Breaker	and Fini	sher Card	s for He	ssian	
Yarns,	•••	•••	•••		•••	••	119
Particulars of Upstriker Brea					•		120
Workers,				1 .1:47	 	 8	120
Drawing Frames Description Drawing Frames,		wing i	TOCCHS :	ana amer 	ene kuic		121-126
Arrangements of Wheels for 8	Speed, C	ill Bars	, and Re	ving,			128, 129
Diagrams of Drawing Frames	-			-	ya for s	ıme,	130-148
Diagram Spiral Drawing Fra	ame, Be	nd, and	Serews,			,,,	144
Diagrams and Particulars of I	Diawing	gand Ro	ving Gil	lls,			145 147
Fluting of Drawing Rollers .	Diagran	is of Dru	wing an	d Pressin	g Roller	s,	148-150
Spiral Roving Frame, The I	Roving	Process	Arrang	gement of	Wheel	for	
Clock Calculations, Draft	s, Twis	ta, Spec	l of Spn	ndles, &c.	,	•••	151-153
Diagrams of Spiral Disc Rovin	ng Fran	ae, with	Tables o	f Wheels,	Piniona		
Pulleys for same,		• •	•		•••	•••	154-157
Diagrams Roving Screws an		•	•		••	•••	158
Automatic Motion for Roy Arrangement of Wheels,			-		_		159, 160
		C Danidas	•••	•	••		161
General Instructions as to Wo Diagrams - Roving Screws ar	•	•		*		 allan	101
1.15 . 1.15					OI C		162
Diagrams Differential Motio	n and ((alculati	ons for	Speed of	Bobbin	and	••
Traverse,			•••			•••	163-168
Diagrams - Rotary Drawings		.	with T	ables of	Wheels		100
•			***	1 200	•••		169-175
Diagram-Spinning Roving F		Lable of	W heels	and Pinic	ons,	••	176, 177
Speed of Preparing Machinery	7.			***			178

Conduction Demants on Despairs M	(aahina	***				Pagr. 179
Concluding Remarks on Preparing M Diagrams of Barrows for Rove and S		-	•••	•••		180
-				 Eun 1	 ahiah	
Arrangements of Preparing Machiner Hessian Yarns are to be spun,	 .y aysu				18	11-187
Sacking, Warp, and West arrangement	nts,	··•			188	3, 189
Jute Spinning,	•••			••	190), 101
Instructions as to the Working of Re	ove Pla	te,	•••		•••	192
Explanation of the term "The Rove	Runni	ng,"	•••			193
Speed of Spinning Frame Spindles,				•••	•••	194
Diagram-Spinning, Spindle, and Fl	lyer,	•••	•••		• •	105
Production from Spinning Frames,	•	•••	***		190	3, 197
Twist of Hessian Yarns,	•••	•		•••	198	3, 199
Spinning Frame-Draft and Twist ar	rangem	ent of W	heals, for	Calculat	iou	
Fairbairn,		٠	•••		20	0 202
Diagrams of End Gables of Spinning	Framo	s, showing	Twists	and Gris		
Draft Arrangement of Wheels, &	ke. — Fa	irbairn,	•••		20	3-200
Diagram—Heart motion,	•••		•	•••	•••	207
Diagram of Full Bobbin,	•••	•••	•••		••	208
Automatic Motion for Drawing Roll			•••	•••	•	209
Arrangement of Spring and Lever for					•	210
Arrangement of Spring and Lever for	Pressi	ng Rollers	and Ret	aining Ro	dlers,	211
Automatic Motion for Drawing Roll	er Th	musm,		•••	•	21:
Diagram-Rove Plate Arrangement-	Fairb	airn,			•	21:
Diagrams—Spinning Frame Gables Arrangement of Weeels, &c L	, show	ing Twis	t and (frist or	Draft 21	4-216
Diagram-Automatic Motion for Dr			ow, Mon	ifieth,		217
Particulars of Twist and Grist or					od of	
Calculation—Low, Monificth,		•••		•••	2	8-22
Diagram of Belt Joint,		•••	•••	•••		228
The Driving of Spinning Frame,		,	••		•••	229
Instructions for Setting Pulleys for	Spinnin	g Frame	Belts,		•••	230
Diagram-Showing Setting of Guide						23
•	•					000
Cop Winding,	•••	••••	••	***	•••	235
Particulars of Cop Machine Gearing,	with I)iagrams,	•••	•••	2	33-240
RESIGNO AND BUNDLING,				184		24
Thomas Bears Parl		-	•		24	2. 24

X. CONTENTS.

Iustructions and Particulars as to the Reelin	o of th	e Varn.	.,	PAGR 244-246
Diagram and Particulars of Warping Mill,			•••	247
Diagram-Bundling Pross,			•••	248
Diagram—Bundling Stool,		•••		249
Diagram-Warp Winding Machine,	•••			250
Concluding Remarks-				
Waste,		•••		251-254
Speed to be put upon the Machinery,		•••	•••	254, 255
Upkeep of Preparing and Spinning Machiner	y.	•••		256
Bobbins,		•••		256, 257
Accidents to the Machinory,		•••		257
Finishing the work for the day,				258
Arrangement for Extinguishing Fire,				258
APPENDI	.X.			
JUTE SNIPPER				
Explanation of Machine, with Diagrams,				261 263
Lathe attachment for Grinding Spinning Spin	dles,			264, 265
Waste Cleaner—				
Explanation of Machines, with Diagrams			•••	266-268
The Adjustment of the Breaker Shell,	•••		••	269, 270
Addenda,		•••	•••	271, 272
Table of Circumference and Areas of Circles,	•••	•••	•••	273-284

INDEX TO ILLUSTRATIONS.

PLAN OF JUTE MILL

Showing arrangement of Machinery and width of Passes.

PLAN OF JUTE MILL

Showing Pitch of Columns, Arrangement, Speeds Dimensions of Shafting.


		BOILER	s.				
							PAGE.
Boiler-Mechanical Stoker for		•••	•••	•••	•••	••	5
Section of Fire Box for		•••	•••	•••			7
Opening above Fire Brie	dgo fo	r	•••			•••	7
Flues,	•••	•••	•••	•••			8
Plan of Economiser and	Flue	for		•••	•••	•••	g
		ENGINE	s.	•			
DIAGRAMS- Total Load,		,	•••				1 4
Total Load,		•••			•••		15
Friction Load,	•••	•••	•••		٠,٠		16
Friction Load,			•••	•••	•••		17
	JUT	E BATC	HING.				
CRUSHER-Patent Jute-Butcha	rt,		•••	•••	•••	•••	24
Softener-Jute,			•	•••	***	•••	25
Roller for Jute,	•••		•••				26
Barrow -Jute,			•••				26
Roor CurreyInte							250

		JUTE PI	REPARI	NG.	r			Paum.
CARD-Clock for	Single Doffer	Breaker.		•••				40
	showing Gea				ving Pul	levs—Sin	gle	
	fer Breaker,	_					·	49
Elevation	of Gearing at	Driving Er	ad, Single	Doffer	Breaker,	•••	•••	51
	showing Gear fer Breaker,	ing at end	opposito	to Dri	ving Pul	leys, Dou	ble 	62
Elevation	of Gearing at	Driving E	nd Doubl	e Dotfer	Breaker	,		64
Elevation	of Gearing at	Driving E	nd Upstr	iker Bre	aker,		•••	66
Elevation	of Gearing at	nd opposite	to Drivi	ng Pulle	ys Upstri	ker Break	er,	68
	of Gearing at	end oppo	site to D	riving l	Pulleys S	lingle Do	ffer 	70
Elevation	of Gearing at	Driving En	ad Single	Doffer :	Finisher,	•••		72
	of Gearing at		-				ffer	
	isher,		• •					74
Elevation	of Gearing at	Driving E	nd Doubl	Doffer	Finishor	,		76
Elevation	of Gearing at o	pposite end	l to Drivi	ng Pulle	ys Upstri	ker Finis	her	78
Elevation	of Gearing at	Driving E	ud Upstri	ker Fin	isher.			80
Covering	for Breaker,			•••	••	•••		112-114
Covering	for Finisher,		•••		•••			115-118
Lap Macl	hine,			•••		•••	•••	100
DRAWING FRAMI	e.—Circular—l	Oriving En	đ,	•••		•••		131
	Circular -P		***	•••		•••		133
	Patent Slid	e or Push	Driving	End,			,	135
	Patent Slid	e or Push	Pass Enc	i,	•••			137
	Patent Shd	or Push~	tiuido l'i	ate,	•••			188
	Patent Slide	or Push	Gill Bare	ι,			•••	139
	l'atent Slid	e or Push	Preming	and Dr	awing R	ollers,		149, 150
	Spiral-Pas	e end,	•			•••		141
	Spiral—Dri	ving End,		•••	•••			148
	Spiral Ber	nd and Scre	ws,					144
	Gills,	•••	•••	•••	•••	•••		145, 146
	Draft Geari	ug-Rotary	y ,			•••	•••	.179
	Draft Geari	ng-Double	e Rotary,	•••	•••	•••		174
ROVING FRAME-	-Elevation Page	a End (ani	rai).		•••	••		155
	Elevation Dri	•		•••	•••	••	••	157
	Screw and Gi							159

INDEX TO ILLUSTRATIONS.

ð					P	AGE.	
ROVING FRAME Automatic Motion	on, Drawi	ng Roller	r,	•,•	•••	159	
Pitch Pin and Co	llar,	•••	••	••	***	163	
Gills—Spiral, .				•••	•••	146	
Differential Mot	lon,	•••		•••	168,	, 164	
Snail,		• ••		•••	•••	168	
Gills-Rotary, .		•••			••	170	
Elevation Rotary	"Reach,	."				171	
Draft and Twist	Gearing-	Spinning	,	•••	•••	176	
Barrow,	••			•••	••	180	
JUTE SPINNING.							
SPINNING FRAME -Spindle and F	lyer for			•••		195	
Elevation Pass	End-Fa	irbairn	•…			204	
Elevation Pull	ey End—	Fairbaire		••	•••	206	
Huart Motion	for				•••	207	
Bobbin for .					•••	208	
Automatic Mo	tion, Drav	wing Roll	ler for	••	•••	209	
Bends for .				•••	210	, 211	
Rove Plate for				•••	•••	213	
Elevation Pass	End-Lo	w		•••	214	, 215	
Elevation Driv	ing End-	-Low			•••	216	
Automatic Mo	tion, Drav	wing Rol	ler—Low		•••	217	
Automatic Mo	tion, Drav	ving Roll	or, Thor	nsoh	•••	212	
Cotton Bolt fo	r,			•••		228	
Belt Fork for	•••				•••	280	
Belt Guide Pu	lleys for			•••		231	
Lathe Attachn	·	rinding 8	Spindles,	•••	264	, 265	
COP MACHINES. Cop Maghine.—Parker, Sons & Co., 234-236							
Thomson. Son &	C -		•	•••		237	
Coombe, Barbon		•	• ,	•••	•••	238	
Lea, Croll & Co.				•••	•••	239	
·	-		. ,	••.	••		
Spindle Cone and	а Сор,	• •	• • • • • • • • • • • • • • • • • • • •	•••	••	240	

	RE	ELING	AND E	UNDL	ING.		1	PAUB.
REEL - Elevation of I	ower,		•••	•••	•••	<i>•</i>	24	2, 248
Bundling-Press,		•••	•••			•••	•••	248
Stool,	•••				••	•••	•••	249
WEAVER'S KNOT,	•••	•••			•••	•••		245
		•	WARPIN	IG.				
WARPING MILL,								247
		WA	RP WIN	DING.				
BOBBIN WARP WINE	oinu,	•••	•••	•••			••	250
		JU	te snii	PER.				
JUTE SNIPPER-Eleve	ation of	•••					`	262
Plan	of				•	•••	•••	263
		WAS	TE CLE	EANER.				
WASTE CLEANER-E	levation a	nd Sect	ion,			•••	20	66-268
I	Octail of R	adial B	racket Cı	arrying	Shell,	•••	•••	269
	.rrangeme					Shell,		270

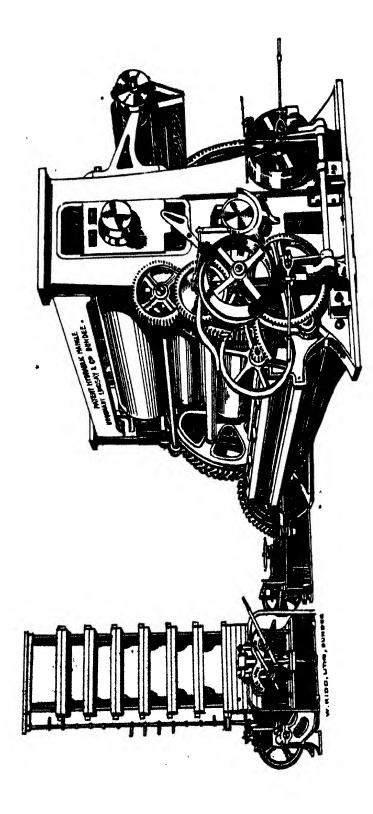


PATENT HYDRAULIC MANGLE.

FOR JUTE & LINEN FABRICS, MAKERS

UROUHART LINDSAY & C. L.P. DUNDEE

ARRANGEMENT OF GEAR FOR ROVING FRAME TRAVERSE.

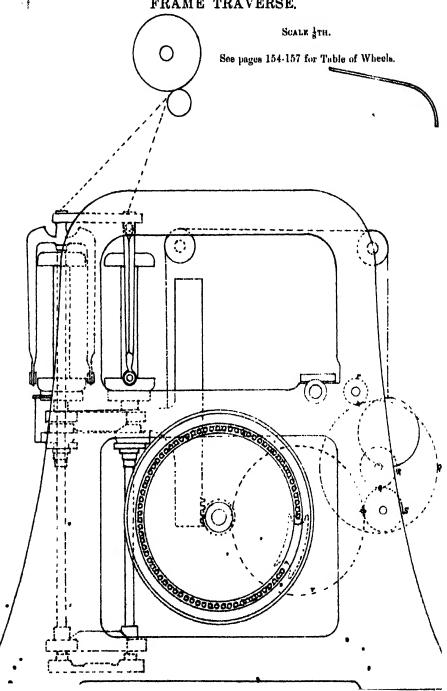

INTRODUCTORY REMARKS.

To give in a general way some information that will be of some service to the young mechanics and mill-men anxious to learn their trade, is the object of the following pages, not going too much into detail, but stating in a plain and simple way as much as will help the student to make a start and to persevere in his efforts to learn the theoretical part of his trade, and consequently making the machinery amongst which his daily work is of more interest and attraction to him. No theories or crotchets are discussed, but an attempt has been made to explain the working of the machines, and the calculations pertaining to them, along with their arrangement in the different departments to which they belong.

Two plans of a Jute Mill are given in this book. One of these is a ground plan, and is intended to show the arrangement of machinery, the floor space taken up by each machine, the pitch of columns and roofs, and the width of passes in each direction; the other plan shows the elevation of roof, the lines of shafting, and the diameters of shafting necessary to transmit the horse power required to drive the machinery marked upon the ground planthe speeds of the different shafts are marked upon this plan for reference. These plans are in no way exhaustive, and are not inended to be so-that is to say, they do not go into details, but they show in a broad and general manner the outstanding arrangement of a Jute Mill built upon the shed principle, and will be found useful as a reference for the information referred to in this para-The reader will note that all the speeds of shafts are given in whole numbers. This has been done merely to avoid fractions. and it will be observed that in the calculations of card cylinder speeds, &c., I have also taken whole numbers for the same reason; but this in no way affects the results which are near enough for showing the method of working, and also, I may add, for all practical Durposes.

It will also be observed from the plan of shafting that wheelgearing is the method adopted throughout for driving the mill.

In the ground plan all the frames are shown the same size—72 spindles a side, 4" pitch. I will refer to this in the chapter upon spinning and spinning machinery.

The mill as shown by the plan is laid out for the following machinery:—

- 1 Jute Opener.
- 2 , Softeners of from 47 pairs of rollers each.
- 7 , Breakers-Cylinder 6' × 4'.
- 14 " Finishers-Cylinder 6' × 4'.
- 14 ,, 1st Drawings-2 heads each-Push Bar.
- 14 ,, 2nd ,, 2 ,, Spiral Bar.
- 14 ,, Royings 10" × 5", 56 spindles each.
- 84 Spinning Frames, 4" pitch, 4" traverse, 72 spindles a side = 6048 spls.
- 12 Cop Machines, 54 spindles a side, 4½" Pitch.

Warping Mills and Reels.

Yarn Warehouse Accommodation.

The chapter upon Boilers and Engines gives the information as to coals, water for steam, and horse power required to drive the above; and also shows what part of that H.P. is required to drive each department, and the loss of horse power absorbed by engines, shafting, and pulleys by friction.

Before commencing the description of the several departments and the machinery, the following remarks may not be out of place at the beginning as descriptive of the general arrangements in connection with a Jute Mill.

Punctuality, cleanliness, and organization are the leading points to be kept in mind in the daily routine of a Jute Mill, and the more experience one has of jute spinning the more evident will these points become, as without them, there will not be quantity, quality, or steadiness in the daily output; and these three points are necessary in every department. It is from the study and application of these three points that good results will be obtained, rather than from an undue speed put upon the machinery.

As all the modern mills are built on the shed principle, and with no partition between the departments, every precaution should

be taken against fire -fires occurring on many occasions, the cause of which cannot be very easily explained. Much may be done to localize these small fires by having the departments connected to the mechanics' shop by electric wires, the alarm being sent to the mechanics when a fire occurs, and assistance is then immediately at hand. In most modern mills this plan is now generally adopted, small hose pipes being kept hanging up at various parts of the mill ready for instant action, and these small pipes with spray nozzles will be generally found, if well and properly handled, quite enough for the usual small fires which often occur, particularly in the preparing, spinning, and cop winding departments. organized fire brigade, with the necessary equipment, should always form part of the working arrangements of a Jute Mill, and the equipment should be periodically tried and thoroughly examined to see that all the tools are in good order and in their proper place, so that they can be got at once into action in the event of any emergency

The sanitary arrangements should also have very special attention, and a plan of all the drains should be kept, so that in the event of anything going wrong the lines of drains can at once be traced and repairs made without loss of time and inconvenience to the working arrangements.

Jute spinning, like many other things, cannot be learned from a book, but the book may be helpful in a way. Spinning can only be learned by steady and persevering hard work and experience.


In every mill many arrangements and adaptations of the machinery have to be made to suit the requirements of the particular branch of the trade in which the mill may happen to be engaged. These arrangements I do not endeavour to describe, as they form no part of the purpose of this book. To describe in a general way the working of the machines, and the method followed in producing yarns suitable for hessian and sacking cloths, is the purpose of this book—with what success I have accomplished my task must be left for the reader to judge. With the above general explanation, I will now describe the various steps in the different departments, commencing with a chapter on boilers and engines.

THE BOILERS AND ENGINES.

THE BOILERS—The Boilers most commonly in use in Jute Mills are what are usually called Lancashire Boilers, and the ordinary size in use are 30' × 7', with two flues running right through. Sometimes the flues are what are termed duplex—that is, two flues which run into one at the back end of the firebox. Four boilers are necessary to produce steam for the machinery shown in the plan. The amount of coals and steam required for the work to be done are given in this chapter. The boilers may either be fired by hand or by a furnacestoking apparatus. Machine firing is, although slowly being adorted, likely to become in a spinning mill the recognised method of firing boilers, as there is more regularity in the pressure of steam and the absence of smoke or dirt. Between the boilers and the chimney is usually placed a series of pipes termed an economiser; through these pipes is passed the feed water on its way to the boilers, and the waste gases are thereby utilised to increase the temperature of the feed water. Eighty pipes per boiler will increase the temperature of the feed water from 120° to 220/230°, if there is a fair draught. say 10ths of a column of water in a gauge placed in the flue at back of boilers and in front of the economiser. If machine firing is the plan adopted, the coals are thrown into a large box or hopper, in front of the boilers, and the coals fall through an aperture in the apparatus, and are pushed into the furnace by rams worked by eccentrics or cams. The furnace bars moving at the same time, the coals are carried at the speed required into the furnace. A great many stokers of different construction are now at work, each having their own so-called special advantages. An illustration of a stoker by T. & T. Vicars is given. . When working with furnace stoking apparatus it does not tend to economy to force the consumption of coal, as it leads to unnecessary waste of fuel, but you can consume from 21/22 tons of coal in a working week of 56 hours without overdriving the apparatus, and if a fair quality of Scotch coal is used the waste will not be more than $4/5^{\circ}/_{\circ}$. This stoker has been a long time before the public. The illustration is given here to show the principle upon which the machine works. It is not necessary to comment here upon its comparative merits with other furnace apparatus at present in use.

VICARS' NEW & IMPROVED PATENT MECHANICAL STOKER


SELF-CLINKERING SMOKELESS FURNACE.

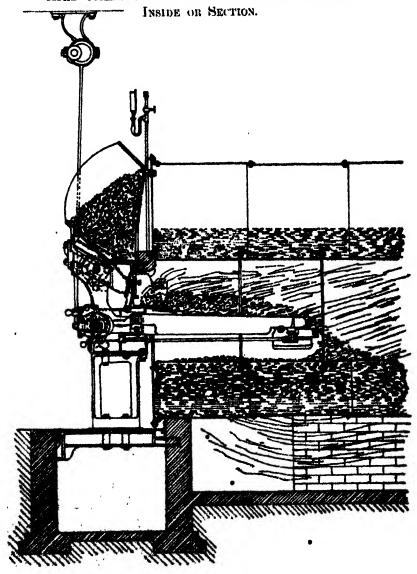

The boilers should be cleaned internally, if the water is of a fair quality, three times a year, and the flues once a year, and the brickwork examined carefully after the annual cleaning is done. The economiser should be "blown through" once a day, and the "sootchamber" and side flues cleaned out three times a year. If the water is of a fair quality, the pipes will not require to be cleaned internally more than once in ten years.


To get the full benefit of the advantages of the economiser, the boilers should be continually taking water. If the feed valves are not kept open continuously, many of the advantages of the economiser are lost. Care should also be taken to notice that the pressure upon feed water should not be more than 10 lbs. per square inch above the pressure to be carried into the boilers. If more pressure is used, it causes quite an unnecessary strain upon the feed pipes.

SECTION OF FIRE BOX OF BOILERS.

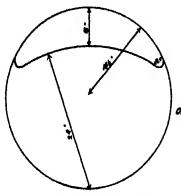

TO FIND THE AREA OF BRIDGE IN 39 INCRES

TO FIND THE AREA




RULE IN MOLESWORTH

200

The following is a sectional elevation to show the form of the boiler flues, and the other diagram is a plan showing position of boilers and economisers, with arrangement of flues and dampers between boiler and chimney.

A boiler 30 × 7 contains 3500 gals of water at a temperature of 60° Economiser 320 pipes contain 2000 gallous of water at 60


OUTLINE SHEWING AREA OF FLUES

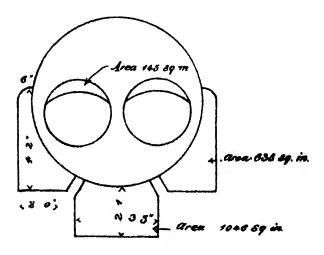

The centre flue is about three feet wide and two feet deep, and the side flues about two feet wide at the bottom, and at the closing-in (which is about three-fourths of a circle) about nine inches wide.

Each boiler has two dampers, which are hung and can be worked independently of each other. When the fires are at rest during the menl hours or at night, these dampers are always shut as close as possible consistent with not sending the smoke out at the furnace doors. When the furnaces are in full operation these dampers are always full open; if less draught is required, it is not to be got by closing these dampers, but by closing the damper in the main flue as shown further on. There are two main flues—one goes direct to the chimney, the other is the economiser flue through which the smeke passes to the chimney if the economiser is in operation, which it always is, unless on very rare occasions and for special purposes.

This outline will show the position of the dampers in the main flues.

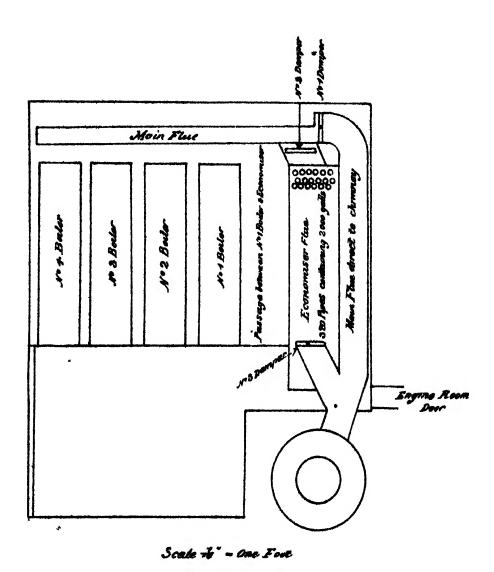

The economiser has 320 pipes 4 inches bore, made up in 40 headers of 8 tubes each. The height of chimney is 160 feet

No. 1 damper is on a pivot, and allows the smoke to go direct to the chimney, but is always kept shut when the economiser is working. No. 2 damper is hung on a chain from a pulley, and is opened by pulling it up; it allows the smoke to pass into the economiser and is always full up from 4 a.m. to 5.50 p.m. No. 3 damper is on a pivot, and is always called the round damper; when the economiser is working the draught is regulated by the opening or closing of this damper. Always use No. 3 damper to lessen or increase the draught, never use No. 2.

No. 1 Damper is $8' \times 4'$ with circular top. No. 2 , $8' \times 4'$ with square top. No. 3 , $8' \times 4'$ with circular top.

THE ENGINES.—Much of the success in a spinning mill depends upon the steadiness of the drive, and this can only be attained by having a sufficient margin of power to drive the machinery. Without this margin of power there will be endless trouble and annoyance and continual risk of engine break-down, with all the usual attendant loss of time and money.

Until very lately the form of engines most commonly made for driving Jute Mills was of the type known as compound horizontal, sometimes two cylinders placed tandem, and sometimes two cylinders placed side by side. If the engines were in pairs then the tandem engine would have two pistons on each rod, the low pressure being usually next the connecting rod; if the engine had two cylinders placed side by side, the high pressure would be connected to the one crank, and the low pressure to the other crank. In both types of engines the cranks are usually set at right angles. Corliss type of valves on both cylinders will give the best working results.

The diagrams given here to illustrate the power required to drive the machinery upon the plan are of the compound tandem type, and the date given will be found useful for reference in regard to the horse power required to drive jute machinery.

Triple expansion engines of the marine type are now being introduced, but they have not been long enough in use to be able to compare them with the former types of engines. There is much difference of opinion as to the advantages of triple expansion engines, with high speed and high boiler pressure (say) of 140/150 lbs., over compound

engines of moderate speed and boiler pressure of 75/80 lbs. per square inch for driving jute mill machinery. The point will be settled by-and-by, as most other things are, by the result of experience, and the comparison of their performance from a commercial point of view.

It will greatly add to the smooth working of the engines and avoid risk of break-down if the "heating up" arrangements are as complete as possible. If the engines cannot drive the full working load at once on Monday morning at six o'clock, the "heating-up" has not been sufficiently attended to. If the heating has been properly done there should be not more than an increase of 7°/. on the usual total load, and that increase should have disappeared during the first 30 minutes after the engines have been working. Engines driving the load shown on the diagrams will require the heating steam on them not less than five hours before six o'clock on Monday morning in the winter time, and the half of that in the summer time, and the expense of the steam used for this purpose will be repaid by the work done in the mill, owing to the engine going the usual speed, without risk of break-down.

ABSTRACT OF POWER.

Engine Friction		- 70 H.P.	165.5 Friction.
Mill "	•	95.5 H.P.	, roo o reignour
Batching and I	reparing,	150 H.P.	
Spinning,		474.5 H.P.	674.5 Effective
Cop Winding.		50 H.P.	0140130000
Reeling,		(00	

840-0

Total Load.

840 H.P.

Friction Load,

165.5 H.P.

Percentage of Power absorbed by Friction = $\frac{190 \times 165.5}{840} = 19.7^{\circ}/_{c}$

Coal consumed and water evaporated at 75 lb. pressure in two weeks.

Working hours 56 per week = 112 hours.

Total Revolutions of Engine Index = 307,222.

Working hours Engine Time $\frac{307222}{45\times00} = 113.8$ hours,

Total Coals in two weeks = 102.9 tons = 230,496 lbs.

Total Water through Meter in two weeks = 172,043 gallons = 1,720,430 lbs.

Water evaporated per lb. of Coal at 75 lbs. pressure = $\frac{1.720,430}{230,496} = 7.46$ lbs.

Coal per II.P. per hour = $\frac{250,496}{118-8\pi840} = 2.41$ lbs.

Water per H.P. per hour = $24.1 \times 7.46 = 17.97$ lbs.

The pond capacity for the horse power required for the machinery shown in plan will be—

No. 1 pond from which the water is taken to the engines will require 500,000 gallous.

No. 2 pond into which the water is discharged from the engines is called the cooling pond, and should have a capacity of about 250,000 gallons, and is fitted with troughs about 3½ feet broad and 4"/5" deep, along which the water is allowed to run about 250 yards before falling into the pond. No special cooler will be necessary.

Engine Diagrams.—The method adopted for their calculation is as follows:—The high pressure cylinder diagrams in this case have been taken with a 3-th spring, and the low pressure cylinder with a 1-th, therefore the scale of diagrams are termed 4-th and 4-th.

1.—The High Pressure Diagram.

Divide it into ten parts as shown on the illustration, and measure at the centre of these spaces with the scale of the diagram—that is a state in this case; add together these ten measurements and divide by ten for the average pressure in cylinder, first at the one end, and repeat the working for the other end; then with the average pressure work out the formula for the horse power in each cylinder.

Formula.

Area of cylinder × piston speed per minute × average pressure.

33,000

572.5x48.0\32.7 = 255.4 I.H.P.

^{672'5 x 460 x} = 7.8 Constant Number.

 $\frac{1385\cdot4 \times 450 \times}{33,000} = 156\cdot2$ J.H.P.

 $\frac{1385^{\circ}4 \times 4^{\circ}0 \times}{33,000} = 18.89$ Constant Number.

For calculating the diagrams of the engines it is usual to work out the constant number for each cylinder; this constant number multiplied by the average pressure as measured from the diagram equals the indicated horse power, thus:—

Average pressure \times constant=I.H.P.

In all the calculations required in the machinery throughout the mill, work with the constant number as much as possible and save time.

The friction diagrams are calculated from a piston speed of 395 feet per minute.

Particulars of engines from which diagrams were taken to illustrate the horse powerrequired to drive the machinery upon the plan:

Pair of Compound Horizontal Engines, cylinders placed tandem, high pressure cylinders 27" diameter = area 57.52 sq. in.; low pressure cylinders 42" diameter = area 1385.4 sq. in.; crank shaft 45 revolutions per minute = 450 feet—speed of piston per minute. High and low pressure cylinders both fitted with Corliss valves.


TOTAL LOAD DIAGRAMS.

INDICATION OF COMPOUND TANDEM ENGINES.

Cyls. 27" and 42" × 5' 0" Stroke. Boiler Pressure 62 lbs. 45 revs. per min.

Temperature of Injection - 82°.
Temperature of Hot Well - 121°.


No. 1 ENGINE.

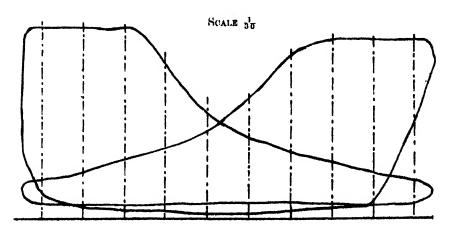

Mean Pressure—Front, 33:7 lbs. Mean Pressure—Back, 31:7 lbs.

Average Mean Pressure—32 7 lbs. per sq. inch.

L.H.P.—255:4.

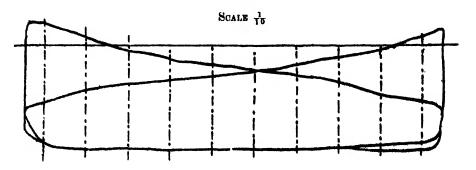

Mean Pressure—Front, 8.4 Mean Pressure—Back, 8.15 lbs.

Average Mean Pressure—8.27 lbs. per sq. inch.

1.H.P.—156.2.

Total I.H.P. No. 1 Engine-411-6.

TOTAL LOAD DIAGRAMS.

INDICATION OF COMPOUND TANDEM ENGINES.


Cyls. 27" and 42" x 5' 0" Stroke. Boiler Pressure 62 lbs. 45 revs. per min.

Temperature of Injection


82°.

Temperature of Hot Well

121°.

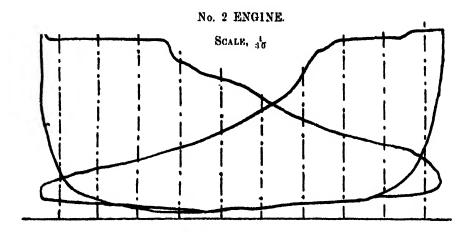

Mean Pressure-Front, 33:6 lbs. Mean Pressure-Back, 28:35 lbs. Average Mean Pressure-31:07 lbs. per sq. inch. LH.P.-242.4.

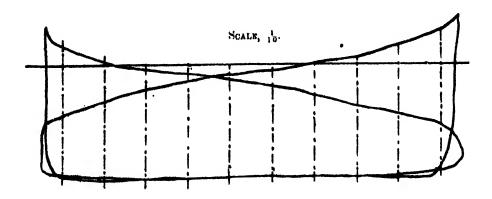

Mean Pressure-Front, 9.2 lbs. • Mean Pressure-Back, 10.5 lbs. Average Mean Pressure-9.85 lbs. per sq. inch. I.H.P .-- 186.0.

Total I.H.P.—No. 2 Engine—428.4. Total Indicated Horse Power—840

FRICTION DIAGRAMS

INDICATION OF COMPOUND TANDEM ENGINES.

Cyls. 27" and 42" x 5' 0" Stroke. Boiler Pressure 62 lbs. 391 revs, per min.

Temperature of Injection


82°,

Temperature of Hot Well

121°.

No. 1 ENGINE.

SCALE, To.




Mean Pressure - Front, 5.8 lbs.

Mean Pressure-Back, 7.874 lbs.

Average Mean Pressure-6.58 lbs. per sq. in.

I.H.P.-45.7.

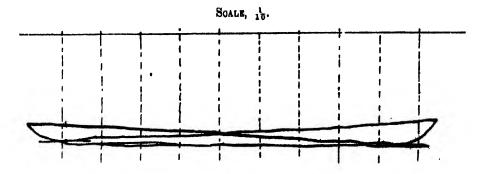

Mean Pressure—Front, 1.3 lbs.

Mean Pressure—Back, 1.37 lba.

Average Mean Pressure-1.185 lbs. per sq. in.

I.H.P.—19·8.

Total I.H.P. No 1 Engine—65.5. Total Indicated Horse Power—165.5.

Total Load Indication—840 I.H.P.

Percentage of Power Absorbed by Friction = 190 x 165-5 = 197%.

FRICTION DIAGRAMS.

INDICATION OF COMPOUND TANDEM ENGINES.

Cyls. 27" and 42" × 5'0" Stroke. Boiler Pressure 62 lb. 394 revs per min.

Temperature of Injection,


82°.

Temperature of Hot Well,

121*.

No. 2 ENGINE.

SCALE 25




Mean Pressure—Front, 8.0 Lbs.

Mean Pressure-Back, 6:4 Lbs.

Average Mean Pressure-7.2 Lbs. per Sq. In.

I.H.P.-50·1

SCALE 10

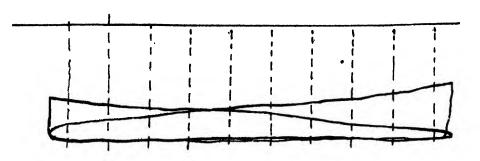

Mean Pressure-Front, 2.5 Lbs.

Mean Pressure-Back, 3.5 Lbs.

Average Mean Pressure-- 3.0 Lbs. per Sq. In.

I.H.P.-49.9 •

Total I.H.P. No. 2 Engine—100.0. Total Indicated Horse Power—165.5.

Total Load Indication—840 I.H.P.

Percentage of Power Absorbed by Friction - 100x166.5 = 19.7°/

SPEEDS OF SHAFTING.

To find the speeds of the shafting:-

Crank shaft 45 revolutions per minute. Wheel on crank shaft 130 cogs, $24\frac{1}{2}$ " broad. Pinion ,, main ,, 57 teeth, $24\frac{1}{2}$ " broad. $\frac{45 \times 130}{57} = 102.6$ speed of main shaft.

On the plan it will be observed, for reasons given in the introduction, I have marked the speeds.

Orank shaft 45 revolutions per minute.

Example.—If the main shaft is 100 revolutions per minute, what will be speed of the spinning driving shaft?

Bevel cog wheel on main shaft 66 cogs. ,, teeth pinion on spinning shaft 30 teeth. $100 \times \frac{66}{30} = 220$ revolutions per minute.

The above is given by way of example to calculate the speed of the shafting.

80"dia. × 14" broad Softener Drums, 28" .. × 14" Breaker and Finisher Drums, ... 21",, × 8" 1st Drawing Circular 1st Drawing Drums-Push Bar, 16" .. × 8" 16" ,, × 8" Spiral, ... 2nd 24" " × 6" Roving Drums, Spinning Drums-Weft Frames, 32" .. × 14" Warp 36" .. × 14" "

JUTE BATCHING.

This is the department in which we commence to handle the material for the first time. The bales of jute are wheeled in from the jute warehouse, which will be seen from a reference to the ground plan to adjoin the batching house, and communicates with it by double iron doors. We will suppose there are six bales in the batch. These bales are set up on their ends three on either side of the feeding end of the jute opener, the ropes by which the bale has been bound together are cut from top to bottom by an axe, the layers of jute are then laid upon the feeding table of the opener, and passed through between the rollers -this softens to a certain extent the layers of jute, and the streaks of jute of which the bale has been made up fall readily apart. These streaks or heads are laid on a low stool or platform about 8 feet long and 11 feet broad; the batchers, who are standing in front of this platform, break up the large streaks or heads into streaks of about two pounds each, and lay them upon another platform of the same description, from which they are lifted by the workers who are employed feeding the softener. While the batchers are employed streaking up the jute they may also throw to one side any streak that looks too dark or retty for the quality wanted from the batch laid down, according to the instructions given them by the overseer in charge of the department, the jute which has been rejected being used in another batch of a lower quality as the case may be. The jute passes through a series of fluted rollers pressed together by springs of either spiral or volute form, and while passing through these rollers a stream of oil and water is running down from pipes upon the fibres. The jute being softened and damped during this operation, is delivered at the other end of the machine, and is taken hold of by the workers, generally termed "twisters," whose work it is to twist the streak and lay it upon a waggon. They build it upon one side of this waggon or jute barrow, as it is usually termed, to the height of 18 inches. The barrow is then turned round, and they build another 18 inches, and so on alternately until the barrow is filled. While it is in process of filling, it should be tramped 3 to 4 times; this presses the jute together, and the barrow is then put aside, and should stand from 18 to 24 hours before being taken to the next process. While it is standing, the oil and water that has been put upon it is percolating through the fibre and slackening the root and dirt, and making it fit for the carding process which follows. This is what is termed machine batching, and is the form of batching that is most followed in Dundee mills, and it is claimed for this system that it has all the advantages of hand batching, and is accomplished with less trouble and expense. If hand batching is adopted, the jute is put through the softener without oil or water being put upon it; the jute is then put down in a stall in layers, and the oil and water poured upon it from a pitcher, and is allowed to lie as before, and it then has to be carried or lifted into a barrow, and taken to the next process.

Very much of the success of the working of the material in the other departments will depend upon the care and attention given to the material when it is being batched. In the preparing department, if the oil and water has not been evenly put on, and the jute has not been well spread in the softening process, lapping of the jute round the pressing rollers of the different machines will occur, causing needless waste and loss of time, and consequently loss of produc-This can always be avoided if sufficient care and attention is given to the material when being batched. The batching house should be kept thoroughly clean, no oil except what is in the tanks above the softener should be kept in the mill, the bulk of the oil should be kept outside and run down through pipes to the softeners as required, and there should be no drain in this department leading from the softeners to the common sewer; a drain here often leads to much loss and carelessness. The softeners should be fitted with trays about 4" deep laid in below the rollers, so that any oil passing through the rollers towards the floor may be caught in them and utilized. There is no valid reason why the batching house should not be as clean as any other department in the mill. Apparatus of different kinds have been fitted to softeners to regulate the fall of the oil upon the jute according to the thickness of the streaks, but I doubt if they are of much practical utility. Adjust the oil and water pipes to deliver at the rate required, and if the softener is fed with fair regularity the end will be attained suitable for all practical purposes without a lot of mechanical nick-nacks, for which there is no time in any department of an ordinary jute mill.

Note.—The water pipe is next the feeding end of softener, and the silin pipe from 18" to 20" forward from the water pipe.

Mineral oil of various qualities is now mostly used in batching, whale oil being very little used. The mineral, however, should be of good quality. As to the quantity required per bale, the quality of the jute and oil being used must be taken into account, and this to a great extent must be determined by one's experience of the yarn wanted. Stated in a general way, a gallon to a gallon and a quarter will be used to a bale of 400 lbs., but this is very often determined by a knowledge on the spot of what is wanted, and this quantity may often be much less and often sometimes more.

As to the quantity of jute put through a softener, this will to a certain extent be determined by the speed of the machine. The speed of the softener given will, with regular feeding, deliver 350 bales per week of 56 hours, and this will allow the streaks to be made about two pounds each, and they should never exceed this if the breaker feeder is to have a chance of making good work when spreading the jute upon the feeding table. One jute opener will pass the quantity (700 bales) in 56 hours at the speed given for this machine.

The batch put down for ordinary hessian warps should be composed of six bales—it is better not to have too many bales in the batch, as the jute will have a better chance to be well mixed, and the different characteristics of the jute in each bale will be better spread through the yarn.

4 bales or 3 of the batch, second numbers of first marks.
2 ... \(\psi\) third

The jute for warps should be selected as free from dirt and root as possible, and uniformity of colour is desirable to avoid the chance of striping the yarn. If third numbers are being used, they will require to be of early shipment to insure the necessary colour and quality; but this batch will require care and attention, and sometimes a little judicious picking to get rid of any little root will be necessary. The weft for a good standard hessian should be made out of the same batch. My remarks as to the batch given above refer to 11 por. 13 shots 10½ oz. and heavier. The lighter weights of hessians may be made of a lower quality of weft, the batch for which would be composed entirely of good third numbers.

In the selection of these six bales, it will be found advisable to have, at least as far as possible, a combination of strength, colour, and cleanliness; and to be able to do this, can only be learned from daily study and careful attention to the different parcels of jute as they come before you, and even with all this, and a long experience

in addition, I am afraid more mistakes are often made in this department—unwittingly, of course,—than in any other department in the mill.

In reference to the amount of damp to be put on, from 15 per cent. to 20 per cent. may be given as sufficient, stated in a general way, but this also has, in a great measure, to be determined by the quality of the jute and the state of the atmosphere. The temperature of a mill on the shed principle varies very much with the temperature of the atmosphere, and this reacts upon the material, in process; and although 15 per cent. to 20 per cent. may seem to be a large quantity to put in at the first process, if the jute is allowed to lie and become properly moistened, this moisture or damp will pass away in the course of being made into yarn. To put an undue amount of water into the first process is of no practical benefit in the working of the material. The loss of time and waste made if the material is too damp is out of all proportion to any advantage that can otherwise be gained. If proper attention is given to the batching and damping process, the breakers, finishers, drawings, and rovings will work from morning to night without lapping; if they do not, the damping is in all probability being overdone.

The jute opener of which we give an illustration is Messrs Butchart & Skinner's patent, and does its work better than any other machine I have seen, and is now very generally adopted by the trade. As the jute passes through, the knobs on the rollers are pressed into the 'heads' of the jute, making them soft, pliable, and easily handled.

Speed of Jute Opener as follows:-

Driving Shaft 160 revolutions per minute.

Drum on Shaft 16" diameter.

Pulley on Opener 20" "

 $160 \times \frac{1}{2} = 118$ revolutions of jute opener pulleys per minute.

 $128 \times \frac{30}{64} \times \frac{13}{68} = 7.8$ revolutions of rollers per minute.

The jute softener of which we give an illustration is made by Messrs. Urquhart, Lindsay, & Co., Ltd., and also by Messrs Thomson, Son, & Co. They are for all practical purposes the same machines.

· 49.

Speed and Geariny of Mosers Urquhart, Lindsay & Co., Ltd's Machine is as follows:-

Driving Shaft 160 revolutions per minute.

Drum on Shaft 30" diameter.

Pulleys on Softener 36" diameter.

 $\frac{100 \times 80}{36} = 133.3$ revolutions per minute—Speed of Pulley Shaft.

Cross Shaft Driving Pinion 18 teeth.

Side .. Wheel 40 teeth.

Shaft Bevel Pinion 16 teeth.

Roller " Wheel 25 teeth.

 $\frac{133.8 \times 18 \times 16}{40 \times 25} = 38.4 \text{ revolutions of rollers per minute.}$

Messrs Thomson, Son, & Co.'s Machine.

Driving Shaft 160 revolutions per minute.

Drum on Shaft 30" diameter.

Pulleys on Softener 36" diameter.

 $\frac{160 \times 30}{98}$ = 133.3 revolutions per minute.—Speed of Pulley Shatt.

Cross Shaft Driving Pinion 19 teeth.


Side .. Wheel 39 teeth.


Shaft Bevel Pinion 16 teeth.

Roller , Wheel 25 teeth.


 $\frac{1883 \times 19 \times 10}{59 \times 25} = 41.6 \text{ revolutions of rollers per minute.}$

BUTCHART'S PATENT JUTE CRUSHER,




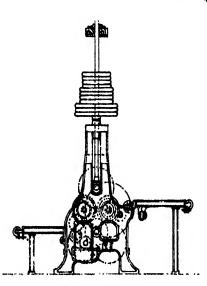


END ELEVATION

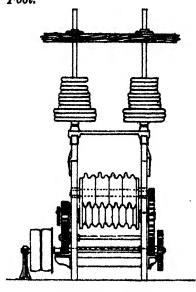


FRONT ELEVATION

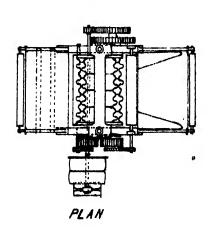


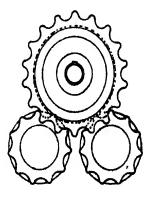

SECTION OF ROLLERS


SCALE 34"—ONE FOOT

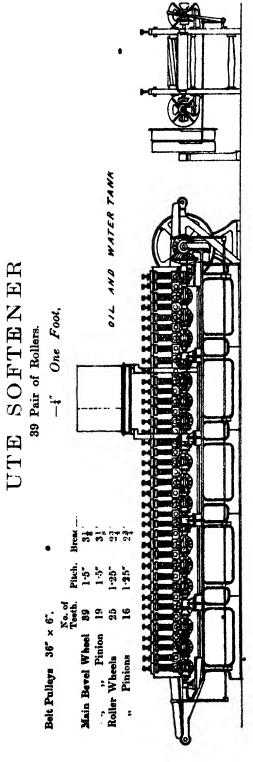

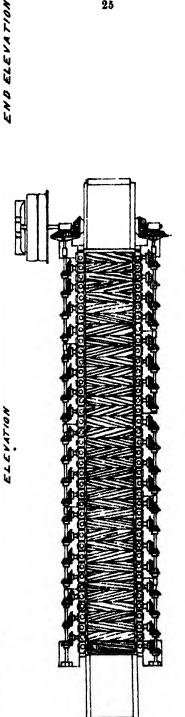

JUTE SOFTENER ROLLERS

Scale - $\frac{1}{4}$ " = One Foot.

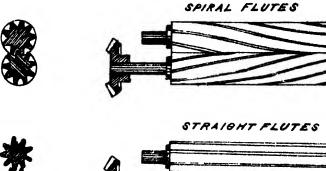







JUTE BARROW

USED IN BATCHING.


 $Scale - \frac{1}{4}$ " = One Foot.

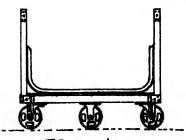

Elovation

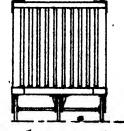

End Elevation



PLAN.

This barrow will contain \$\iint_12\$

JUTE PREPARING.

The process after the jute has been batched and been lying for the necessary time in the jute barrow is termed the preparing. In the preparing department, stated very briefly, the jute is converted from the "streak" into rove yarn in preparation for the spinning process. This conversion is effected by the use of five different machines, sometimes six are used, but not often, at least for ordinary hessian yarns. These machines are named.—

1st. The Jute Breaker.

2nd. " Finisher.

3rd. , 1st Drawing Frame.

4th. , 2nd

5th. , Roving Frame.

During its passage through the breaker and finisher the jute is going through what is termed the carding process—that is, it is being cut up into a sort of tow, and during the process it is being drawn to a certain extent at the same time. In the drawings a number of ends or slivers, as they are usually called, are put together and run through the drawing into one at the front, and it is being drawn out still smaller and finer during the process. In the roving frame each end is put through the roving by itself, and when passing through the roving is drawn finer still, and delivered at the front to the weight required for the yarn into which it is to be spun. While it is being delivered at the front of the roving, as it runs on to the bobbin, a certain amount of twist is put on to keep it together while it is being unwound during the spinning process. To give in detail to a certain extent a description of the work done by each of these machines, and also at the same time to show the methods of their arrangement and the calculations of the different speeds involved in each of them, along with one or two arrangements to show the weight of rove produced, will be my object in this chapter.

With reference to the quantity of jute laid on the breaker feed table, two methods are adopted. The first, and I believe the most common method, is to weigh so many pounds of jute and lay it on the

feeding table of breaker during one round of a clock which is attached to the feed roller for the purpose of measurement of the jute as it is passed into the breaker; the other system is to put the jute over the breaker without weighing it, and take the cans to a machine called a balling machine. So many slivers from the breaker are made into a ball or lap, and these laps are made a cortain weight for a certain length, and this determines the weight of the slivers delivered from the finisher in a certain number of yards. I give an illustration of a balling machine, and particulars of arrangements, but all the calculations in this chapter are based upon the weight of the "dollop"that is the weight laid upon the feeding table of breaker for one round of the clock provided for that purpose. It will now be understood that all the measurement of the jute in course of being made into rove is done at the commencement, and in practice there is not found any necessity for more weighing of the material in the process of making rove.

Jute breaker cards and finishing cards are very much of the same construction; they both consist of a cylinder, usually 6 ft long and 4 ft. diam., round which are placed rollers, called first, feeding roller, then stripper roller, worker roller, doffer roller, drawing roller and delivering roller. All these rollers revolve in the same direction as* the cylinder; the feed roller takes the jute into the cylinder: the jute passing between the feed roller and shell as it is fed in, is retarded by the pins of feed rollers, and as it passes through the shell. it is carded, or combed, by the cylinder. The workers, although revolving in the same direction as the cylinder, from the angle at which the worker pins are set, cards, or combs, the fibre still more. The strippers, running in the same direction as the cylinder, and from the angle at which their pins are set, do not card the fibre, but clean the fibre which is on the worker, and pass it on to the cylinder again. After it passes the worker and stripper, it is taken off the cylinder by the doffer, and from the doffer is carried through between the drawing and pressing roller, which are in front of doffer, and passing down a conductor, is passed again through a delivering roller into the can.

In the case of a down-striker breaker, the fibre passes over the top of doffer on to the drawing roller; and in a full circular finisher, the fibre is passed to the drawing roller from the under side of the doffer. A reference to the "set" of the pins in each case will enable the reader to follow this explanation. Much diver-

*Note.—That is, the periphery of rollers and cylinder travel in the same direction at points of contact.

sity of opinion exists as to the best speeds for the cylinders and the different rollers to be driven. It is well known that breaker and finisher cylinders are being run at a speed which varies from 160 to 200 revolutions per minute. This diversity of opinion as to speed proves, I think, very conclusively that there must be a very wide margin, within which it is possible to work; and probably the best speed for breaker and finisher cylinders, working jute for bessian warps and wefts, will be found somewhere between these extremes; and, I believe, these speeds will be found by taking the breaker cylinder at 190 revolutions per minute, and the finisher cylinder at 180 revolutions per minute; and although, as will be seen, I take these speeds for some of the following calculations, I also give some other calculations with other speeds, which have also been found to work on the whole equally as well. The quality of the jute in process must always be taken into consideration in determining the proper speed, and in practice it is not found always convenient to be altering the speed of the breaker or finisher cylinders. It is not a difficult matter to alter the position of the shell to the cylinder, and I am convinced from experience that it is often found to be advantageous to shift the position of the shell to the cylinder, either by putting it closer or by taking it away from the cylinder when necessary, owing to the hardness or softness of the jute that is being used.

With reference to the quantity that may be put over breaker and finisher in 10 hours there is also some diversity of opinion. This, however, in practice, will, to a considerable extent, be found to be regulated by the sizes that are being spun; and if these sizes are taken -say, from 7 to 12 lbs. in a general average way over a mill, as shown in the plan, the finisher will do about 80/35 cwt, per day of 10 hours. I am, however, well aware that there are many finishers doing less, but I also know that many finishers are doing a great deal more. passing, I may say that the quantity named-30/35 cwt.-can easily be got over a finisher, with a dollop of moderate weight at the breakers -- say 30/33 lbs. -- in a single round of the clock--on a single doffer breaker-and for a double doffer breaker, with two deliveries, with rollers 16" diameter, of 40/44 lbs., in one round of clock. And here let me remark, the single delivery breaker and finisher should not be driven faster than what is actually necessary to provide sliver to keep the system fully in motion. This is one of the great points in regard to the speed of the cards and drawings. Their speed should be so adjusted that there will be no long stoppages, which only lead to general interruption of the organization of the department. The cards and breakers should also be closed in with sheet iron, doors being made to allow of the dust being swept out as required. If they are closed in thoroughly, it will in a great measure prevent accident; and if a card takes fire, prevent it spreading to the next machine.

As shown in the plan one breaker supplies sliver for two finishers, but if a large production is wanted there is room for 9 breakers to 14 finishers.

As to the position of the breakers and finishers, in the plan given it is intended that the breaker feeding table is next the batching house, and the breaker delivering towards the back of finisher. The cans from the front of breaker will then be taken to the front of finisher by boys usually called "can trailers." These cans—say, 8 or 10 at a time—being fed into the finisher over the feeding cloth, as in the breaker, and delivered at the one side of finisher in front, it will be delivered at the right or left side, according as the finisher is right or left hand, as it is usually termed.

The cylinder lagging, or staves as they are more generally called in this quarter, require periodically to be refilled with new pins. In the case of the breaker this will have to be done twice a year.

The general method is to remove the one half of cylinder cover once every three months, and refill them. Although sometimes the fourth part of the cover is taken off every six weeks and refilled, this method, if adopted, will, of course, ensure a more general average sharpness in the pins of the cylinder cover.

The finisher staves will require to be renewed once in a year, and this is done by removing the half each six months and refilling them. The workers and strippers, &c, will run on an average, say, the workers 7 years, and the strippers 5 years.

One other point may be mentioned, and that is all the rollers except drawing roller, pressing roller, and delivering roller are covered with wood, and in course of wear they are inclined to go off the 'truth'—this causes trouble when setting the card, as it prevents the rollers from being equally set all the breadth of the card. When they are discovered to be off the truth, the staves should be taken off and the roller put into a turning lathe and made true right across the roller. All the rollers are set to a certain gauge from the cylinder, and also to a certain gauge from one another. Farther on in this chapter a table to which they should be set is given, but in practice it may be sometimes necessary to vary the setting a little in either direction.

With reference to the question as to whether double doffer breakers and finishers are better than single doffer breakers and finishers there is some difference of opinion. Certainly there are not nearly so many double doffer cards working as single doffers, and I don't think they are necessary for producing hessian warps and wefts if you have plenty

of single doffer cards; but I believe from my experience that you get more off a double doffer breaker than a single doffer, particularly if you have to work a certain quality of jute, and find it necessary to do this with a fairly heavy dollop. Into the merits of this question it is not necessary to enter here. The student will not find this point trouble him for a considerable time, and by which time he will, both from theory and practice, doubtless be in a position to think it out for himself.

For the changing of the speeds in connection with the working of the breakers and finishers there are four pinions usually called change pinions. These are-first-the pinion on the end of the cylinder arbor, usually called the cylinder pinion; this pinion increases or diminishes the speed of every roller on the breaker or finisher except the stripping rollers, which are driven by a belt passing over a pulley on the opposite end of cylinder arbor, and on the inside of the driving pulleys; the second change pinion is the pinion which lengthens or shortens the draft between the feeding roller and the drawing roller, by the term draft is meant the difference between the surface velocity of the feed roller and drawing roller, the third change pinion is the pinion which increases or diminishes the speed of the workers in their relation to the surface speed of the cylinder; the fourth changes the relative speed between the drawing roller and the doffer, which lengthens or shortens the draft between doffer and drawing roller, as it is usually termed. The position of all these change pinions are marked on the illustrations of breaker and finisher, and also on all the calculations pertaining to these four points.

When you increase the speed of the workers you reduce the amount of carding being done to the fibre, as there is being less resistance given to the action of the cylinder upon the fibre between the cylinder and worker pins; and when you decrease the speed of the worker the reverse action takes place, and of course more carding is done.* A reference to the manner in which the pins are set round the cylinder and round the worker will explain this to the reader. The student should also study very carefully how the pins are set in all the different rollers, so that he can take them out and put them in, understanding very thoroughly the reason in his own mind how the "sets" upon the pins are placed in the different rollers, and the cause for them being so set.

A table of all the diameters of cylinders and the other rollers over the wood over the staves and over the pins is given, and will be found

^{*}Norz.—The reader will observe that if the surface velocity of cylinder and worker were equal there would be no carding action.

of considerable use as a reference. All the surface speeds referred to in the calculations are taken from the circumference at the centres of pins.

Sufficient explanation of the machines has now been given, and we may proceed to show the calculations for surface speed and drafts.

SINGLE DOFFER BREAKER.

First, let us try and explain the way to take the draft of a breaker card, and we will try and make it as simple as possible, and we will illustrate this by putting down the letters in their order for a formula, as follows:—

In the above---

A = Diameter of Drawing roller.

B = Drawing roller wheel teeth.

C = Wheel of double intermediate in gear with cylinder pinion.

D = Change or draft pinion on nave of above.

E = Wheel of double intermediate in gear with draft pinion.

F = Pinion on nave of double intermediate in gear with wheel on end of feed roller.

G = Wheel on end of feed roller.

H = Diameter of feed roller.

TLus-

$$\begin{array}{l} \frac{4 \times 80 \times 110 \times 110}{52 \times 26 \times 20 \times 103} - 13.32 \ \underline{draft\ between\ feed\ and\ drawing\ rollers}. \\ \frac{4 \times 80 \times 110 \times 110}{52 \times \underline{change} \times 20 \times 103} = 346.332 = Constant\ Number\ for\ draft. \\ \end{array}$$

It will be observed from above, that commencing with diameter of drawing roller, omitting the single intermediate wheels, you take all the pinions and wheels as they come, one after the other, until you arrive at the feed roller, and you finish the statement of the calculation with the diameter of feed roller. If the student proceeds on these lines, he cannot go wrong if he gives the matter a little consideration and perseverance.

Note the draft of any machine, whether breaker, finisher, drawing, or roving, is the difference between the surface speed of the first and last rollers of the machine.

Next the draft, between the doffer and drawing roller-

Then, in this case-

A = Diameter of drawing roller.

B = Pinion on end of drawing roller.

C=: Wheel of double intermediate in gear with pinion on end of drawing roller.

D = Pinion on nave of intermediate in gear with doffer wheel.

E = Doffer wheel.

F - Diameter of doffer.

Thus-

Note here that, in reference to draft between doffer and drawing roller, taking the diameter of doffer at points of pins against the diameter of drawing roller at 4" diameter, the relative speeds that have been found to work well are :- Drawing roller to rovolve at a surface speed of 100 inches for 54 to 57 inches of dofter. Of course, though the diameter of doffer at points of pins is taken, it must be borne in mind that the beard projects, perhaps, 3" to 4" from the points of doffer pins, making a diameter of perhaps 23" to 24" instead of 16" as at pin points. Even then there is a draft between the doffer and the drawing roller, but experience has shown that this difference of speed is best for the effectual clearing of the doffers, and for keeping the fibres straight. The effect I should look for with too slow a speed tor the drawing roller would be that the fibre would not be as straight as is desirable, and a more or less lumpy or cloudy appearance would be given to the fleece. On the other hand, if the roller went too fast, I should expect thin parts, or breaks, in the continuity of the fleece.

For the calculations and arrangements of worker wheels, see the specifications of breaker speeds, &c.

SINGLE DOFFER FINISHER.

Finishers, drafts, &c., are done in the same manner—thus:-

Then in this case—

A = Diameter ot drawing roller.

B = Wheel on end of drawing roller.

 $\begin{bmatrix} \mathbf{C} \\ \mathbf{D} \end{bmatrix} =$ Double Intermediate.

 $\frac{\mathbf{E}}{\mathbf{F}} = \frac{1}{2}$ Double Intermediate.

G - Wheel on end of feed roller.

H = Diameter of

Again, the draft between the doffer and drawing roller-

In this case-

A - Diameter of Drawing roller.

B = Pinion on end of drawing roller.

 $\binom{\mathbf{C}}{\mathbf{D}} =$ Double Intermediate.

E = Wheel on doffer.

F = Diameter of doffer.

Thus-

Observe that the note given in reference to draft between doffer and drawing roller applies also to the finisher card.

For the calculation and arrangement of worker wheels and speeds, see the specifications of finisher speeds, etc.

Referring to the delivery of the sliver from the drawing roller into the conductor of finisher, sometimes it is delivered in two distinct slivers, and run into one as it runs into delivering roller, and sometimes it is delivered in one sliver from the drawing roller. This is the better way, as the sliver works much better on the gills of first drawing, and there is less chance of a slack side on the sliver as it passes through the drawing, and it is delivered at the front with much more levelness and regularity than it is when made in two at the finisher.

DOUBLE DOFFER BREAKER.

Thus in this case-

A = Diameter of drawing roller.

B = Wheel on end of drawing roller.

 $\begin{cases} C \\ D \end{cases}$ = Double intermediate.

 $\left\{\begin{array}{c} E \\ F \end{array}\right\}$ = Double intermediate.

G - Wheel on end of feed roller.

H - Diameter.

Thus-

Note.—That it is the wheel on end of lower drawing roller that is taken when calculating the draft of Double Doffer Breaker.

In double doffer cards, the wheel on bottom drawing roller is 70, and on top roller 74 teeth. This gives a draw to the bottom so as to ensure the sliver from top rollers being taken up properly by the bottom ones.

Again the draft between the doffer and drawing roller-

$$\begin{array}{ccccc}
A & C & E \\
- & \times & - & \times & - \\
B & D & F
\end{array}$$

151

In this case-

24

A = Diameter of drawing roller.

B = Pinion on end of ,,

 $C = \begin{cases} D & \text{ouble intermediate.} \end{cases}$

E = Wheel on doffer.

change

pinion.

F = Diameter of doffer.

DOUBLE DOFFER FINISHER.

$$\begin{array}{ccccc} \mathbf{A} & \mathbf{C} & \mathbf{E} \\ - & \times - & \times - = \mathbf{Draft}. \\ \mathbf{B} & \mathbf{D} & \mathbf{F} \end{array}$$

Then in this case-

A = Diameter of Drawing Roller.

B = Wheel in end of ,

C

-- = Double Intermediate.

1

E = Wheel in end of feed roller.

F = Diameter

Again the Draft between Doffer and Dr awing Roller-

Then in this case-

A = Diameter of drawing roller.

B = Pinion on end of .,

 $\begin{bmatrix} \mathbf{C} \\ \mathbf{D} \end{bmatrix} =$ Double Intermediate.

E = Wheel on doffer.

$$F = Diam. of$$

- x - x -- = 2.04 draft between dofter and feed roller.

24 25 151

4 54 88 = 51.096 constant number for draft.

Note.-Top Drawing Roller Wheel 80 Teeth.

ARRANGEMENT OF SINGLE DOFFER BREAKER CLOCK.

We will now describe the method followed to produce a certain weight of rove from a certain "dollop." The word dollop is the name applied to the bundles of jute laid on in one round of the clock attached to the feed roller.

Two methods for doing so are adopted—

- 1st. The weight laid on in one round of clock, calculated from the circumference of feed roller at centre of pins.
- 2nd. The weight laid on in one round of clock, calculated from the circumference of the plaiding roller. This roller is 4° in diameter, but the thickness of the feeding cloth must be taken into account, and this makes the diameter 4½°, or 11.95 inches in circumference.

Athough the first method is preferable, the calculations of both are explained.

Taking the first method-thus:-

$$\frac{A}{B} \times \frac{C}{D}$$

In this case-

A = 3 Threaded worm on end of Feed roller, and a 3 threaded worm is equal to a pinion of 3 teeth.

B = 42 Teeth pinion in gear with worm.

C=36 ,, on nave of 42 teeth pinion.

D=36 , on arbour of clock.

Thus -

 $_{12}^{3} \times _{3}^{3} \stackrel{a}{=} \times _{1}^{1}$. And a $_{14}^{1}$ revolution of the clock is equal to one round of feed roller, and, therefore, there are 14 revolutions of feed roller in one round of clock.

Feed roller, 10½" diam., according to Messrs Fairbairn, = 32.98 inches circumference.

 $\frac{32.98 \times 14}{36}$ = 12.82 yds. in one round of the clock.

In my own experience I have always found the diameter of feed roller to be 10%, and worked out the length of clock from that diameter—thus:—

 $\frac{3}{43} \times \frac{3}{36} = \frac{1}{14}$ And, as above, 14 revolutions of feed roller for one round of clock.

102" diam. = 33.77 circumference.

 $\frac{33.77 \times 14}{36''} = 13.13 \text{ yds. in one round of clock.}$

Then the second method-

Then in this case-

ļ

A = Pinion on end of plaiding roller.

B= Wheel in gear with it.

C=Worm on other end of feed roller.

D=42 teeth pinion in gear with worm.

E=36 , on nave of 42 teeth pinion.

F=36 , on arbour of clock.


Chus-


 $\frac{46}{116} \times \frac{8}{116} \times \frac{8}{36} \times \frac{26}{36} = \frac{23}{108} = \frac{1}{36}$ Almost, therefore, $\frac{1}{36}$ of a revolution of the clock equals one round of the plaiding roller.

Plaiding roller, 41 diam. = 12.95 circumference.

 $\frac{12.95 \times 35}{36}$ = 12.6 yards in one round of the clock.

SINGLE DOFFER BREAKER CLOCK.

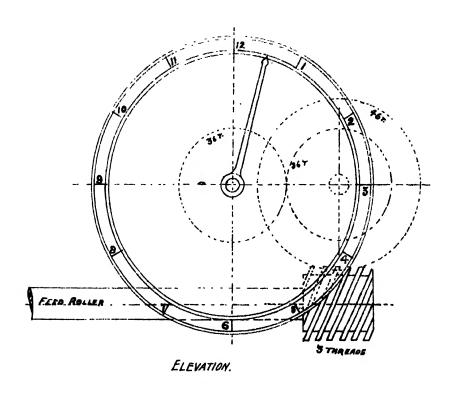

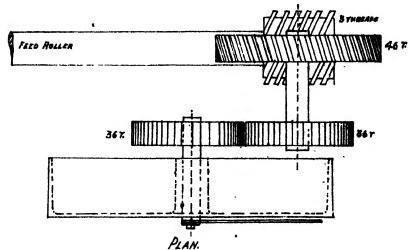

SPECIFICATION AND SPEEDS OF JUTE BREAKER (SINGLE DOFFER).

Oylinder 6' x 4'-2 Workers, 2 Strippers, 1 Doffer, Doffs with iron rollers.

Speed of Cylinder 190 revolutions per minute.

Cylinder Pulleys 24" diameter, 6" broad, 23" bore.

Pulleys driving Strippers 14" diameter, 31" broad, 21" bore.

Pulley Seats on Strippers 13"

Wheel ,, workers 1¼"

,, ,, doffer 1¼"

,, ,, feeder 1¼"

,, ,, drawing roller 1¼"

,, ,, delivering ,, 1¼"

,, ,, tin rollers 1¼"

Oylinder Ring,	,,,	Under wood, 43‡" dia.	Over wood. 48" dia.	Over staves. 493" dia.	Centre to Centre of pins 49] 1" (lin.	. Over staves. 155:11" cir,	Centre to Centre of pins. 156 09" cir.
Nos. 1 and 2 Stripper	Rings,	8 <u>1</u> "	11 "	121, ,,	123 .,		38.87
Nos. 1 and 2 Worker,	•••	41 ,,	7 "	81 "	81 "	25.52 "	26.70 ,
Doffer Rings,	•••	11 "	14 "	15 "	15 16 ,,	47.12 "	48:10 ,,
Feeder "	,,,	61 ,,	9 .	10] ,.	101 ,,	31.80 "	32.98 ,,

`Tin Rollers 10" diameter and 31.41" circumference.

Drawing Rollers 4" dia, 12:56

Delivering Rollers 4" dia. 12:56

*Plaiding Roller 4" dia. 12.56

*Note.—When this roller is used to calculate the length of breaker clock, the diameter is taken at 4\frac{1}{2}"; this allows for thickness of feed cloth.

*Cylinder 4911 diameter at centre of pins = 156.09" circumference---

 190×156 09 = $29657 \cdot 10$ ins. = $2471 \cdot 42$ ft.—the surface speed of cylinder per minute.

Feed roller 10½" diameter at centre of pins = 32.98" circumference.

103/4

Cylinder Pinion 44 teeth.

 $\frac{190 \times 44 \times 26 \times 26 \times 20}{80 \times 110 \times 110} = 4.49 \text{ revolutions of feed roller per minute.}$

 $4.49 \times 32.98 = 148.08$ ins. or 12:34 feet—surface speed of feed roller per minute. $4.49 \times 22.77 = 151.64$

Nos. 1 and 2 Workers 84" diameter at centre of pins = 26.70" circumference.

Cyl. pin. 190 \times 44 \times 48 = 21.38 revolutions of workers per minute.

 $21.88 \times 26.70 = 570.84$ ins. or 47.57 ft.—surface speed of workers per minute.

*Note. - These diameters are taken from a Fairbairn Specification.

Nos. 1 and 2 Strippers 123" diameter at centre of pins = 38.87" circumference.

Pulley driving strippers 14" diameter. Pulley on end of strippers 204" diameter.

 $\frac{190 \times 14}{201} = 129.75$ revolutions of strippers per minute,

 $129.75 \times 38 \ 87 = 5043.38$ ins. or 420.28 feet—surface speed of strippers per minute.

Doffer $15_{16}^{.5}$ diameter at centre of pins = $48\cdot10^{\circ}$ circumference.

21:11 x 48 10 = 1015:39 ins. or 84:61 feet-surface speed of doffer per minute.

Drawing Roller 4" diameter = 12.56 circumference.

$$\frac{190 \times 44}{52} = 160.76 \text{ revolutions of drawing roller per minute.}$$

 $160.76 \times 12.56 = 2019.14$ ins. or 168.26 feet—surface speed of drawing roller per minute.

Delivering Roller 4" diameter = 12.56 circumference.

$$\frac{90 \times 44 \times 23}{52 \times 24} = 154.07 \text{ revolutions of delivering roller per minute.}$$

154.07 x 12.56 = 1935.11 ins. or 161.25 feet-surface speed of delivering roller per minute.

Nos. 1 and 2 Tin Cylinders 10" diameter = 31.41 circumference.

Cyl. pin.
$$\frac{190\times44\times45\times75}{138\times138\times84}=17.89$$
 revolutions of tin cylinders per minute.

 $17.89 \times 31.41 = 561.92$ ins. or 46.82 feet—surface speed of tin cylinders per minute.

Plaiding Roller 4" diameter = 12:56 circumference.

$$\frac{190 \times 44 \times 26 \times 20 \times 114}{80 \times 110 \times 110 \times 46} = 11 \cdot 12 \text{ revolutions of plaiding roller per minute.}$$

11:12 x 12:56=139:66 ins. or 11:63 feet--surface speed of plaiding roller per minute,

			Cylinder P	inion 3s T	Cylinder Pi	nion 40 T.	C) linder Pin	nion 42 T.	Cylinder Pinlon 38 T Cylinder Pinion 40 T, Cylinder Piniou 42 T. Cylinder Pinion 44 T Cylinder Pin on 46 T Cylinder Pinion 48 T. Cylinder Pinion 50 T.	non 14 T	Cyhader Pi	11 on 46 T	Cylinder Pi	nion 48 T.	Cylinder P	inion 50 T.
			Surface Speed.	Revs.	Spred.	Revs.	Surface	Berg.	Surface Speed.	Revs.	Surface Speed.	Revs.	Surface Speed.	Revs.	Surface Speed.	Revs.
Speed	Speed of Cylinder	per min.	Peet. 2471 -42	190	Feet. 2171.42	3.	Feet. 2471.42	961	Feet. 2471-42	180	Eeet. 2471 42	190	Peet. 2471.42	190	Feet. 2471-42	190
; , '	Feed Roller	:	10.63	18.6	11.21	₩.	11 76	4.58	12.34	4.19	12 88	69.7	13-43	6S. #	14-01	5.10
:	Workers	:	41.07	18.46	42-53	19 43	45.39	07-06	47-57	21.38	49.72	22.35	51.88	23.35	24.04	24.29
•	Strippers	:	420-28	129 75	420-28	129 75	420-58	139.75	420-58	129.75	420 28	129.75	4-30-38	129.75	420-38	129-75
:	Doffer	ţ	73.07	18 23	16 91	19 19	80-76	20.15	84 61	21-13	91 83	22.07	92.31	23 03	11.96	23.98
	Drawing Roller ,,	oller "	145.31	138-84	152-97	146-15	160 62	153.46	168-26	160-76	175 91	168.07	183.56	175.38	191-21	182-69
:	Delivering ,,	:	139-26	133.06	146.59	140.06	153 92	147 06	161 25	154.07	168 58	161-07	175-91	168-07	183-25	175-08
:	Tin Cylinders	378	77.0 7	15.45	45.28	16 27	44.70	17:08	78-91	17 89	48 97	18.71	60-19	19-52	53.21	20-33
:	Plaiding Roller	oller "	10-05	9.61	10.28	10-11	11 11	10 62	11 63	11.12	12.17	11.63	12.70	12-14	13-22	12.64
			-	_	•					••		_				

Cylinder Pinion 44 teeth.

0 200.27	51-95	5.88	29-20	14.68	15.32	212.50	8.83
 		-	-	-	-	-	-
The Speed of the Feed Roller to the Cylinder is as 1 to 200.27	*	2	:	:	,	i	pers is
er to the	:	2	ű	toller	Roller	oller "	Workers to the Strippers is
Feed Roll	Workers	Strippers	Doffers	Drawing Roller	Delivering Roller	Plaiding Roller,,	Workers t
f the		Þ	r	:	2	:	:
The Speed	8	:	;		2	¥	

,, 14.

,, 14.

., 16.

,, 16.

"3 " 16

The Speed of the Workers can be changed without affecting the other roller speeds as under :-

Between Strippers and Workers, ...

No. 2

Nos. 1 and 2 Strippers,

Doffer to Cylinder,

Drawing Roller to Doffer,

SETTING OF BREAKER

Speed of Cyl. Worker, Cyl. Pin. 190 × 38 × Change =38,469 Constant No. with a 38 T. Cylinder Pinion. 136 × 138 · 190 × 40 × CP. 40 = .40,494 136 × 138 190 × 42 × C.P. 42 = .42,519186 × 138 · 190 × 44 × C.P. 44 =-44,543 136 × 139 190 × 46 × C.P. 46 = .46,568136 × 138 190 x 48 x CP. 48 = 48,598 136 × 188 190 x 50 x C.P. 50 = .50,618 136 × 138

REVOLUTIONS AND SURFACE SPEEDS UNDER DIFFERENT WORKER AND CYLINDER CHANGE PINIONS.

Cylinder				WO	RKER, (WORKER, CHANGE PINIONS.	PINION	øi				
1	40	61	44	46	84	20	52	54	56	58	60 T.	
€ 86	15-3876	16-1569	16-9263	17.6957	18-4651	19-2345		20-0038 20-7732	21.5426	22.3120	23.0814	Revolutions.
÷	34.23	85.94	37.66	39.37	41.08	62 24	44.50	46.21	47.93	49.64	51.35	Surface Speed in feet.
9	16.1976	17.0074	17.8173	18-6272	19 4371	20-2470	21.0568	21-8667	22.6766	23.4865	24.2964	Revolutions.
~ }	36.03	37.84	39.64	41.44	43.24	45.04	46.85	48.65	50-45	52.25	54.05	Surface Speed in feet.
9	17-0076	17-8579	18.7383	19-5587	20.4091	21-2595	22.1098	22-9602	23.8106	24.6610	25.5114	Revolutions,
7	37.84	39.73	41.62	43.51	45.40	47-30	49.19	51-08	52-97	54.86	92-99	Surface Speed in feet.
•	17-8172	18.7080	19-5989	20.4897	21-3806	22.2715	23-1623	24.0532	24.9440	25.8349	26.7.258	Revolutions.
	39-64	41-62	43.60	45 58	47.57	49.55	51.53	53.51	55.49	57.48	97-69	Surface Speed in feet.
	18-6372	19-5585	20.4899	21.4212	22.3526	23.2840	24 2153	25.1467	26.0780	27.0094	27.9408	Revolutions.
?	41-44	43.51	45.58	47.66	49.73	51.30	53.87	55.95	58.03	60.09	62 16	Surface Speed in feet.
· ·	19-4372	20-4090	21.3809	22-3527	23-3246	24-2965	25.2688	26-2402	27-2130	28.1839	29-1558	Revolutions.
9	43.34	15.41	47.57	49.73	51.89	54.05	56.22	58.38	60 54	63-70	64.87	Surface Speed in feet.
•	20.2479	21-2595	22-2719	23.2842	24.2966	25.3090	26.3213	27-3337	28.3460	29.3584	30.3708	Revolutions.
3	45.05	47.80	49-55	51.80	54.05	56-31	58-56	18-09	90 89	65.32	67.57	Surface Speed in feet.
		-			-							

Dollop 32 lbs. Cylinder Pinion 44 teeth. Pulleys 24".

Worm Working Clock, 3 threads, No 6 pitch, 11" bore.

 $\frac{1 \times 42 \times 36}{3} = 14$ revolutions of feed roller for one round of clock.

Circumference of Feed Roller at centre of pins 32.98". Diameter 101.".

 $82.98 \times 14 = 46.172$ inches or 12.82 yards for one round of clock.

 $\frac{4 \times 80 \times 110 \times 110}{52 \times 26 \times 20 \times 108} = 13.63$ draft between feed and drawing roller.

 $\frac{4\times80\times110^{\circ}_{-}\times110}{52\times C~P.\times~20~\times10^{\circ}_{2}}=854\cdot578$ Constant Number for draft,

 $\frac{4 \times 54 \times 88}{28 \times 26 \times 15\frac{1}{19}} = 2.07$ draft between doffer and drawing roller.

Note.—This draft is only necessary for the delivery of material between the doffer and the drawing roller but is not required in working out the draft between the feed and drawing roller.

 $13.63 \times 12.82 = 174.736$ yards delivered at the front of the breaker for one round of the clock.

Change Pinion	8	20	21	22	23	24	25	26	27	28	29	30 T.
						-		-			-	_
Drafts		17.72	16.88	16.11	15.41	14.77	14.18	18.63	13.13	12.66	12.22	11.81

SPECIFICATION OF PINS.

			Pitch,	Staves.	Rown	Pine.		ize of Pina,	Length of Pin out.
Cylinder -	-	71" × 48"	5" × 5"	120	7	38	No.	12-1"	16"
Feed Roller -	-	71 × 9	18 × 16	24	6	81	,,	12-12	3
No. 1 Stripper		71 × 12	1 × 1	30	5	71	71	13-14	1
No. 2 ,,	•	71 × 12	$\frac{1}{2} \times \frac{1}{2}$	80	5	71	"	13-11	1
No. 1 Worker		71 × 7	10 × 10	30	7	55	19	13-11	ä
No. 2 ,		71 × 7	16 × 18 •	30	7	55	11	13-11	2
Doffer -	•	71 × 14	\$ × \$	34	8	81	17	14-1	16

SINGLE DOFFER BREAKER CARD.

Sectional elevation showing quaring at end mostle to driving pulleys.

SCALE 10th

B Intermediate, 108 teeth C Intermediate, 106 teeth D Changes on cylinder end. 20 to 60 teeth. E Stad wheel carrying changes, 80 teeth. F Changes, 20 to 60 teeth G Stud wheel carrying changes, 80 teeth. H Changes, 20 to 60 teeth 1 Stud wheel, 110 teeth J Stud pimon, 20 teeth K Feeder wheel, 110 teeth L Feeder wheel, 110 teeth L Feeder wheel, 114 teeth M Sheet roller wheel, 114 teeth M Sheet roller wheel, 108 teeth O Worker wheels, 138 teeth P Intermediate between workers, 84 teeth. QQ Worker wheels for driving tin roller, 75 teeth.	A	Drawing roller wheel,		52 teeth
D Changes on cylinder end. E Staid wheel carrying changes, F Changes, G Stud wheel carrying changes, H Changes, Stud wheel, Stud pinion, K Feeder wheel, L Feeder wheel for driving sheet rollers, M Sheet roller wheel, N Intermediate for driving workers, O Worker wheels for driving tin roller, P Intermediate between workers, QQ Worker wheels for driving tin roller, 20 to 60 teeth 20 to 60 teeth 110 teeth 110 teeth 110 teeth 110 teeth 112 teeth 113 teeth 114 teeth 115 teeth 116 teeth 117 teeth 118 teeth 118 teeth 119 Worker wheels, 119 Teeth 110 Worker wheels, 110 Teeth 111 Teeth 112 Teeth 113 Teeth 114 Teeth 115 Teeth 116 Teeth 117 Teeth 117 Teeth 118 Teeth	В	Intermediate,		108 teeth
E Stad wheel carrying changes,	C	Intermediate,		106 teeth
F Changes,	D	Changes on cylinder end.		20 to 60 teeth.
G Stud wheel carrying changes, 80 teeth. H Changes, 20 to 60 teeth I Stud wheel, 110 teeth. J Stud pimon, 20 teeth K Feeder wheel, 110 teeth L Feeder wheel for driving sheet rollers, 114 teeth M Sheet roller wheel, 46 teeth. N Intermediate for driving workers, 108 teeth OO Worker wheels, 138 teeth P Intermediate between workers, 84 teeth. QQ Worker wheels for driving tin roller, 75 teeth,	E	Stud wheel carrying changes,	•	80 teeth.
H Changes,	F	Changes,		20 44 60 teeth
1 Stud wheel, 110 teeth. J Stud pinion, 20 teeth K Feeder wheel, 110 teeth L Feeder wheel for driving sheet rollers, 114 teeth M Sheet roller wheel, 46 teeth. N Intermediate for driving workers, 108 teeth OO Worker wheels, 138 teeth P Intermediate between workers, 84 teeth. QQ Worker wheels for driving tin roller, 75 teeth.	G	Stud wheel carrying changes,		80 teeth.
J Stud pinion, 20 teeth K Feeder wheel, 110 teeth L Feeder wheel for driving sheet rollers, 114 teeth M Sheet roller wheel, 46 teeth. N Intermediate for driving workers, 108 teeth OO Worker wheels, 138 teeth P Intermediate between workers, 84 teeth. QQ Worker wheels for driving tin roller, 75 teeth.	H	Changes,	•	20 to 60 teeth
K Feeder wheel, 110 teeth L Feeder wheel for driving sheet rollers, 114 teeth M Sheet roller wheel, 46 teeth. N Intermediate for driving workers, 108 teeth OO Worker wheels, 138 teeth P Intermediate between workers, 84 teeth. QQ Worker wheels for driving tin roller, 75 teeth.	1	Stud wheel,	•	110 teeth.
L Feeder wheel for driving sheet rollers, 114 teeth M Sheet roller wheel, 46 teeth. N Intermediate for driving workers, 108 teeth OO Worker wheels, 138 teeth P Intermediate between workers, 84 teeth. QQ Worker wheels for driving tin roller, 75 teeth.	J	Stud pimon,	•••	20 teeth
M Sheet roller wheel,	K	Feeder wheel,		110 teeth
N Intermediate for driving workers, 108 teeth OO Worker wheels,	L	Feeder wheel for driving sheet rollers,		114 teeth
OO Worker wheels,	M	Sheet roller wheel,		46 teeth.
P Intermediate between workers, . 84 teeth. QQ Worker wheels for driving tin roller, 75 teeth.	N	Intermediate for driving workers,		108 teeth
QQ Worker wheels for driving tin roller, 75 teeth.	00	Worker wheels,	•••	138 teeth
	P	Intermediate between workers, .		84 teeth.
DD To william a boole Ad teath	QQ	Worker wheels for driving tin roller,		75 teeth,
Mit Till folice whereis, of occur	RR	Tin roller wheels,	•	84 teeth

DRAFT ARRANGEMENT-

 $\frac{4}{52} \times \frac{80}{28} \times \frac{110}{20} \times \frac{110}{10\frac{1}{2}} = 13.63$ draft between feed and drawing rollers.

 $4' \times 80 \times 110 \times 110 \times 110 = 354.578$ Constant No for draft,

Nors -This is with feed roller taken 101" diameter (Fairbairn).


Feed rolle: 103" diameter at centre of pins,

$$\frac{4" \times 80 \times 410 \times 110}{52 \times 26 \times 20 \times 109} = 13 \ 32 \ draft$$

$$\frac{4^{\circ}\times80\times110\times110}{52\times0.F\times20\times10\frac{3}{2}} = 846\cdot332$$
 Constant No for draft.

Nors - CP,-Change draft pinion.

SINGLE DOFFER BREAKER CARD.

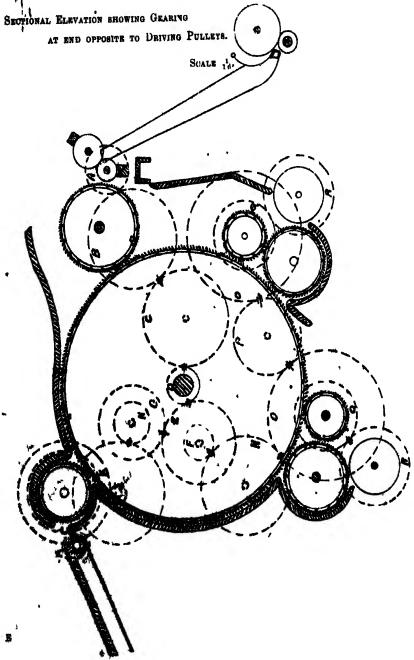

SINGLE DOFFER BREAKER CARD.

Sectional elevation showing gearing at driving enc

SCALE 15th.

A	Swift pulley,				14" dia.
ВВ	Stripper pulleys,				20" dia.
C	Stretching Pulley,				14" dia.
D	Drawing roller pinion,				24 teeth
E	Stud wheel,		••		54 teeth.
F	Stud pinion,	•••			28 teeth.
(‡	Doffer whoel,		•••		88 teeth
н	Intermediate,		•••		110 teet
I	Intermediate,			•••	108 teet
T	D. Paramanallas adalam				nat.

Speed of Cylinder, 190 revolutions per minute.


190 $\times \frac{11}{20} - 133$ revolutions of strippers per minute.

Longth of Feed Cloth, 13 feet.

Breadth ,, ., 5 ,, 6 inches.

One Feed Cloth is used for breaker, and it should be made of plaiding, 3" thick.

SINGLE DOFFER BREAKER CARD.

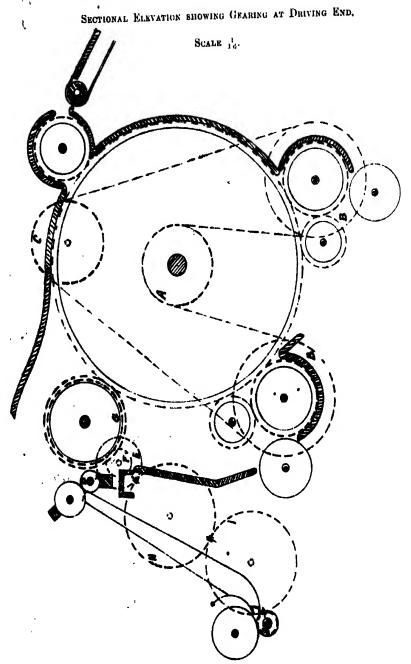

SPECIFICATION AND SPEEDS OF JUTE BREAKERS (DOUBLE DOFFER).

Cylinder Pinion 44 teeth Cylinder 184.84 revolutions per minute.

Cylinder 6' x 4', 2 Workers, 2 Strippers, 2 Doffers.

Fast Pulley 30" diameter, 6" broad, 21" bore.

Loose ,, 30 ,, 6 ,, 3} ,, (this pulley works in a bush).

Pulleys driving Strippers 12" diameters, 3\frac{1}{2}" broad, 3\frac{1}{2}" bore.

Pulley Seats on Strippers $1\frac{1}{2}$ "

Wheel Workers $1\frac{1}{2}$ Doffers $1\frac{3}{4}$ Feeder $1\frac{3}{4}$ Drawing Roller $1\frac{1}{4}$

Delivering Roller 1]

Tin Rollers - 11

		Under Wood.	Over Wood.	Over Staves.	Centre to Centre of pins.	Over Staves.	Over Contre of pin
Cylinder ring		43¼" dia,	48" dia.	49¼" dia.	49½" dia.	154.7 cir.	155.5 cir.
Nos. 1 and 2 Stripper	rings	111	14 ,.	15} .,	151 ,,	47.516 ,,	48-694 ,,
Nos. 1 and 2 Worker	11	1]1/2	14 "	151 ,,	$15\frac{1}{2}$,,	47.516 ,,	48.694 "
Doffers		$11\frac{1}{2}$	14 .,	151 ,,	$15\frac{1}{2}$,,	47.516 ,,	48.694,,
Feeder		16	18 1 ,,	19} .,	20] "	62.046 ,,	63.617 ,,

Tin Rollers - - 16" dia, and 50.265 cir.

Upper and Lower Drawing Rollers 4 ,, 12:56 ,,

Delivering Roller - - 4 ,, 12.56 ,,

184.84 revolutions of cylinder per minute.

Cylinder 49\frac{1}{2}" diameter at centre of pius = 155.5" circumference.

 $184.84 \times 155.5 = 28,742.62$ ins. or 2395.21 feet—the surface speed of cylinder per minute.

Cylinder Pinion 44 T. Cylinder, 184 84 revolutions per minute.

Feed Roller 201" diameter at centre of pins = 63.617" circumference.

Cyl. Pin.
$$\frac{184.84 \times 44 \times 34 \times 30}{150 \quad 150 \quad 156} = 2.36 \text{ revolutions of feed rollor per minute.}$$

 $2.36 \times 63.617 = 150.13$ ins. or 12.51 feet the surface speed of feed roller per minute.

Nos. 1 and 2 Workers 151" diameter at centre of pius = 49.694" circumference.

Cyl. Pin.
$$\frac{184.84 \times 44}{155} \times \frac{25}{144} = 9.10 \text{ revolutions of workers per minuto.}$$

 $9.10 \times 48.694 = 443.11$ ins. or 36.92 feet the surface speed of workers per minute.

Nos. 1 and 2 Strippers 151" diameter at centre of pins - 48.694" circumference.

Pulleys driving strippers 12 ins. diameter.

$$\frac{184.84 \times 12}{22}$$
 = 100.82 revolutions of strippers per minute.

 $100.82 \times 48.694 = 4909.32$ ins. or 409.11 feet the surface speed of strippers per minute.

Doffers 154" diameter at centre of pins = 48.694" circumference.

Cyl. Pin.
$$\frac{184\cdot84 \times 44 \times 24 \times 28}{74 - 67 - 88} = 14\cdot72 \text{ revolutions of doffers per minute}.$$

 $14.72 \times 48.694 = 716.77$ ins. or 59.73 feet the surface speed of doffers per minute.

Lower Drawing Roller 4" diameter = 12.56" circumference.

Cyl. Pin.
$$\frac{184.84 \times 44}{70} = 116.18 \text{ revolutions of lower drawing roller per minute.}$$

 $116\cdot18 \times 12\cdot56 = 1459\cdot22$ ins. or $121\cdot60$ ft. the surface speed of lower drawing roller per minute.

Upper Drawing Roller 4" diameter - 12:56" circumference,

Cyl. Pin. 104:84
$$\times \frac{44}{74} = 109:90$$
 revolutions of upper drawing roller per annute.

 $109.90 \times 12.56 = 1380.34$ ins or 115.02 ft. the surface speed of upper drawing roller per minute-

Delivering Roller 4" diameter = 12:56" circumference.

Cyl. Pin.
$$\frac{184.84 \times 44}{70} \times \frac{23}{70} = 121.46$$
 revolutions of delivering roller per minute.

 $121.46 \times 12.56 = 1525.53$ ins. or 127.12 feet the surface speed of delivering roller per minute.

Tin Cylinder 16" diameter = 50.265" circumference.

Cyl. Pin.
$$\frac{184\cdot84}{155}\times\frac{4_2}{72}\times\frac{25}{72}=18\cdot21 \text{ revolutions of tin cylinders per minute.}$$

 $18.21 \times 50.265 = 915.32$ ins. or 76.27 feet the surface speed of tin cylinders per minute.

Plaiding Roller 4" diameter = 12:56 circumference.

 $9.91 \times 12.56 = 124.46$ ins. or 10.37 feet the surface speed of plaiding roller per minute.

Speed of Cylinder Perd Rolls Revr. Sypeed. Sypeed. Revr. Sypeed. Revr. Sypeed. Revr. Sypeed. Revr. Sypeed. Revr. Sypeed. Revr. Revr		Revs. Spredeck Speed. Revs Spredeck Speed. Spredeck Speed. 184.84 2385.21 184.84 2385.21 2.14 11.92 2.25 12.51 8.28 35.26 8.69 36.92 100.82 409.11 14.05 59.73 13.38 57.01 14.05 59.73 100.42 110.90 121.60 39.91 109.79 104.90 115.02 116.56 72.54 17.39 76.27 16.56 72.54 17.39 76.27 10.1 9.90 9.46 10.37	Rers Surface Speed. 184-84 2385-21 2.25 12-51 8-69 35-92 110-82 409-11 14-05 58-73 110-90 121-60 104-90 115-92 117-39 76-27 9-46 10-37	184'54 2'36 9'10 100'82 14'72 116'18 109'90 121'46 15'21	Revs. Surface 184-84 2985-21 2-36 13-09 9-10 38-63 100-82 409-11 14-72 62-45 116-18 127-12 109-90 120-26 121-46 132-90 18-21 79-75	2-47 2-47 9-52 100-82 15-39 121-46 114-90	Surface Speed. 2395·21 13·62 40·29 40·29 65·16	184-84 2-57	Surface Speed. Feet. 2395-21	Bent. 184.84
Per nuin, 2396 No. 10 No. 109 Roller 109 Roller . 8 Roller . 8		11.92 2.25 35.26 8-69 00:11 1:00:82 57.01 14:05 16:67 110:90 09:79 104:90 21:35 115:34 72:54 17:39 9:90 9:46	2895-21 12-51 36-92 409-11 58-73 121-60 115-02 127-12 76-27			184-84 2-47 9-52 100-82 15-39 121-46 114-90			Yest. 2395-21 14-20	184.84
Workers ,, 33 Workers ,, 409 Strippers ,, 409 Doffers ,, 65 Lower Drawing Roller 105 Upper ,, 99 Delivering Roller 109 Tin Cylinders p. min. 65 Platding Roller ., 8		11.92 2.25 35.26 8.69 00:11 1:00:82 57:01 14:05 16:67 110:90 09:79 104:90 21:35 115:34 72:54 17:39 9:90 9:46	36-92 409-11 59-73 121-60 115-02 115-02 127-12 76-27			7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7		2.57	14-20	-
Workers ,, 31 Strippora ,, 409 Doffers ,, 51 Lower Drawing Roller 105 Upper ,, 99 Tin Cylinders p. min. 65 Platding Roller ,, 8		35-26 8-69 00:11 1:0-82 57-01 14-05 16-67 110-90 09:79 104-90 21:35 115:94 72:54 17:30 9:90 9-46	36-92 409-11 59-73 121-60 115-02 127-12 76-27 10-37					0 0		2 68
Strippere ,, 409 Doffers ,, 51 Lower Drawing Roller 105 Upper ,, 99 Delivering Roller 109 Tin Cylinders p. min. 65 Platding Roller ., 8		09-11 14-05 57-01 14-05 16-67 110-90 09-79 110-90 21-35 115-94 72-94 17-30 9-90 9-46	58-73 121-60 115-02 127-12 76-27 10-37					20.0	41.99	10 35
Lower Drawing Roller 105 Upper " 99 Delivering Roller 109 Tin Cylinders p. min. 65 Plaiding Roller 8		57-01 14-05 16-67 110-90 09-79 104-90 21-35 115-94 72-54 17-30 9-90 9-46	58-73 121-60 115-02 127-12 76-27 10-37	·				100 ·82	409-11	100-82
Lower Drawing Roller 105 Upper , 99 Delivering Roller 109 Plaiding Roller , 8		16-67 110-90 09-79 104-90 21-35 115-94 72-54 17-30 9-90 9-46	121.60 115.02 127.12 76.27 10.37	~ ~ ~				16 06	67.88	16.73
Upper ". 109 Delivering Roller 109 Tin Cylinders p. min. 65 Platding Roller 8	99-91 110-42 16-56 9 01	09.79 104.90 21.85 115.94 72.54 17.39 9.90 9.46	115-02 127-12 76-27 10-37	109-90 121-46 18-21 9-91		114-90	132.65 126.74	126.74	138.18	132 02
Delivering Roller 109 Tin Cylinders p. min. 65 Plaiding Roller 8	110-42	21.85 115.94 72.54 17.39 9.90 9.46		121.46	-	126-98	125-48	119-89	130.71	121.89
Tin Cylinders p. min. 65 Plaiding Roller 8	16.56	" ,		18-21			188-68	132.50	94.441	138-0-2
Platding Roller S				9.91	18:01	19-04	83-28	19.87	86.70	20.70
The Speed of the Fee Woo					10 21	10.36	11:31	19.81	11.78	11 26
Wo. ". Stri	Cylinde Feed Rol	Cylinder Pinion 44 teeth	teeth vlinder i	is as 1	to 191	. 1 6.				
	,									
	Workers	:	:	7	. 64	64-87.				
•	Strippers		£	-	1 5.	5-85.				
" Doff	Doffers	:	:	1	·0 †	40-10.				
., Low	Lower Dr	Lower Drawing Roller		-	19	19-69.				
u. Cp	Upper				20.	20.82.				
. Del	Delivering Roller	g Roller	2	1	18	18-84.				
ow	Workers	Workers to the Strippers	8.10	-	11	11-08.				

redu Noner	1:84 × C.P. × 34 × 30 150 150 156	= .053,714 (Constant No. 1	or revs. per minute.
Nos. 1 and 2 Workers-18	1·84 × C.P. × 25 155 144	= '207,034	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	II .
Doffer 184	$\frac{1.84 \times C.P. \times 24 \times 28}{74 57 88}$	= 334,641	"	,
Lower Drawing Roller:	1·84 × C.P	= 2.64,057	٠,	"
Upper Drawing Roller 184	284 × C.P	= 2.49,783	11	11
Delivering Roller , 184	$\frac{1.84 \times \text{C.P.} \times 23}{70 22} \cdots$	= 2.76,058	"	11
Tin Cylinders 184	184 × C P. × 25 155 72	= '414,068	91	**
Plaiding Rollers 184	**************************************	= '225,253	ŋ	
1	Feed Roller to Cylind	er,	1	No. 16.
	" Shell,	•••	•••	,, 9,
	Shell to Cylinder,			1 ⁷ 8".
	No. 1 Worker to Cylin	nder,	?	No. 14.
SETTING OF DOUBLE	No. 2 ", ",		•••	,, 14.
DOFFER BREAKER	Nos. 1 and 2 Strippers	s to Cylinder,	•••	,, 16.
DOFFER DREAKER	Between Workers and	Strippers,	•••	,, 16.
- 1	Upper Doffer to Cylind	ler,		,, 16.
	Lower "	··· .		, 14.
	Upper Drawing Roller	to Doffer,	•••	,, 9.
1	Lower "	,,		,, 9.

The speed of the workers can be changed without affecting other parts of the breaker as under :-

Speed of Cyl. Worker. Cylinder Pin. Worker. 184/84 × 38 × Pinon. 155 144	:314691	Constant 1	N. with	38 teeth	cylinder pinion,
184·84 × 40 × 155 144	= :331254	,	,	40	13
184·84 × 42 × 155 144	= ·347817	. ,	,	42	**
184·84 × 44 × 155 144	= ·364379	,	,	44	31
184·84 × 46 × 155 144	= '380942	g 1	,	46	17
184·84 × 48 × 165 144	= ·397505	#	,	48	"
184·84 × 50 × 155 144	·414068	15	,	50	"

				-						
Cylinder Pinion)M	ORKER,	WORKER, CHANGE PINIONS.	PINION	<u>v</u> i			•
	20	25	24	36	28	30	32	34	36 T.	
E	6.2938	6.9232	7.5525	8.1819	8-8113	9.4407	10-0-01	10.6994	11.3288	Revolutions.
1 66	25-5391	28-0931	28-0931 30-6467 33-2007	33-2007	35-7547	38-3087 40-8627	40-8627	43-4163	45-9703	Surface Speed in feet.
-	6.6250	7.2875	7-9500	8-6126	9-2751	9 9376	9 9376 : 10.6001	11.2626	11-9251	Revolutions.
,~- 2	26.9664	29.5714	32-2597	34.9484	37-6368		40.5288 43.0134	45.7017	48-3900	Surface Speed in feet.
-	6-9563	7.6519	8.3476	8.3476 9.0432	9.7388		10-4345 11-1301	11.8257	12.5214	Revolutions,
ì	28-2275		31-0501 33-8731	36.6957	1812.68	43.3414	45.1640	47-9867	2608-09	Surface Speed in feet.
	7.2875	8-0163		87450 9.4738	10-2026	10-9313	11-6601 12-3888	12.3888	13-1176	Revolutions.
#	29 5714	32-5288	35-4857	38 4431	38 4431 41 4004	44.3573	47-3147 50-2716	50-2716	53-2290	Surface Speed in feet.
-	7.6188	8.3807	9.1426	9 9044	10.6663	11-4283	11.4283 12.1901 12.9520	12-9520	13-7139	Revolutions.
9	30.9158	34.0074	37.0991	†0.190 †	13.2820	16.3737	49-4653, 52-5570	52.5570	25.6487	Surface Speed in feet.
9	7-9501	8.7451	10+5-6	10-3351	11-1301		11.9251 12.7201 13.5151	13.5151	14.3101	Revolutions.
 }	32-2601	35-4851	38-7121	41-9381	15.1640	48.3900		51-6160, 54-8420	58-0680	Surface Speed in feet.
2	8-2813	9.1094	9.9376	10-7657	11.5939	12.4220	13-2501 14-0783	14.0783	14-9064	Revolutions.
ر ۔ ج	33.6041	36.9644	36-9644 40-3251	43.6854	47-0461		20-4064 53-7666	57-1273	60-4876	Surface Speed in feet.
						-				

This Breaker has two deliveries, and each delivery keeps a finisher going. The delop given here refers to each delivery separately. From the construction of this machine two qualities of material can be wrought at the same time.

Dolop 22 lbs.; Cylinder Pinion 44 teeth; Pulley 30".

Worm working Clock 3 threads, No. 6 pitch, 11" bore.

 $\frac{1}{3} \times \frac{22}{1} = 7\frac{1}{3}$ revolutions of feed roller for one round of clock.

Circumference of Feed Roller at centre of pins 63.61". Diameter 201"

 $7\frac{1}{3} \times 63.61 = 466.26$ inches or 12.95 yards for one round of clock.

 $\frac{4}{70} \times \frac{150 \times 150 \times 156}{34c.p. \times 30 \times 20} = 9.71$ draft between feed and upper drawing roller.

$$\frac{4 \times 57 \times 88}{24 \times 280 \text{ p}} \frac{154}{154} = -1.92$$
 ., doffer and upper drawing roller.

Draft. Yds. per round of clock.

971 × 12.95 = 125.7 yards delivered at front of breaker for one round of clock.

 $\frac{4\times150\times150\times156}{70\times C.P.} = 330\cdot1587$ Constant Number for draft.

$$\frac{4 \times 57 \times 88}{24 \times 0.12 \times 15\frac{5}{15}}$$
 - 53.9354 ., between doffer and upper drawing roller

DRAFTS.

Change Pinio	ns S	0	31	32	33	34	35	36	37	38	39	40 T.
	-								-			
Drafts,	11.	00 10	·65	10.31	10.09	9.71	9.43	9.17	8.92	8.68	8.46	8.25

Drafts between Doffer and Upper Drawing Roller-

Change Pinions	24	25	26	27	28	29	80
Drafts, -	2.24	2.15	2.07	1.99	1.92	1.86	1.79

 $[\]frac{4\times74\times74\times57\times88}{70\times74\times24\times28\times16\frac{1}{2}}=24036$ draft between doffer and lower drawing roller.

It will be observed that there are 4 teeth more draft between the doffer and the lower drawing roller—this is to keep the sliver tight between the top and bottom drawing roller.

. The lower doffer is driven direct from the upper doffer, and the lower drawing roller direct from the upper drawing roller.

SPECIFICATION OF PINS.

Cylinder		 71" × 48"	1×1	82	5	47	No. 12 116
Feeder		 × 18½	7 × 3	63	8	54	12 11
1st Stripper		 × 14	$\frac{1}{2} \times \frac{1}{2}$	54	5	47	13 11
2nd "		 × 14	$\frac{1}{2} \times \frac{1}{2}$	54	5	47	13 14
lst Worker		 × 14	1 d × 3	54	7	54	13 13
2nd "		 × 14	16 × 3	54	7	54	13 13
lst Doffer		 × 14	3 × 3	54	7	63	14 14
2nd ,,	•••	 × 14	3 × 3	54	7	63	14 11

ARRANGEMENT OF DOUBLE DOFFER BREAKER CLOCK. *

Length of clock, calculated from diameter of feed roller, 201 inches = 63.61 inches circumference.

B

In this case -

A = 3 Threaded Worm on end of feed roller

B = 22 Teeth Pinion on arbor of Clock in gear with worm.

—therefore 25 of a revolution of clock is equal to one round of a feed roller, and there are therefore 73 revolutions of feed roller for one round of clock.

 $63.61 \times 7\frac{1}{3} = 466.47$ inches or 12.95 yards in one round of clock. Length of clock calculated from plaiding roller $4\frac{1}{4}$ " diameter = 13.35 cir., two thicknesses of feed cloth included in dia. of plaiding roller.

$$\frac{A}{B} \times \frac{C}{D} =$$

In this case --

A - Pinion on end of plaiding roller.

B - Wheel in gear with it.

C = Worm on end of feed roller.

D = 22 teeth pinion on arbor of clock in gear with worm.

 $^{51}_{150}$ × $^{8}_{32}$ – $^{93}_{240}$ of a revolution of clock equals one round of the plaiding soller.

 $\frac{2860}{93}$ = $30\frac{3}{4}$ revolutions of plaiding roller in one round of clock.

 $\frac{13.35 \times 30.75}{38^{9}} = 11.4 \text{ yards in one round of clock.}$

Note.—As to the clock arrangements.—There is a difference between the length of clock when calculated from feed and plaiding rollers. The method followed is to make the calculation at something between the speed of the feeding cloth and that of the feed roller. We estimate feeding cloth at \(\frac{1}{3}'' \) thick; this makes the diameter of plaiding roller equivalent to \(4\frac{1}{2}'' \) diameter. Then the feed roller must have a draw on the feeding cloth, so as to ensure that the latter does not tend to choke the shell feeder. Thus, the feeding cloth goes at 11.4, the feeder goes at 12.95; and we estimate that the draw of the feeder in one direction and the resistance of the sheet roller will make the real speed about 12 yards—hence the reason that Messrs Fairnbairn, Naylor, Macpherson, & Co., Ltd., speak of a 12 yards clock.

DOUBLE DOFFER BREAKER CARD.

Sectional elevation showing gearing at end opposite to driving pulleys.

SCALE L'STH.

(For Diagram see page 6.2).

A	Feeder wheel,		156 teeth.	7. 2
В	Changes,	•	36 to 64 teet	th. 4
C	Stud wheel carrying do.,		150 teeth.	
D	Stud pinion,		20 teeth.	6
E	Stud wheel,	•	150 teeth.	•
F	Intermediate,	•	96 teeth.	
G	Changes on cylinder end,	,	36 to 64 teet	h.
H	Intermediate,		102 teeth.	
1	Stud wheel,	•	155 teeth.	
J	Stud pinion,	•	25 teeth.	
ĸ	Bottom drawing roller w	heel,	70 teeth. 1.	L
L	Intermediate,	•	102 toeth.	
M	Top drawing roller wheel	,	74 teeth.	
NN	Worker wheels,		144 teeth.	
00	Tin roller wheels,	•	72 teeth.	
P	Intermediate between wo	rkers,	90 teeth.	

DRAFT ARRANGEMENT-

Feed Roller, 20" diameter-diameter taken from Fairbairn.

$$\frac{4" \times 150 \times 150 \times 156}{70 \times 34 \times 30 \times 20"} = 9.83$$
 draft.


$$\frac{4''\times150\times150\times150\times156}{70\times C.P\times30\times20''}=334\cdot285$$
 constant $N_{\rm s}$ for draft.

Feed Roller, 204" diameter (see Specification of Breaker).

$$\frac{4'' \times 150 \times 150 \times 156}{70 \times 34 \times 30 \times 201''} = 9.7 \text{ draft.}$$

$$\frac{4'' \times 150 \times 150 \times 156}{70 \times C.P. \times 30 \times 201''} = 330 \cdot 158$$
 constant N. for draft.

Note.—C.P. - Change on draft pinion.

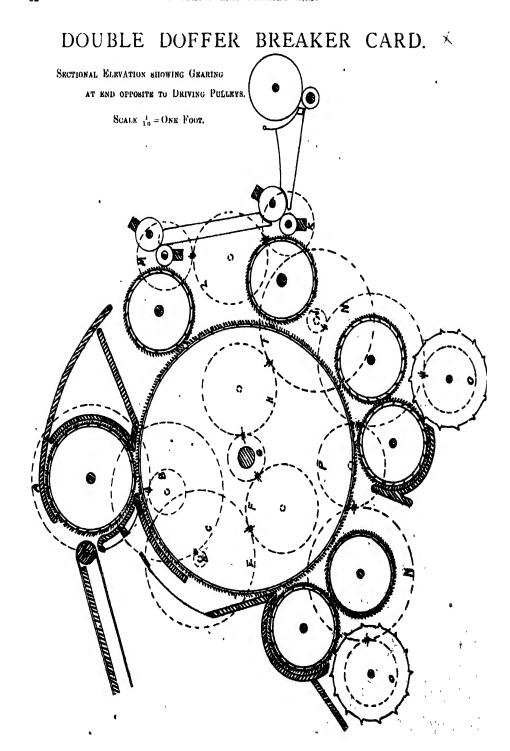

X

DOUBLE DOFFER BREAKER CARD.

Sectional elevation showing gearing at driving end.

SCALE 18TH.

(For Diagram see page 64),

A	Swift Pulley,	•••		•••	12" dia
BB .	Stripper pulleys,	•••		•••	22" dia.
C	Stretching pulley,			ě	12" dia.
D	Feeder wheel for driving	g sheet re	oller,		130 teeth.
E	Sheet roller wheel,	•••	•••	•••	31 teeth ·
F	Top drawing roller pin	ion,		•••	24 teeth.
G	Stud wheel,	•••	•		57 teeth.
H	Stud pinion,		•••		28 teeth.
11	Doffer wheels,		•••		88 teeth.
J	Intermediate between	doffers,			96 teeth.
K	Bottom drawing roller	pinions,		.	24 and 25 teeth.
L	Intermediate,		•••	•••	124 teetli.
M	Delivery roller pinion,				23 tooth.
Spee	d Cylinder 184.84 revs.	per minut	te.		

opaca Cymnaer 107 07 1018. per minate.


 $184.84 \times \frac{1}{4}$ = 100.82 revs. of Strippers per minute.

Length of Feed Cloth 14 feet.

Breadth 2 feet 9 inches

Two feed cloths are necessary for this breaker as it delivers two separate slivers.

DOUBLE DOFFER BREAKER CARD. X

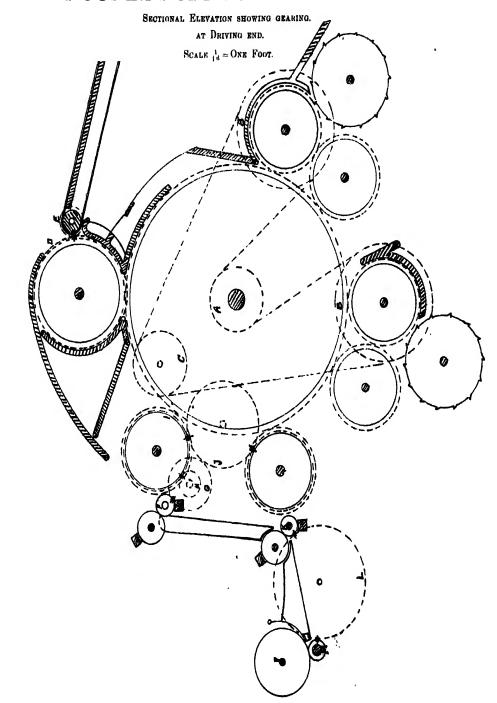

UP STRIKER BREAKER CARD.

Sectional elevation showing gearing at driving end.

SCALE 10th.

(For Diagram see paye GU).


Swift pulley,	•••	•••	•••	14" dia.
Stripper pulleys,	•••	***		18" dia.
Stretching pulley,	•••		•••	14" dia.
Drawing roller pinion,	•	•••		24 teeth.
Stud Wheel,	•••	•••		54 teeth.
Stud pinion,	•••	•••	•••	28 teeth.
Intermediate,	• • •	•••		42 teeth.
Doffer wheel,	•••	•••		88 teeth.
Stud wheel,	•••	•••	•••	24 teeth.
Stud pinion,	•••	•••	•••	12 teeth.
Brush wheel,		•••	•••	24 teeth.
Intermediate,	•••			90 teeth.
Delivery roller pinion,	•••	••		22 teeth.
Doffer wheel for driving	tin r	oller,	• •	104 teeth.
Tin roller wheel,	•••			52 toeth
Feeder wheel for driving	g shee	et ioller,		78 teeth.
Intermediate,	•••	•••	•••	40 teeth.
Sheet roller wheel,		•••		32 teeth.
	Stripper pulleys, Stretching pulley, Drawing roller pinion, Stud Wheel, Stud pinion, Intermediate, Doffer wheel, Stud wheel, Stud pinion, Brush wheel, Intermediate, Delivery roller pinion, Doffer wheel for driving Tin roller wheel, Feeder wheel for driving Intermediate,	Stripper pulleys, Stretching pulley, Drawing roller pinion, Stud Wheel, Stud pinion, Intermediate, Doffer wheel, Stud pinion, Stud pinion, Delivery roller pinion, Delivery roller pinion, Tin roller wheel, Feeder wheel for driving sheel	Stripper pulleys,	Stretching pulley,

Cylinder 190 revolutions per minute.

 $190 \times \frac{1}{8} = 147.7$ revolutions of Strippers per minute.

The illustrations of Up Striker Breakers have been put in for reference. I have not thought it necessary to describe them.

Note. - For Particulars of Covering see page 111, and page 120 for Drafts, &c.

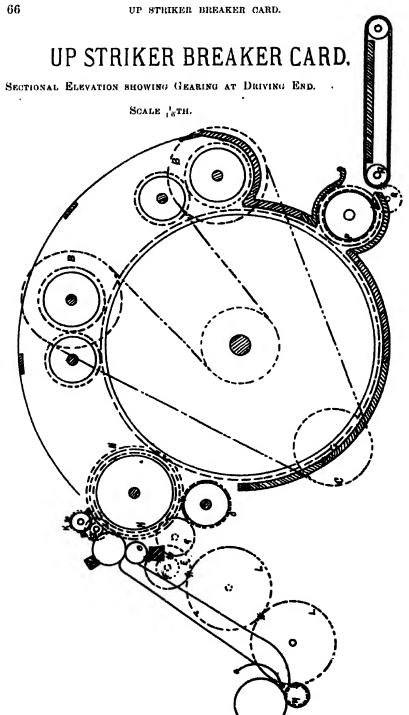

UP STRIKER BREAKER CARD.

Sectional elevation showing gearing at opposite end to driving pulleys.

SCALE Lath.

(For Diagram see page 68).

A	Drawing roller wheel,	•••	•••		66 teeth. • ····
ввв	Intermediates,				75 teeth.
C	Changes on cylinder en	d ,	•••	•••	20 to 60 teeth.
D	Intermediate,	••	•••		54 teeth.
E	Stud wheel,	•••	• • •		58 teeth.
F	Stud pinion,	•••	•••		20 teeth
(}	Stud wheel,	••	•••		120 teeth
Н	Changes,	•••	•••	••	20 to 60 teeth
I	Feeder wheel,		•••		120 teeth.
J	Doffer wheel for drivin	g workers	s ,		88 teeth.
К	Stud wheel,		••	•	96 teeth.
L	Stud pinion,				64 teeth.
MM	Workers wheel.			•	92 teeth.
N	Intermediate between	workers,	•••		116 teeth.


DRAFT ARRANGEMENT-

$$\frac{4 > 58 \times 120 \times 120}{66 \times 20 \times 30 \times 101} - 8.03 \ draft.$$

$$\frac{4}{-8} \times \frac{58}{-8} \times \frac{120}{-8} \times \frac{120}{-8} \times \frac{120}{-8} = 241.039$$
 Constant No. for draft C.P. $\frac{10\frac{1}{2}}{10\frac{1}{2}}$

Note. - The Breakers are used for Sacking Wefts.

UP STRIKER BREAKER CARD.

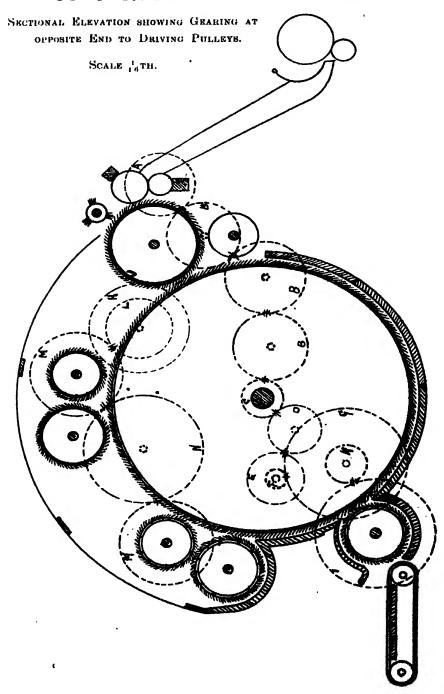

Sectional elevation showing yearing at end apposite to driving pulleys.

SCALE Lath.

(For diagram see page 70).

A	Changes on cylinder end,	20 to 60 teeth.
В	Intermediate,	74 teeth.
C	Stud wheel,	104 teeth.
D	Stud pinion,	32 toeth.
E	Intermediate,	66 teeth.
F	Drawing roller wheel,	75 teeth. 42.
G	Stud wheel carrying changes,	96 teeth.
11	Changes,	20 to 60 teeth.
1	Feeder wheel,	96 teeth.
J	Feeder wheel for driving sheet roller,	46 teeth.
K	Sheet roller wheel,	48 teeth.
L	Doffer wheel for driving workers	84 teeth.
M	Stud pinion,	64 teeth.
N	Stud wheel,	72 teeth,
0000	-	90 teeth,
PΡ	Intermediates between workers,	84 teeth.
Q	Intermediate between workers,	96 teeth.
Ř	Worker wheel for driving tin roller,	70 teeth.
S	Tin roller wheel,	62 teeth.
T	Worker wheel for driving tin roller,	75 teeth.
Ū	Tin roller wheel,	84 toeth.
v	Mitre for driving end delivery roller,	30 toeth.
w	Mitre on end delivery roller,	30 teeth.

DRAFT ARRANGEMENT --

Feed Roller, 41" diameter.


$$\frac{4'' \times 104 \times 96 \times 96}{75 \times 32 \times 28 \times 4\frac{1}{8}''} = 13.83 \text{ draft.}$$

 $\frac{4''\times104\times96\times96}{75\times32\times C,P.\times4_{11}''}=387\cdot258$ Constant No. for draft.

Feed Roller, 4" diameter.

$$\frac{4'' \times 104 \times 96 \times 96}{75 \times 32 \times 28 \times 4''} = 14.26$$
 draft.

$$\frac{4" \times 104 \times 96}{75 \times 82 \times C.P.}$$
 $\frac{96}{4"} = 399.359$ Constant No. for draft.

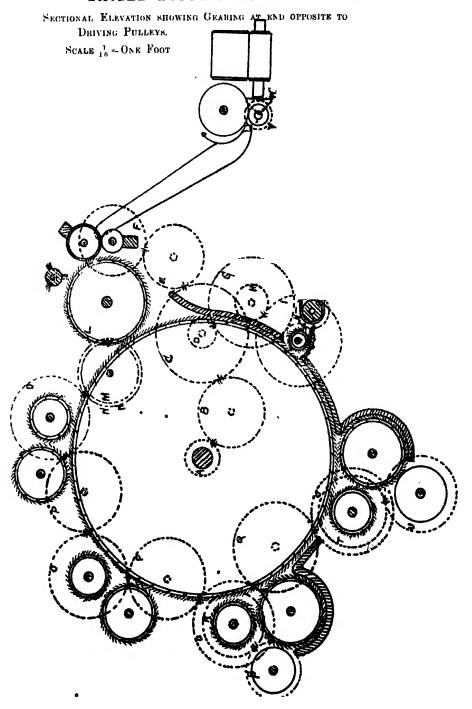

Sectional elevation, showing gearing at driving end.

SCALE 16th.

(For Diagram see page 72).

A	Swift pulley,	•••	14" dia.
ВВ	Stripper pulleys,	411	15" dia.
СO	Stripper pulleys,	•••	18" dia.
D	Stretching pulley,	•••	14" din.
E	Drawing roller pinion,	•••	£4 teeth.
F	Intermediate,	•••	56 teeth.
G	Stud wheel,	•••	60 teeth.
H	Stud pinion,	***	28 teeth.
ΙI	Intermediate,	•••	84 teeth.
J	Delivery roller pinion,		22 teeth
K	Doffer wheel,	•••	84 teeth.
L	Stud wheel for driving	brush,	24 teeth.
M	Stud pinion,	•••	12 teeth.
N	Brush wheel,	•••	24 teeth.

Speed of Cylinder, 180 revolutions per minute.

 $180 \times \frac{14}{4} = 140$ revolutions of Nos. 1 and 2 strippers per minute.

 $180 \times \frac{14}{13} = 168$ revolutions of Nos. 3 and 4 strippers per minute.

Speed of Cylinder, 193.68 revolutions per minute.


 $193.68 \times \frac{11}{18} = 150.64$ revolutions of Nos. 1 and 2 strippers per minute.

193.68 × $\frac{1}{1}\frac{1}{5}$ = 180.76 revolutions of Nos. 3 and 4 strippers per minute.

Length of Feed Cloth, 14 feet.

Breadth ,, ,, 2 ,, 9 inches.

Two Feed Cloths are required for one finisher—should be made of plaiding, about $\frac{3}{16}$ thick.

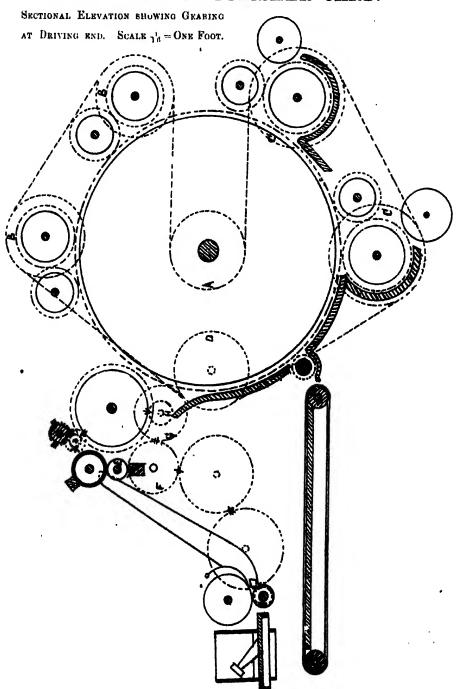

... 26 to 42 teeth.

DOUBLE DOFFER FINISHER CARD.

Sectional elevation showing gearing at opposite end to driving pulleys.

SCALE 118TH.

(For diagram see page 74).

Changes on Cylinder end,

•••		•••	20 00 12 000011.
В	Intermediate,	•••	72 teeth.
C	Intermediate,	•••	90 teeth.
D	Intermediate,	***	63 teeth.
E	Top drawing roller wheel,		80 teeth.
F	Intermediate between drawing rollers,	•••	80 teeth.
G	Bottom drawing roller wheel,	•••	76 teeth
H	Stud wheel carrying changes,		138 teeth
I	Changes,		26 to 42 teeth.
J	Feeder wheel,	***	144 teeth. r.
K	Feeder wheel for driving sheet roller,		43 teeth.
L	Sheet roller wheel,	•••	32 teeth
M	Doffer wheel for driving workers,	•••	112 teeth.
N	Intermediate for driving workers,	•••	72 teeth.
000	Worker wheels,	•••	110 teeth.
PΡ	Intermediates between workers,		130 teeth.
\mathbf{Q}	Worker wheel for driving tin roller,	•	138 teeth.
R	Tin roller wheel,	•••	78 teeth.
В	Mitre for driving end delivery roller,		30 teeth.
T	Mitre on end delivery roller,		30 teeth.

DRAFT ARRANGEMENT-

Feed Roller 41" diameter.


$$\frac{4 \times 138 \times 134}{76 \times 20 \times 44} = 12.03 \text{ draft.}$$

$$\frac{4 \times 138 \times 134}{76 \times C.P. \times 44} = 246.092 \text{ Constant No. for draft.}$$

Note .- C.P. = Change or Draft Pinion.

DOUBLE DOFFER FINISHER CARD. X

SECTIONAL ELEVATION SHOWING GEARING AT END OPPOSITE

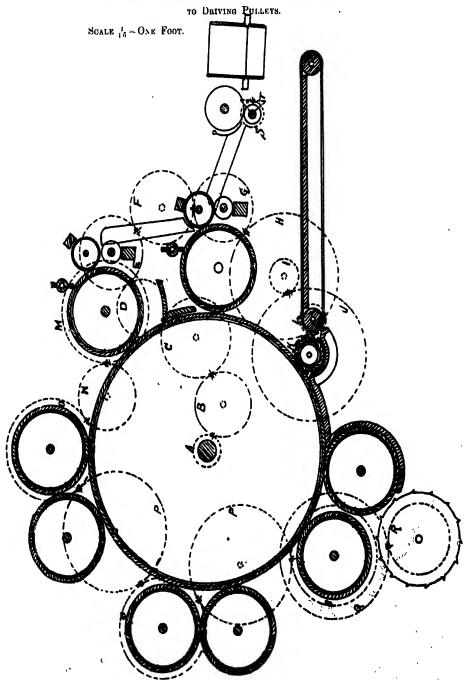

DOUBLE DOFFER FINISHER CARD.

Sectional elevation showing gearing at driving and.

SCALE 1 TH.

(For diagram see page 76).

A	Swift pulley,	•••	•••	•••	11" dia.
BBB	Stripper pulleys,		•••		24" dia.
C	Stretching pulley,		•••		12" dia.
D	Top drawing roller piu	ion,	•••		24 tooth.
E	Stud wheel,	•••	•••		54 teeth.
F	Stud pinion,			••	25 teeth.
G	Intermediate between	doffers,	•••	• 1	70 teeth.
ни	Doffer wheels,		•••		88 teeth.
11	Doffer wheels for drivi	ng brusho	08,	•	44 teeth.
JJ	Intermediates,	•••			30 teeth.
КK	Brush wheels,				24 teeth.
L	Bottom drawing roller	pinions,	,		24 and 25 teeth.
M	Intermediate,				108 teeth.
N	Delivery roller pinion,		•••		23 teeth.

Speed of Cylinder 185 revolutions per minute.

 $185 \times \frac{11}{44} = 84.79$ revolutions of Strippers per minute.

Length of Feed Cloth 7 feet 3 inches.


Breadth of , 2 ., 9 ,

Two Feed Cloths are required for one finisher

The Feed Cloths of Double Doffer Breaker and Finisher should also be made of plaiding "s" thick.

DOUBLE DOFFER FINISHER CARD. X

SECTIONAL ELEVATION SHOWING GEARING AT DRIVING END.

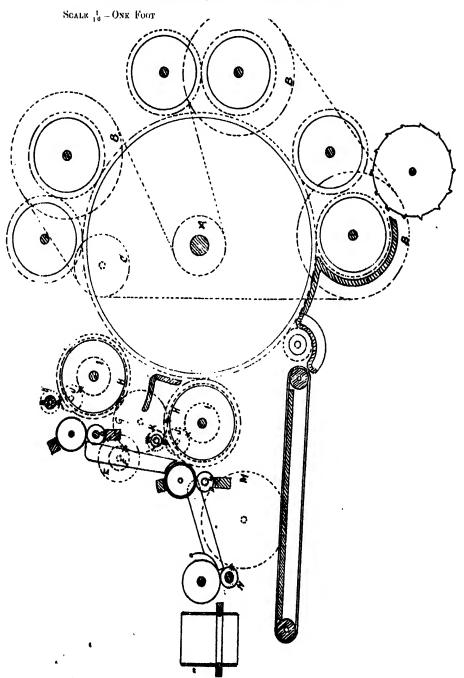

UP STRIKER FINISHER CARD

Sectional elevation showing gearing at opposite end to driving pulleys.

SCALE 16th.

(For diagram see page 78).

A	Drawing roller wheel,		•••	•••	66 teeth.
BBB	Intermediates,	•••	•••		75 teeth.
C	Changes on cylinder en	d,	•••		20 to 60 teeth.
D	Intermediate,		•••		54 teeth.
E	Stud wheel,		•••		58 teeth.
F	Stud pinion,			•••	20 teeth.
G	Stud wheel,	•••		•••	120 teeth.
Н	Changes,	•••	•••	•••	2) to 60 teeth.
I	Feeder wheel,	•••		•••	120 teeth.
J	Doffer wheel for driving		88 teeth.		
K	Double intermediate,		•••	60 teeth.	
LLL	Worker wheels,	•••		•••	72 teeth.
MM	Intermediates between	workers,			84 teeth.

DRAFT ARRANGEMENT-

Feed Roller, 10½" diameter.

$$\frac{4 \times 58 \times 120 \times 120}{66 \times 20 \times 30 \times 10} = 8.03 \text{ draft.}$$

 $[\]frac{4 \times 58 \times 120 \times 120}{66 \times 20 \times C.P. \times 10} = 241.039$ Constant No. for draft.

UP STRIKER FINISHER CARD

SECTIONAL ELEVATION SHOWING GEARING AT OPPOSITE END TO DRIVING PULLEYS. SCALE 16

UP STRIKER FINISHER CARD.

Sectional elevation showing gearing at driving end.

SCALE Lath.

(For diagram see page 80).


A	Swift pulley.	•••	•••		16" dia.
BBB	Stripper pulleys,	•••			14" dia.
C	Stretching pulley,	•••	•••	•••	14" dia.
D	Drawing roller pini	on,	•••	•••	24 teeth.
E	Stud wheel,	•••	•••	•••	54 teeth.
F	Stud pinion,		•••		28 teeth.
G	Intermediate,		•••		42 teeth.
·II	Doffer wheel,		•••	•••	88 teeth.
I	Stud wheel,	••	•••		24 teeth.
J	Stud pinion,	•••	•••	•••	12 teeth.
K	Brush wheel,	•••	•••	•••	24 teeth.
LL	Intermediate,	••	•••	•••	90 toeth.
M	Delivery roller pinc	n,	•••	•••	22 teeth.
N	Doffer wheel for dri	ving ti	ı ıoller,	•	104 teeth.
0	Tin roller wheel,	•••	•••		52 teeth.
P	Feeder wheel for dri	iving sh	cet roller,		78 teeth.
Q	Intermediate,	•••	•••	•••	40 teeth.
R	Sheet roller wheel,		•••	•••	32 teeth.

Cylinder, 180 revolutions per minute.

 $180 \times \frac{1}{14} = 205.71$ revolutions of stripper per minute.

Note .- For particulars of Covering see page 111, and page 120 for drafts, &c.

.UP STRIKER FINISHER CARD.

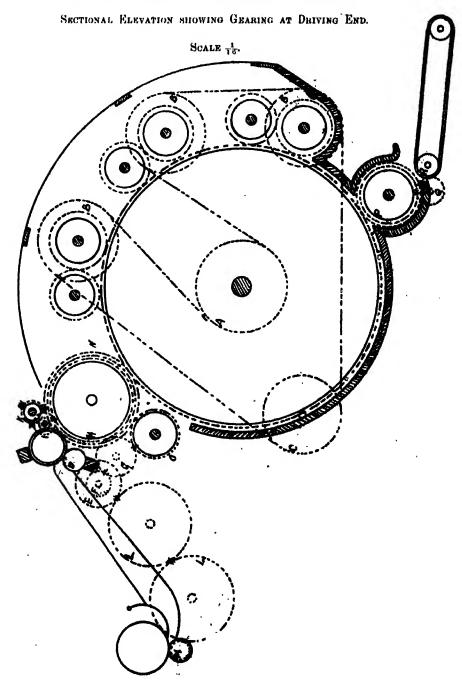

SPECIFICATION AND SPEEDS OF FINISHER (SINGLE DOFFER).

Cylinder 6' x 4', 4 Workers, 4 Strippers, 1 Doffer, Doffs with leather rollers.

Speed of Cylinder 180 revolutions per minute.

Pulleys, 24" diameter, 6" broad, 21" bore. Pulleys driving Strippers, ... ,, 4 ,, 2].,, Pulley Seats on Nos, 1 and 2 Strippers, 14 3 and 4 11 Wheel Seats on Workers, 11 Doffer ... 11 Feeder, ... Drawing Roller, 11 Delivering Roller, 11

Note. -These diameters are taken from a Fairbairn Specification.

11

Tin Rollers, ...

	Under Wood.	Over wood,	Over staves.	Centre to Centre of pins	Over staves,	Centre to Centro of plus
Cylinder ring	43}" dia	48" dia.	49‡′ dia.	1913" dia.	154·33 eir.	155-21 cir.
Nos. 1 and 2 Stripper rings,	81 ,,	11 "	12 ,	$12\frac{7}{92}$	37.69 "	38:38 ,,
., 3 and 4 ., ,,	7 ,	9 .,,	10 "	10,7 ,,	31.41 "	32·10 "
Worker, "	41 ,,	'7',,	8 "	8,8 ,,	25.13 ,	26.11 "
Doffer, "	11 ,	14 "	14 % "	15,5 ,,	46.73 "	47.61 ,,
Feeder rings (1ron) :.	21 ,,		33 ,,	41, ,,	11:78 "	12.95 "
Tin Rollers,	10 , =	31·41 cir. a	nd 8" dia 2	5"·13 cir.		
Brawing Roller,	4 ,, =	12:56 "	•			
Delivering Roller,		12.56 "				
Plaiding Roller,	4 ., =	12:56 "	:			

Cylinder Pinion 50 teeth, 11" bore.

• Cylinder $49\frac{13}{3}$ diameter at centre of pins = 155°·21 circumference.

 $180 \times 155 21 - 27937.80$ inches = 2328.15 feet, surface speed per minute.

Feed Roller 41" diameter at centre of pins = 12" 95 circumference.

180 .
$$\frac{60 \times 32}{104 \times 104} \times \frac{32}{104} \times \frac{32}{90} = 9.46$$
 revolutions of feed roller per minute.

 $9.46 \times 12.95 - 122.5070$ inches = 10.2089 feet, surface speed per minute.

Nos. 1, 2, 3, and 4 Workers, 8 5 " diameter at centre of pins - 26"·11 circumference.

Cyl pm.
$$\frac{180 + 50 \times 33}{75 \times 60 \times 84} \times \frac{26 \times 84}{72 \times 90} \times \frac{46}{90} = 8.49 \text{ revolutions of workers per minute.}$$

8:19 × 26:11 = 221:6739 inches = 18:4728 feet, surface speed per minute.

Nos. 1 and 2 Strippers 12,72" diameter at centre of pins = 38":38 circumference.

Pulleys driving Strippers, 14" diameter.

180 \times $\frac{14}{18}$ = 140 revolutions of Nos. 1 and 2 Strippers per minute.

 $140~\times 38\cdot 38 - 5373\cdot 20$ inches – 447:76 feet, surface speed per minute.

Nos. 3 and 4 Strippers 10 " diameter at centre of pins = 32" 10 circumference.

Pulleys draving Strippers 14" diameter.

 $180 \times \frac{14}{16} = 168$ revolutions of Nos. 3 and 4 Strippers per minute.

168 = 32·10 - 5392·80 inches = 449·40 feet, surface speed per minute.

Doffer 15 3 diameter at centre of pins = 47" 61 circumference

Cyr. rm.
$$180 \times 50 \times 23 \times 26 = 14.23$$
 revolutions of doffer per minute. $75 \times 60 \times 84 = 14.23$ revolutions of doffer per minute.

 $14.23 \times 47.61 = 677.4903$ inches = 65.4575 feet, surface speed per minute.

Drawing Roller 4" diameter = 12":56 circumference.

Cyl. Pin.

180 \times $\frac{60}{7}$ = 120 revolutions of drawing roller per minute.

 $120 \times 12.56 - 1507.2$ inches = 125.6 feet, surface speed per minute.

Delivering Roller 4" diameter = 12" 56 circumference.

Cvl. Pin

180 \times 50 \times 23 $\stackrel{\bullet}{=}$ 115 revolutions of delivering roller per minute.

 $115 \times 12.56 = 1444.40$ inches = 120.36 feet, surface speed per minute.

Plaiding Roller 4" diameter = 12.56 circumference

Cvl. Pin.

180 \times 50 \times 32 \times 32 \times 46 = 9.07 revolutions of plaiding roller per minute, 104 \times 104 \times 90 \times 48

 $9.07 \times 12.56 = 113.9192$ inches = 9.4932 feet, surface speed per minute.

No. 1 Tin Roller 10" diameter - 31:41 circumference.

Cyl. pin.

 $180\times50\times23\times26\times84\times46\times84$ -9.38 revolutions of No. 1 tin roller per minute. $75\times60\times84\times72\times90\times76$

 $9.38 \times 31.41 = 294.6258$ inches = 24.5521 feet, surface speed per minute.

No 2 Tin Roller 8" diameter = 25:13 circumference

Cyl. Pin.

 $\frac{180\times50\times23\times26\times84\times746\times73}{75\times60\times84\times72\times90\times60}=10.32$ revolutions of No. 2 tin roller per minute,

 $10.32 \times 25.18 = 259.3416$ inches = 21.6118 feet, surface speed per minute.

Foed Roller	$\frac{180 \times \text{cyl. p.} \times 32 \times 32}{104 \times 104 \times 90}$	- 189349 Com per m		for revolutions
Nos. 1, 2, 3, and 4 Workers	$180 \ imes \mathrm{eyl.} \ \mathrm{p.} \simeq 23 \ imes 26 \ imes 84 \ imes 46$ $75 \ imes 60 \ imes 84 \ imes 72 \ imes 90$	- ·169802	"	"
Nos. 1 and 2 Strippers -	180 ×cyl. p.	-10.0	,,	n
Nos. 3 and 4 .,	180 × cyl. p.	12.0	"	"
Doffer · · -	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	•284761	,,	"
Drawing Roller	180 × cyl. p. 75	_ 2·4	17	"
Delivering Roller	180 × cyl. p. + 23 75 × 24	. 2.3	,,	"
Plaiding Roller	180 xeyl p. x 32 x 32 x 46 104 x 104 x 90 x 48	181459	11	n
No. 1 Tin Roller	189	987676	"	"
No. 2 " "	180 × cyl. p. × 23 = 26 × 84 × 46 × 75 × 60 × 84 × 72 × 90 ×		,,	,

		Cylinde 40 To	r Pinion eoth.	Cylinde 42 To		Cylinde 44 T		Cylinde 46 T		Cylinder 48 To		Cylinder 50 To	r Pinion seth.	
			Surface Speed.	Reva.	Surface Speed	Reva.	Surface Speed.	Revs.	Surface Speed.	Rova.	Surface Speed	Rive	Surface Speed.	Rova
			Feet.		Feet.		Feet.		Feet.		Foet.		Feet.	
Speed of	f Cylinder per n	inute.	2328-15	180	2328-15	180	2328.15	180	2328-15	180	2328-15	180	2328-15	180
**	Feed Roller	11	8.1735	7:5739	8 5821	7.0526	8.0908	8:3313	9:3995	8.7100	9-5082	0 0587	10:2169	94674
,,	Workers	11	14:7782	6.7920	15 5171	7:1816	16-2560	7.4712	16 9949	7:8108	17 7339	8 1504	18:4730	B 4901
11	Nos. 1 & 2 Strippers	1)	447'76	140	447:76	140·	447 76	140	447.76	140·	447:76	140	447.78	140
"	Nos. 3 & 4	şı	449:40	168	449-40	168	449.40	168.	449-40	168.	449 40	165	449 40	168
1)	Doffer	"	45 1914	11.3904	47 4509	11.9599	49 7108	12 5294	51 9702	13 0990	54 2297	13 6658	56-4892	14-2880
1)	Drawing Roller	11	100:48	96 0	105 504	100.8	110-528	105 6	115 352	110.4	120-576	115 2	125 60	120.0
,,	Delivering Roller	,,	96 29	92 0	101-108	96.8	105-922	101-2	110.787	105-8	115.552	110 4	120.36	1150
11	Plaiding Roller	13	7 5970	7 2588	7:9763	7.6212	8 3566	7:9841	8.7366	8 3 171	9 1164	8 7100	9 4963	9:0729
1)	No. 1 Tin Roller	11	19:6495	7:5070	20 6319	7.8823	21 6145	8-2577	22.5968	8.0380	23 5794	9'0081	24.5820	9 8838
,	No. 2 ,,	11	17 3357	8 2781	18:2024	8.6920	19.0692	9.1059	19.9360	9.5198	20:6028	9 9337	21.6695	10 3476

The speeds under this pinion are fractionally different in some cases from those already given, caused by

• The

CYLINDER PINION 50 TEETH.

speed of the	Feed Roller to the ('ylinder is as	1	t
")	Workers ,	1	,,
93	Nos. 1 & 2 Strippers,,	ì	11
3)	Nos. 3 & 4 ,, ,,	1	11
1)	Doffer	1	"
11	Drawing Roller ,,	1	11
 11	Delivering Roller ,,	1	11
"	Plaiding Roller ,,	1	,
"	No. 1 Tm Oylinder "	1)
11	No. 2	1	,
•	Workers to Nos. 1 and \$ Strippers	1	,
) 1	, to Nos. 3 and 4 ,,	1	,

The speed of the workers can be changed without affecting the other roller speeds as under:

ť														
ţı	Speed (Cylinde 180	T	Pin. 4()	۸					Worker hange pinion. 	± ·11765	Constant	No. with	a 40 T.	Cylinder Pinion.
	180	ĸ							> C.P. × 90	. 15503		"	42	,,
	180			٠-					s, C.P.	·16241		,,	44	"
	180				60 23				, G P 90	16980		*1	46	"
	180	Y					26 84		C. P. > 90	- 17718	i	"	48	35
	180	አ 		-					C.P.	- 18456	;	"	50	,
	180				23 60				C.P. 90	19195	i	,,	52	1 /
	180	1			23 60		26 84		. С.Р. « 90	·19933		"	54	11
	180	× -							л С.Р. л 90	- •20671		"	56	"
	180	×			-	- -		-	 × C.P. × 90	21409	,	"	58	"
	180	×					-	-	× C.P. × 90		5	n	60	"

•

	Shell to Cylinder,			1"
	Feed Roller to Shell,		***	136
•	., Cylinder,	• • • • • • • • • • • • • • • • • • • •		No. 16
	No. 1 Worker to Cylinder,		. ,.	,, 14
	,, 2 ,, ,,			,, 16
	,, 3 ,, ,,		•	" 16
SETTING OF FINISHER	, 4 , ,			,, 16
	" 1 Stripper, "			" 16
	,, 1 ,, ,,			" 16
	., 3 ,, ,, .	•••		,, 16
	., 4 ,, ,,			,, 16
	Between Workers and Stri	ppers,		,, 16
:	Doffer to Cylinder,			, 10
}	" Drawing Roller,			,, 10

SPECIFICATION OF PINS.

		•	· Prich,	Staves.	Rows.	Pins.	Size of Pins.	Longth of Pins out
Cylinder, - ·	71" ×	48"	$_{16}^{7} \times _{16}^{7}$	120	9	55	No. 15, 5"	ម្ចា <u>"</u> មន្ត្
Feed Roller, -	71 ×	$2\frac{1}{2}$	3 x 3	4	8	186	,, 14, 1½	ä
No. 1 and 2 Strippers,	71 x	11	, x , 7	30	7	82	,, 14, 1½	ก"ัช
" 3 and 4 "	71 ×	9	ä x ä	3 6	7	63	,, 15, 11	y/2
" 1 and 2 Workers,	71 ×	7	3 × 3 .	30	7	63	., 14, 11	16
" 3 and 4 "	71 x	7	16 × 16	30	8	75	" 15, 1½	18
Doffer, - ·	71 ×	: 14	" × }	34	11	140	" 16, 1	34

Pulleys, 24", Cylinder Pinion, 50 Teeth, Stripper Driving Pulley, 14" diameter, 10 ends into 1.

$$\frac{3}{16}$$
 $\frac{4 \times 104 \times 96}{52 \times 32 \times 28 \times 44} = 13.8306 \text{ draft.}$

C.P. C.P.

 $4 \times 60 \times 84$ 2.2243 draft between doffer and drawing roller. This draft is only necessary for the delivery of material between doffer and drawing roller, but is not 23 × 26 × 15 Å required in working out the draft between the feed and drawing rollers. C.P. din. of doff.

Change Pinions	20	22	24	26	28	30 T.
Drafts	2.8916	2 6287	2 4096	2:2243	2 6654	1.9277

= 413.08095 Constant No. for draft with a 30 T. change pinion on C.P. C.P.

DRAFTS.

	r				CHAN	E PINI	ons on	,			
Change Pinion on	20	22	24	26	25	30	32	34	36	38	40 T.
30 Teeth	20.6540	18:7764	17 2117	15.8877	14:7528	13 7693	12 9057	12:1454	11:4744	10 8705	10-3270
32 ,.	19:3629	17:6026	16:1857	14 8945	13 8306	12 9086	12 1018	11 3899	10 7571	10-1910	9.6811
34 ,,	18-2239	16:5671	15.1862	14.0163	13 0170	12:1492	11:3899	10 7199	10 1243	9 5915	9.1119
. 86 ,.	17:2114	15 6467	14:3428	13.2895	12-2939	11-4743	10.7571	10:1243	9'5619	9.0686	8.6057
88 ,,	16·305E	14.8232	13-5880	12 5427	11-6468	10%704	10 1910	9 5915	9:0586	8.5816	8 1 5 2 8
40 ,,	15-4908	14:0821	12.9088	11-9156	11.0645	10:3268	9 6814	D-1119	8:6057	8-1528	7:7451
	1	1			1				;	;	

SPECIFICATION AND SPEEDS OF FINISHERS (Single Doffer).

Cylinder 6' × 4'-4 Workers, 4 Strippers, 1 Doffer, Doffs with leather rollers.

Pulleys, 24" diameter, 6" broad, 2]" bore

Pulleys driving Strippers, 14 ,, 4 ,, $2^{f q}$,

Pulley Seats on Strippers 11 dia.

Wheel , workers 11

., ,, doffer 14

., , feeder 1]

,, drawing roller 11"

" , delivering , 11

,, " tin rollers 1⅓

*			Under wood	Over wood.	Over staves.	Centre to Centre of pins	Over staves.	Centre to Centre of pins.
Cylinder Ring,			$43\frac{1}{2}$ " din.	48" din.				154·90" cir.
Nos. 1 and 2 Str	ipper Rings	ı	8 <u>1</u> "	11 "	117 .,	121 .,	37:30 .,	38.09 "
Nos. 3 and 4	*1	•••	7 ,.	9 .,	97,	10] "	31.02 "	31.80 ,
Worker	"		41/2	7 .,	8 ,,	8,5 .,	25 13 "	26.11 "
Doffer Rings,			11 .,	11 "	147 .,	15 3 ,,	46 73 ,,	48.10 "
Feeder			21	,,	35 .,	4 ,,	11.38 "	12.56 ,,

Tm Rollers 10° diameter, 31.41'' circumference, and 8'' diameter = $25^{\circ}13''$ circumference.

Drawing Rollers 4" dia. = 12.56

Delivering Rollers 4" = 12.56

Plaiding Roller 4" = 12.56

^{*}Note. -These diameters are from my own measurements. They differ, however, very little from a Fairbairn Specification.

Cylinder Pinion 50 teeth, 11" bore.

 $\frac{1}{6}$ $\frac{163.1 \times 28\frac{1}{24}}{24}$ = 193.68 revolutions of cylinder per minute.

Cylinder 49 4" diameter at centre of pins - 154.9" circumference.

193 68 × 154 9 = 30001 032 ins. = 2500 086 ft.— surface speed per minute.

Feed Roller 4" diameter at contre of pins = 12.56" circumference.

Cyl. Pin.

 $\frac{193.68 \times 50 \times 32 \times 32}{104 \times 104 \times 90} = 10 \ 18 \text{ revolutions of feed roller per minute.}$

10:18 × 12:56 = 127:8608 ins. - 10:65 feet-surface speed per minute.

Nos. 1, 2, 3, and 4 Workers, 8 1 d' diameter at centre of pins 26:11" circumference.

Cyl. pln. 193 68 \times 50 \times 23 \times 26 \times 84 \times 46 \rightarrow 9 13 revolutions of workers per minute. 75 \times 60 \times 84 \times 72 \times 90

 $9.13 \times 26.11 = 238.3843$ ins. = 19.86 ft.—surface speed per minute.

Nos. 1 and 2 Strippers 123" diameter at centre of pins = 38:09" circumference.

Pulleys driving strippers 14" diameter. Pulley on end of strippers 18" diameter.

 $\frac{193.68 \times 14}{18}$ - 150.64 revolutions of Nos. 1 and 2 strippers per minute.

 $150.64 \times 38.09 = 5737.8776$ ins. = 478.1564 ft.—surface speed per minute.

Nos. 3 and 4 Strippers 101" diameter at centre of pins - 31.80" circumference.

Pulleys driving strippers 14" diameter. Pulleys on end of strippers 15" diameter

 $\frac{193.68 \times 14}{16} = 180.76$ revolutions of Nos. 3 and 4 strippers per minute.

180.76 × 31.80 = 5748.168 ins. = 479.014 ft. -- the surface speed per minute.

Doffer 15 3" diameter at centre of pins = 48 10" circumference

Cyl. Pin. 193.68 \times 50 \times 23 \times 26 = 15.32 revolutions of doffer per minute. $\frac{75 \times 60 \times 84}{1000} \times 84$

15.32 x 48.10 = 736.8920 ins. = 61.4076 feet—surface speed per minute.

Drawing Roller 4" diameter = 12:56 circumference.

 $129.12 \times 12.56 - 1621.7472$ ins. = 135.1456 feet—surface speed per minute.

Delivering Roller 4" diameter = 12.56 circumference.

Cyl. Pin.

 $\frac{193.68 \times 50 < 23}{75 \times 24} = 123.74$ revolutions of delivering roller per minute.

123.74 x 12.56 = 1554.1744 ins. = 129.5145 feet—surface speed per minute.

Plaiding Roller 4" diameter = 12.56 circumference.

Cvl. Pin.

 $\frac{193.68\times50\times82\times32\times46}{104\times104\times90\times48}=9.76 \text{ revolutions of plaiding roller per minute,}$

 $9.76 \times 12.56 - 122.5856$ ins. - 10.2154 feet—surface speed per minute.

No. 1 Tin Roller 10" diameter = 31.41 circumference.

Cyl. pin.

193 68 \times 50 \times 23 \times 26 \times 84 \times 46 \times 84 \times 75 \times 60 \times 84 \times 72 \times 90 \times 76 \times 70 revolutions of No. 1 tin roller per minute.

 $10.09 \times 31.41 = 316.9269$ ins. = 26.4105 feet—surface speed per minute.

No 2 Tin Roller 8" diameter = 25:13" circumference.

Cyl. Pin.

 $\frac{1936\cdot8\times50\times23\times26\times89\times46\times73}{75\times60\times84\times72\times90\times60}=11\cdot11\text{ revolutions of No. 2 tin roller per minute.}$

 $11.11 \times 25.18 = 279.1943$ ins. = 23.2661 feet—the surface speed per minute.

		r Pinion eeth		r Pinlon leath.		r Pinion eeth.		r Pinion ecth.		r Pmion eeth.		r Pinion eeth.		r Pinion ceth.	Cylinde 58 To			r Pinion eeth.
	Surface Speed	Revs.	Surface Speed.	Revs.	Surface Speed.	Reva.	Surface Speed.	Reva,	Surface Speed.	Revs.	Surface Speed.	Reva.	Surface Speed.	Revs.	Surface Speed.	Revs.	Surface Speed.	Revs.
	Feet, 2500 086	193-68	Feet. 2500:086	193-68	Feet. 2500:056	193.68	Feet. 2500:086	193-68	Feet 2500 086	193.68	Feet. 2500 086	193-68	Feet, 2500 086	193-68	Feet, 2500 086	193 68	Feet. 2500 086	198.68
j	9:3824	8:964	9 809	9:371	10-2353	9 779	10.66	10.186	11 0883	10.693	11:5148	11:001	11.9412	11:408	12:3677	11.816	12.7942	12-223
3	17 491	8:038	18 2861	8:404	19:0811	8 769	19 8761	9:135	20:6712	9:500	21:4662	9.865	22-2613	10.231	23.0563	10.596	28-8513	10.962
	478 1664	150 64	175:1564	150.64	478-1564	150:64	478-1564	150-64	478·1564	150.64	478-1564	150 64	478-1564	150.64	478-1564	150.64	478 1564	150-64
	144 0024	139-88	441 0024	139-88	444 0024	139 88	114 0024	189-88	414:0024	139-88	444 0024	139.88	444-0024	139-88	444 0024	139.88	444 0024	139-88
	179-014	180 76	479 014	180.76	479.014	180 76	479:014	180.76	479 014	180.76	479 014	180.76	479 014	180 76	479.014	180.76	479.014	180.76
6	444 18184	167 856	441:8184	167:856	444-8184	167-856	444 8184	167-856	444.8184	167 856	444 8184	167-856	444-8184	167:856	444-9184	167-856	444-8184	167-856
J8	51-0387	13:481	56:4951	14:094	58-9514	14:707	61:4078	15-820	63-8641	15.932	66:3204	16.545	68.7768	17:158	71 2331	17:771	73-6895	18:384
08	118-9281	113:6256	124:3339	118:7904	129 7397	123 9552	13 5 1456	129-12	140-5514	134-2848	1 15 9572	139 4496	151 -8630	144-6144	156 7688	149'7792	162-1747	154-944
16	113 9727	108:5912	119-1533	118-8408	124 3389	118'7904	129:5145	128:74	134-6951	128-6896	139 8757	133.6392	145 0563	138-5888	150-2369	143 5384	156-4175	148-468
2	8 991	8:591	9.400	8-9815	9.809	9:372	10:2183	9.7625	10.627	10.153	11 085	10.5435	11:444	10.934	11.853	11.8245	12 262	11.715
85	23:249	8 8822	24 306	9-2660	25:362	9.6897	26:4191	10.0935	27:476	10 4972	28 538	10·00ù9	29.590	11:3047	30.646	11:7084	81.708	12-1122
18	20:482	9.78076	21:413	10-22534	22:344	10:66992	28-275	11.1145	24 206	11:55908	25.187	12:00366	26:068	12:44824	26.999	12-89282	27-930	13:3374

Pulleys 24" diameter, Cylinder Pinion 50 teeth.

Oylinder is as 1 to 234:529	The speed of	the Delivering Roller to the	Cylinder i	s as 1 to 19:3	02
1 ,, 125.783	, n	Plaiding Roller	,,	l ,, 244·6	67
1 " 5.228	ļ	No. 1 Tin Cylinder	,,	1,, 94.6	31
l " å·630	11	No. 2 ,	1)	1 ,, 107.4	15
1 " 5.219	., Wo	rkers to Nos. 1 & 2 Strippe	ers 14" pulle	ey 1., 24·0)56
1 " 5· 620	"	19	13" "	1 " 22.3	3 8
1 ,, 40.712	,	" Nos. 3 & 4 Stripper	8 14″,	1 ,, 24·1	l
1 ,, 18.499	,,	", "	13" ,,	1 " 22.3	79

roed Roller	198°68 × Cyl. pin. × 32 × 32 104 × 104 × 90	·20,373 Cons	tant No. f	or revs.per min.
Nos. 1, 2, 8, and 4 Workers	193 (N × (*.p. × 23 × 26 × 84 × 46 75 × 60 × 84 × 72 × 90	. 18,270	"	11
Nos. 1 and 2 Strippers	193 68 × C. pin. 18	<i></i> 10·76	,,	,,
Nos. 3 and 4 ,, -	193 68 x C.pin,	12-912	,,	"
Doffer · · ·	193·68 × C. pin. × 23 × 26 75 × 60 × 84	•3061	'n	11
Drawing Roller -	193·68 × C.pin.	2.5824	1.	91
Delivering Roller -	193 68 × C. pin. × 23 75 × 24	- 2:4748	,,	1)
Plaiding Roller .	193 68 × C. pin. × 32 × 32 × 46 104 × 104 :: 90 × 48	19,525	**	11
No. 1 Tin Roller .	193 68 × C.p. ×23 × 26 × 84 × 46 × 8 75 × 60 × 84 × 72 × 90 × 7	20.187	17	n
No. 2 ,, ,, -	103·68 × C.p. × 28 × 26 × 84 × 46 × 7 75 × 60 × 84 × 72 × 90 × 6	3 ·22.229	11	n

The Speed of the Workers can be changed without affecting the other parts of the Finisher as under:—

Speed of Cyl Cylinder Pin Worker,				
$193.68 \times 40 \times 23 \times 26 \times 84 \times \frac{\text{Change}}{\text{Plulon}}.$ $75 \times 60 \times 84 \times 72 \times 90$	- ·16,887 Co	nstant No. wi	th a 40 T.	Cylinder Pinion.
193 68 \times 42 \times 23 \times 26 \times 84 \times C.P. 75 \times 60 \times 84 \times 72 \times 90	- 15,681	,,	42	3 1
$\frac{198.68 \times 44 \times 23 + 26 \times 84 \times C.P.}{75 \times 60 \times 81 \times 72 \times 90}$	- ·17,476	"	44	"
193·68 < 46 × 23 × 26 × 84 × C P. 75 × 60 × 84 × 72 × 90	18,270	,•	46	"
193·68 × 48 × 23 × 26 × 84 × C.P. 75 × 60 × 84 × 72 × 90	- 19,064	"	48	"
193 68 × 50 × 23 × 26 × 84 × C.P. 75 × 60 × 84 × 72 × 90	-19,859	,,	50	91
193 68 × 52 × 23 × 26 · · 84 × C.P.	-= ·20,653	,	52	,,
75 × 60 × 84 × 72 × 90 193 68 × 54 × 23 × 26 × 84 × C.P.	-21,417	"	54	,,
75 × 60 × 84 × 72 × 90 193:68 × 56 × 23 × 26 × 84 × C.P.	22,242		56	
75 > 60 × 84 × 72 × 90 193 68 × 58 × 23 × 26 × 84 × C.P.*	•	n		"
75 × 60 × 84 × 72 × 90 193 68 × 60 × 23 × 26 × 84 × C.P.	•23,036	19	58	"
75 × 60 × 84 × 72 × 90	 ·23,83 0	**	60	"

	Shell to	o Cylinder,				•	1 "
	Feed R	oller to Shell,		191			14
	,,	Cylind	ler,				No. 16
	No. 1	Worker to Cyl	linder,				, 14
	No 2	1*	"	•••			,. 14
	No. 3	11	.,	• •			,, 16
SETTING OF FINISHER	No. 4	"	,,		•••		., 16
	No. 1 8	Stripper,	,,	***		٠.	,, 14
	No. 2	17	,,	***			,, 16
	No. 3	•	,1	***		• •	,, 16
	No. 4	31	31	***	•••		,, 16
	Betwee	n Strippers at	nd Worke	rs,		•••	,, 16
	Doffer	to Cylinder,				•••	,, 14
	Doffer	to Drawing R	oller,	•••	•••		,, 10
	SPEC	IFICATION	OF P	INS.			
Cylinder - ·	71" × 48"	$_{16}^{7} \times _{16}^{7}$	120	9 55	No.	14	?" 8
Feed Roller · ·	$71 \times 2\frac{1}{2}$	$\frac{3}{8} \times \frac{3}{8}$	4	8 186	31	14	11
No. 1 Stripper -	71 × 11	$_{16}^{7} \times _{8}^{3}$	30	7 82	11	14	Ĭ,
No. 2 ,,	71 × 11	7 16 × 8	30	7 82	**	14	Ã
No. 3 ,, -	71×9	3 × 3	36	7 63		15	, 8
No. 4 ,;	71 × 9	3 × 3	36	7 63	"	15	7
No. 1 Worker -	71 × 7	3 × 3	30	7 63	٠,	13	13
No. 2 " -	71×7	18 × 16	30	8 75	11	14	11
No. 3 " -	71 × 7	18 × 18	30	8 75	1)	14	11
No. 4 ,, -	71 × 7	5 × 15	. 30	8 75	1)	14	1}

1×1

34

11 140

,, 16

1

- 71 × 14

Doffer,

Pulleys 24", Cylinder Pinion 50 Teeth, Stripper Driving Pulley 14" diameter, 10 ends into 1.

This draft is only necessary for the delivery of material between dosser and drawing roller, but is not required in working out the draft between the feed and drawing roller.

Change Pinious	20	22	24	26	28	30 Т.
Drafts	2.8856	2.6233	2 4017	2:2197	2.0611	1.9237
4 × 104 × 104 : 75 × 30 — c, r, -c,	 43	2·64 Cons	stant No. fe	or draft wi	th a 30 T	'. Change Pinion
4 × 104 × 104 : 75 × 82 — GP, G	40 4	5·6	n	,,	32	**
4 × 104 × 104 : 75 × 34 —	= 38 4	1.741	11	"	34	**
4 × 104 × 104 : 75 × 36 — C.P. C.	$\frac{\times 90}{4} = 36$	0.533	,,	,,	36	,,
4 × 104 × 104 75 × 38 C.P. C.	$\frac{\times 90}{4} = 34$	1 557	1•	,,	38	"
4 × 104 × 104 	× 90 4 = 32	4.48	11	11	40	'n

DRAFTS.

		CHANGE PINIONS ON.									
Change Pinions on	20	22	24	26	28	30	32	34	36	38	40 T,
30 Teeth	21.632	19.6636	18 0260	16.64	15:4514	14.4213	13.52	12.7247	12:0177.	11.3852	10.816
32 ,,	20.28	18:4363	16.9	15.8	14.4857	13.25	12:675	11-9294	11 -2666	10-6736	10-14
34 ,,	19.087	17:3518	15.9058	14.6823	13.6336	12.7247	11.9294	11.2276	10.6039	10:0458	9.5435
36 ,.	18.0266	16:3878	15.0222	13.8666	12.8761	12.0177	11.2666	10.6039	10' 0 148	9-4876	9.0188
88 .,	17:0778	15.5253	14-2315	13.1368	12-1984	11:3852	10.6736	10:0457	9.4878	8.9888	8.5389
40 ,,	16.224	14.749	18.52	12.48	11.5585	10.816	10-14	9.5485	9-0133	8.5889	8-112

LAP MACHINE.

End elevation showing driving end.

Scale 4th.

(For Diagram see page 100).

A	Friction disc for driving bowl,	28" dia.
B	Bowl sliding on vertical shaft,	6}" diu.
0	Bevel pinion on vertical shaft,	16 teeth.
D	Bevel wheel on stud pinion,	60 teeth.
E	Stud pinion,	12 teeth.
F	Wheel for driving bobbin,	84 toeth.
G	Rack pinion,	11 teeth.

LAP MACHINE.

End elevation showing end opposite to driving pulleys.

SCALE Ath.


(For Diagram see page 100).

A	Rack pin	ion,	•••	 ,	11 teeth.
В	Wheel or	ı rack p	oinion shaft,		100 teeth.
C	Pinion or	hand	wheel,	 	14 teeth.
D	Worm w	heel for	ringing bell,	 •••	90 to 100 teeth.
Speed	Pulleys,		•••	300	O revolutions.
Fricti	on Plate,		•••	28	8" diameter.
,,	Ball,				7″ ,,
Bevel	Pinion,	•	•••	1	6 teeth.
,,	Wheel,	•••	•••	6	0 teeth.
•	Pinion,		•••	1:	2 ,,
•	Wheel.			8	4 on ball.

100 LAP MACHINE.


LAP MACHINE.

END ELEVATION SHOWING DRIVING END.

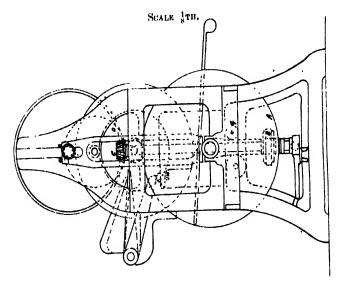

LAP MACHINE.

END ELEVATION SHOWING END OPPOSITE TO DRIVING PULLEYS.

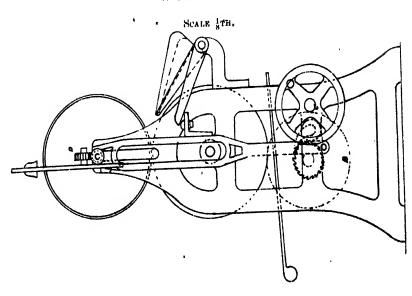

DIMENSIONS OF CARD CYLINDERS AND ROLLERS

According to a Fairbairn Specification

SINGLE DOFFER BREAKER CARD.

NAME OF R	NAME OF ROLLER.			Dia. over the staves.	Dia. to centre of pins.
and the second s				,	, ,,
Cylinder	•••	•••	4 ft.	4-13	4 114
Feeder		••	9 ins	10]	101
2 Workers	•••	•••	7 ins.	83	87
2 Strippers	,	•••	ll ins.	121	123
Doffer			14 ins	15	$5\frac{\hbar}{10}$
		_			<u> </u>

SINGLE DOFFER FINISHING CARD.

		, ,	, ,,
Oylinder	. 4 ft.	4-11	4 -133
Feeder	. $2\frac{1}{2}$ ins.	32	4 1
1st and 2nd Workers	. 7 ins.	8	815
lst and 2nd Strippers	. 11 ins.	12	1237
3rd and 4th Workers	. 7 ins.	8,	81,0
3rd and 4th Strippers	. 9 fns.	10	10,7
Doffer	14 ius.	147	$15\frac{6}{82}$

DOUBLE DOFFER BREAKER CARD.

		- 1	-		
		1		, ,,	, ,,
Cylinder	•••	;	4 ft.	$4 - 1\frac{3}{8}$	4111
Føeder		;	18½ ins.	195	20
Workers .	••	•••	14 ius.	$15\frac{1}{8}$	15½
Strippers		;	14 ins.	15 ½·	153
1st Doffer	•••		14 ins.	15	$15_{^{16}6}$
2nd Doffer	••		14 ins.	$14\frac{7}{8}$	15^{-5}_{32}
				;	

DOUBLE DOFFER FINISHER CARD.

		}	' "	, "
Cylinder	•••	4 ft.	11	4 1 1 2
Feeder	•••	ins.	5]	5%
lst Worker	•••	14 ins.	15	15_{16}^{6}
1st Stripper		14 ins.	15	15,7
2nd and 3rd Workers		14 ins.	15	1570
2nd and 3rd Strippers		14 ins	15	$15_{3}^{7}_{2}$
1st Doffer	,	14 ins.	14 %	15_{32}^{5}
2nd Doffer		l4 ins.	14%	151

DETAILS OF COVERING.

(Recommended by Fairbairn)

SINGLE DOFFER BREAKER CARD FOR WARPS.

NAME OF ROLLER.	No. of W.g.	Total ength of pins.	Pitch of Pius.	Length of pins out.
				, -
Cylinder	12	ı	g and g	.5 1 6
Feeder	12	$1\frac{1}{2}$	$_{1}^{7}_{6}$ and $_{1}^{7}_{6}$	
2 Workers	13	11/2	7 and 7	
2 Strippers	13	1]	$\frac{1}{2}$ and $\frac{1}{2}$	
Doffer	14	1 }	$\frac{n}{8}$ and $\frac{n}{8}$	

SINGLE DOFFER FINISHER FOR WARPS.

	1	,,	" "	:
Cylinder	14	7 8	$\frac{15}{32}$ and $\frac{15}{32}$	i
Feeder	13	11	$^{1.3}_{3.2}$ and $^{1.3}_{3.2}$	1 1
1st and 2nd Workers	13	11/2	$\frac{13}{32}$ and $\frac{13}{32}$	i
1st and 2nd Strippers	13	11	$\frac{1}{3}\frac{5}{2}$ and $\frac{1}{3}\frac{5}{2}$	
3rd and 4th Workers	11] ⁵	$\frac{3}{8}$ and $\frac{3}{8}$	1.0
3rd and 4th Strippers	14 •	1 !	$\frac{7}{16}$ and $\frac{7}{16}$	37
Doffer	15	1 ;	$\frac{11}{32}$ and $\frac{11}{32}$	9 3 2

SINGLE DOFFER FINISHER FOR WARPS.

			"	" "
Cylinder	•••	15	Z	16 and 18 39
Feeder	•••	14	11	g and g
1st and 2nd Workers	••	14	11	g and g
1st and 2nd Strippers	•••	14	1 🛔	178 and 176 372
3rd and 4th Workers	•••	15	11/2	is and is
3rd and 4th Strippers	•••	15	1 }	and 3 grand 3
Doffer	•••	16	1	' 15 and 1 32

SINGLE DOFFER BREAKER FOR WEFTS.

 	•		ī n			
				#	" "	"
Oylinder		•••	F1	118	₹ and ₹	3 2
Feeder	•••	•••	11	11	1 and 1	1 3 3 3
2 Workers	•••	···	12	15	½ and ½	13
2 Strippers	•••	•••	12	11	$\frac{1}{2}$ and $\frac{1}{2}$	88
Doffer	•••	•••	13	11	17g and 17g	11
				l .	1	CALL CO.

	SINGLE	DOFFER	FINISHER	FOR	WEFTS.
--	--------	--------	----------	-----	--------

			,		N N 1	
Cylinder	٨	•••	13	1	hand h	32
Feeder	•••	•••	12	11	$\frac{7}{18}$ and $\frac{7}{18}$	3
1st and 2nd Wo	rkers		12	13	16 and 16	10
fist and 2nd Stri	ppers	•••	13	11	$\frac{1}{3}$ and $\frac{1}{3}$	* 33
3rd Worker	•••	•••	13	1 1/2	g and g	. 10
3rd Stripper	•••	•••	14	14	$\gamma_{\rm d}^7$ and $\gamma_{\rm d}^7$	3 5
Doffer	•••		15	1	g and g	9 9 9

DETAILS OF COVERING
DOUBLE DOFFER BREAKER CARD FOR WARPS.

NAME OF ROLLER.	No. of w.g.	Total Length of Pins.	litch of Pins.	Length of Pins out.
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		,,	" "	"
Cylinder	12	1	å and å	18
Feeder	12	11	$\frac{7}{16}$ and $\frac{7}{16}$	2 2
2 Workers	13	11	in and in	1 1
2 Strippers	13	11	j nad j	1
let Doffer	14 •	11	g and g	 1.6
2nd Doffer	15	1	14 and 11	282

DOUBLE DOFFER FINISHER FOR WARPS.

		<u></u>			1
•			"	" "	"
Cylinder '	•••	14	8	15 and 15	35
Feeder	•••	13	1 1	$\frac{13}{32}$ and $\frac{13}{32}$	3
lst Worker	•••	13	11	13 and 13	16
1st Stripper	•••	13	11	15 and 15	372
2nd and 3rd Workers	•	14	11	g and g	5 18
2nd and 3rd Strippers	•••	14	14	, and 70	375
1st Doffer		15	1	$\frac{1}{3}\frac{1}{2}$ and $\frac{1}{3}\frac{1}{9}$	n a
2µd Doffer		16	1	,5 and ,5	1

DOUBLE DOFFER FINISHER FOR WEFTS.

	ļ		1 .	4	www.companie land
Cylinder	•	15	7	" " 16 and 16	3 a 5 .
Feeder	•••	14	11	i and i	8
1st Worker	•••	14	13	å and ä	16
1st Stripper	••• , .	14 .	11	18 and 18	32
2nd and 3rd Workers	•••	15	11	and 5	1 o
2nd and 3rd Strippers	·	15	13	g and g	1 ⁷ 2
1st Doffer	i	16	1	in and 1	8 B B
2nd Doffer '		17	1	dand 1	1

SPECIFICATION OF SINGLE DOFFER BREAKER AND FINISHER STAVES.

The following specifications of single doffer breaker and finisher staves are given as an example of what is actually, working, and also to show the student the correct manner in which to state the particulars of breaker and finisher covering.

It will be observed that this covering is not quite so fine as that shown on the previous pages, which is recommended by Messrs. Fairbairn, Naylor, Macpherson, & Co, Ltd. My experience, however, is that it is fine enough for breaker and finisher producing sliver for hessian warps and wefts.

Breaker, $6' \times 4'$ cylinder. Cylinder cover, $71'' \times 48''$; $\frac{5}{3}'' \times \frac{10}{16}''$ pitch. 3 rounds of 41 staves each. 123 staves, 7 rows, 38 pins, No. 12—1".

Feeder cover, $71'' \times 9''$; $_{1}7''' \times _{1}^{7}6'''$ pitch.

3 rounds of 12 staves each.

36 staves, 6 rows, 54 pins, No. 12--1 $_{1}^{1}$ ''.

(2) Stripper covers, 71" × 11"; ½" × ½" pitch.
 3 rounds of 15 staves each.
 45 staves, 5 rows, 47 pins, No. 13—1".

(2) Worker covers, $71'' \times 7''$: $\frac{1}{2}'' \times \frac{3}{8}''$ pitch. 3 rounds of 10 staves each. • • 30 staves, 7 rows, 47 pins, No. 12-- $1\frac{5}{8}''$.

Doffer cover, $71'' \times 14''$; $3'' \times 10''$ full, pitch.

3 rounds of 17 staves each.

51 staves, 8 rows, 63 pins, No. 14—11.

Finisher, 6' × 4' cylinder.

Cylinder cover, 71" × 48"; 16" × 16" pitch.

3 rounds of 41 staves each.

123 staves, 9 rows, 54 pins, No. 14—18".

Feeder cover, 71" \times $2\frac{\pi}{12}$ "; $\frac{\pi}{3}$ " \times $\frac{\pi}{3}$ " pitch.

3 rounds of 4 staves each.

12 staves, 8 rows, 63 pins, No. 14—1 $\frac{\pi}{3}$ ".

- (2) Stripper covers, 71" × 11"; 176" × 176" pitch.
 3 rounds of 15 staves each.
 45 staves, 6 rows, 54 pins, No. 14—18".
- (2) Stripper covers, 71" × 9"; ⁷₁₆" × ¹₁₆" pitch.
 3 rounds of 12 staves each.
 36 staves, 6 rows, 54 pins, No. 14—-⁷₈".
- (2) Worker covers, 71" \times 7"; $\frac{7}{16}$ " \times $\frac{3}{8}$ ' pitch.

 3 rounds of 10 staves each.

 30 staves, 7 rows, 54 pins, No. 13—13"
- (2) Worker covers, 71" × 7"; 3" × 10" pitch.
 3 rounds of 10 staves each.
 30 staves, 8 rows, 63 pins, No. 14 14".
- Doffer cover, 71" \times 14"; $\frac{5}{18}$ " \times 4" pitch.

 3 rounds of 17 staves each.

 51 staves, 11 rows, 75 pins, No. 16—1".

SPECIFICATION OF DOUBLE DOFFER BREAKER AND \star

Breaker, $6' \times 4'$ cylinder. Cylinder cover, $74'' \times 48''$; $\frac{3}{4}'' \times \frac{7}{4}''$ pitch, 3 rounds of 41 staves each, 123 staves, 5 rows, 31 pins, No. 12—1 $\frac{1}{10}''$.

Feeder cover, $71'' \times 18\frac{1}{2}''$; $\frac{7}{16}'' \times \frac{7}{16}''$ pitch.

3 rounds of 23 staves each.

69 staves, 6 rows, 54 pins, No. 12—1 $\frac{1}{2}''$.

- (2) Stripper covers, 71" × 14"; ½" × ½" pitch.
 3 rounds of 17 staves each.
 51 staves, 5 rows, 47 pins, No. 13—1".
- (,,) Worker covers, 71" × 14"; §" × §" pitch.

 3 rounds of 17 staves each.

 51 staves, 64 rows, 13 pins, No. 13—14".

Doffer cover, 71" \times 14", \S " \times \S " pitch.

3 rounds of 21 staves each.

51 staves, 7 rows, 63 pins, No. 14—1 \S ".

Finisher, $6' \times 4'$ cylinder. Cylinder, $71'' \times 48''$, $\frac{5}{6}'' \times \frac{5}{6}''$ pitch

15 staves, 8 rows, 63 pins, No 14-11".

Feeder cover, $71'' \times 14''$, $\frac{3}{8}'' \times \frac{3}{8}''$ pitch. 3 rounds of 5 staves each.

- (3) Stripper covers, 71" × 14", 3" × 3" pitch.
 3 rounds of 17 staves each.
 51 staves, 4 rows, 32 pins, No. 14--3".
- (,,) Worker covers, 71" × 14", 3" × 3" pitch.

 3 rounds of 17 staves each.

 51 staves, 9 rows, 94 pins, No. 16—1".
- (2) Doffer covers, 71" × 14", ¼" × ½" pitch.

 3 rounds of 17 staves each.

 51 staves, 9 rows, 94 pins, No 16—1".

NOTE.—All the rollers are 71" long over the staves, the cylinder cover is also 71" over the staves; this is owing to the flange of cylinder ends being 4" thick.

The staves are all made in three lengths. This is more convenient than when they are made in two. If any accident happens to the covering, it can often be repaired with much less trouble.

It is of the utmost importance that the covering of cards should be well and carefully screwed on to the cylinder and the other rollers. If a stave gets loose, much damage may and often is done when this happens.

All the staves should be made of the very best beech that can be had, thoroughly clean, free from knots, and well seasoned; should be in stock at least three years.

All the rollers of breakers and finishers should be picked and brushed thoroughly with a steel reenge once a week.

The "shrouding," that is the cast iron plate at both ends of cylinder, should always be kept as close as possible, say barely 10 th clear; this also helps to keep the ends of all the roller covers clean.

Dimensions of screws used to fix on staves—screws for wood—

Oylinder staves, No. $16-1\frac{3}{4}''$ Feeder ,, No. $16-1\frac{1}{2}''$ Stripper ,, No. $16-1\frac{1}{2}''$ Worker ,, No. $16-1\frac{1}{2}''$ Doffer ,, No. $16-1\frac{1}{2}''$

Finisher feed roller screws are 11" × 3" for iron.

As the staves on the covering of the breakers and finishers is a matter of great importance, and is not very easily understood by the beginner, I have thought it best to explain this by an illustration of the different staves. This will very readily bring before the eye of the student the pitch of pin, the angle to pitch, &c., of the staves, the specification of staves in each case being marked upon the illustration. It must be borne in mind, however, that a great many different opinions are held by men of experience as to what is the best specification for breaker and finisher covering, and on this subject we will not attempt to dogmatize. Without doubt there is a great difference of opinion on this as well as upon many other points in connection with jute machinery; and so little has been written upon the subject, that it has not been possible to gather up practical men's opinions as to what has been generally found to be best, and thereby form a general rule for the course to be adopted; and if more had been written on jute machinery, it would have been better for the general good of all concerned—better for the man of experience, as well as for the young men engaged in learning their business.

DETAILS OF COVERING. UP STRIKER SINGLE DOFFER BREAKER FOR WEFTS.

NAME OF R	OLLER		No. of w.g.	Total length of pins.	Pitch of Pins.	Length of pin out
Cylinder			11	118"	3" × 4"	31"
Feeder	••	•••	11	11	½ × €	13
2 Workers	•••	•••	12	15	$\frac{1}{2} \times \frac{1}{2}$	3 2
2 Strippers	•••	•••	12	1]	1 × 1	99
Doffer	•••	•••	13	11	170 × 176	3 1

UP STRIKER SINGLE DOFFER FINISHER FOR WEFTS.

Cylinder	13	1"	$\frac{1}{2}$ " $\times \frac{1}{2}$ "	8
Feeder	12	14	$\frac{7}{16} \times \frac{7}{16}$;
1st and 2nd Workers .	12	112	1 × 1'0	l i
1st and 2nd Strippers .	13	11	15 × 15	13
3rd Workers	13	1 1	3 × 3	
3rd Strippers	14	1 }	7 × 7 1 n	ъ
Doffer	15	1	* * 3	3

COVERING FOR JUTE SNIPPER.


Two Cylinders (Upper and Lower) with 4 Sheets of Staves each.

1st Sheet	•••	38 s	tave	×, 2	row	s, 8	pins,	No 9-13.
2nd ,,	{	80	n	. 3 . 3	"	7 11	,,	10—13. 12—13.
3rd ,,	{	80	"	10 15	1;	22 21	,	$14-1\frac{1}{8}$. $16-1\frac{1}{8}$.
4th ,,	•••	30	"	20	,,	78	,,	18- 7.

BREAKER COVERING.

Stripper Cover 71" × 11"; $\frac{1}{2}$ " × $\frac{1}{2}$ " pitch,


Three rounds of 15 staves each, 45 staves, 5 rows, 47 pins-No. 13, 1"

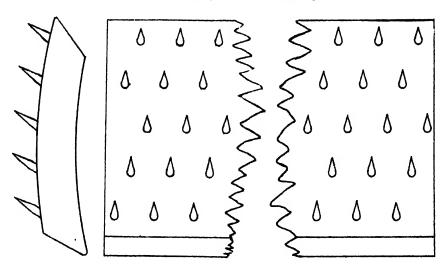

BREAKER.

Worker Cover $71^{\circ} \times 7^{\circ}$; $\frac{1}{2}^{\circ} \times \frac{2}{3}^{\circ}$ pitch,

Three rounds of 10 staves each, 30 staves, 7 rows, 47 pins-No. 12, 15"

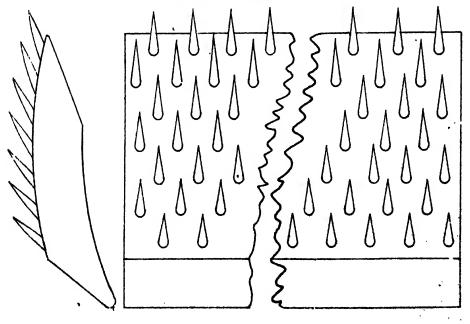


Ħ

BREAKER.

Cylinder Cover 71" \times 48"; $\frac{5}{8}$ " \times $\frac{6}{16}$ " pitch.


Three rounds of 41 staves each, 123 staves, 7 rows, 38 pins-No. 12. 1"

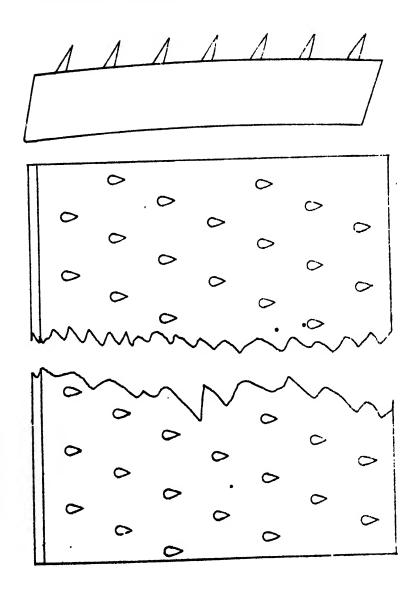

BREAKER.

Feeder Cover 71" \times 9"; $\frac{7}{16}$ " \times $\frac{7}{16}$ " pitch.


Three rounds of 12 staves each, 36 staves, 6 rows, 54 pins—No. 12, 14"

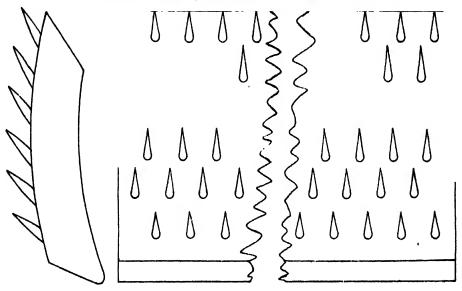

BREAKER.

Doffer Cover 71" × 14"; $\frac{3}{8}$ " × $\frac{5}{16}$ ".

Three rounds of 17 staves each, 51 staves, 8 rows, 63 pins-No. 14, 18".

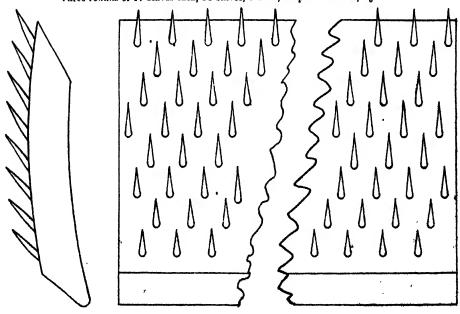


6 # \$

FINISHER.


Cylinder Cover (Single Doffer) 71" \times 48"; $_{16}^{7}$ " \times $_{16}^{7}$ " pitch.

Three rounds of 41 staves each, 123 staves, 9 rows, 54 pins—No. 14, 3

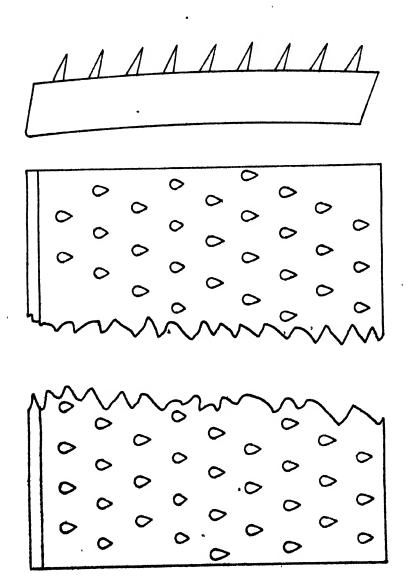

Feed Cover 71" \times $2\frac{7}{16}$ "; $\frac{3}{8}$ " \times $\frac{3}{8}$ " pitch.


Three rounds of 4 staves each, 12 staves, 8 rows, 63 pins—No. 13, $1\frac{1}{6}$.

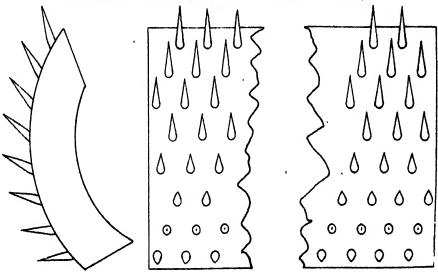

FINISHER.

Stripper Cover 71" \times 11"; $^{77}_{16}$ " \times $^{7}_{16}$ " pitch.


Three rounds of 15 staves each, 45 staves, 6 rows, 54 pins—No. 14, $\frac{\pi}{6}$ ".

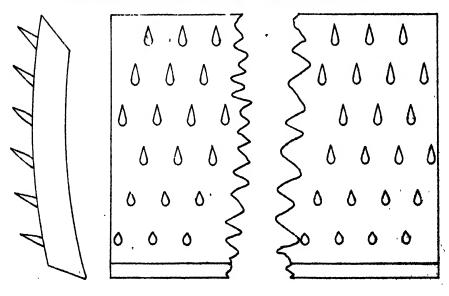

1

Stripper Cover 71" \times 9"; $\frac{7}{16}$ " \times $\frac{7}{16}$ " pitch.


Three rounds of 12 staves each, 36 staves, 6 rows, 54 pins—No. 14, 7".

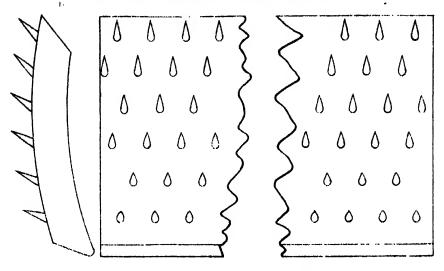

FINISHER.


Worker Cover 71" × 7"; $\frac{7}{10}$ " × $\frac{3}{8}$ " pitch.

Three rounds of 10 staves each, 30 staves, 7 rows, 54 pins—No. 13, $1_{\rm s}^{\rm av}$.

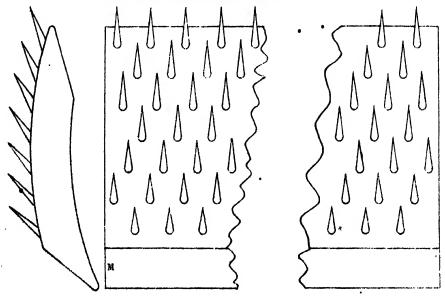

Worker Cover 71" by 7"; $\frac{8}{8}$ " $\times \frac{8}{15}$ " pitch.


Three rounds of 10 staves each, 30 staves, 8 rows, 63 pins—No. 14, 14".

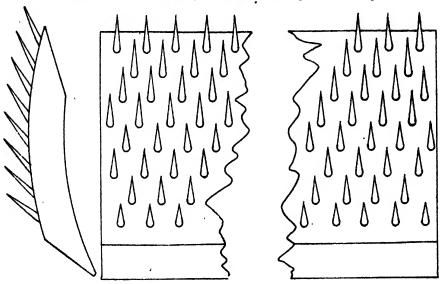

FINISHER.

Doffer Cover 71" × 14"; $\frac{\pi}{16}$ " × $\frac{1}{4}$ " pitch

Three rounds of 17 staves each, 51 staves, 11 rows, 75 pins-No. 16, 1".

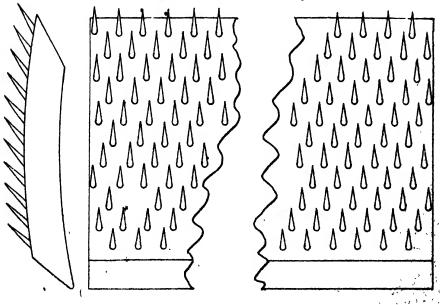

GENERAL INSTRUCTIONS AS TO SETTING* OF BREAKER AND FINISHER CARDS FOR HESSIAN YARNS.

Breaker.

Distance bet		No.	15	w.G.			
Shell of cylin	der, ä"						
Feed roller c	ylinder	•…	•••		11	14	"
lst worker		•••	••		**	11	,,
2nd worker	•••	•••	••		,,	12	"
2 strippers	•••	•••	•••	•••	,,	16	٠,
Doffer	•••	•••	•••		",	15	,,
Drawing roll	er	•••	•••	•••	••	10	,,
Pressing roll	er, 1" off	cylinder.					

Finisher.

Shell—the usual distance is $\frac{5}{10}$ " to $\frac{1}{4}$ " off cylinder.

Feed roller from cylinder and shell				•••	No.	15	W.G.
2 workers	•••	•••	•••		,,	12	٠,
2 "	•••	•••	•••	•••	**	14	,,
4 strippers	•••	•••		•••	.,	16	,.
Doffer		•••	•••		,,	17	,,
Drawing roll	ler, 1″ of	f cylinder	•				
Leather rolle	er				••	10	

In the case of double doffer cards, the only difference would be that on the breaker the bottom doffer would be No. 14 W.G., and top doffer No. 15; and on the finisher card the top doffer No. 16, and bottom doffer No. 17. When the quantity passed over a breaker is more than 12 tons, and over a finisher more than 6 tons, per week, the distance of pin points of rollers from cylinder should be rather greater than indicated.

^{*}Norm.—Card "Seta" are pieces of steel plate usually about 12 inches long and 3 inches broad, and should be stamped No. 10, 12, 14, 16, &c., according to their thickness B.W.G.; if Worker and Stripper are to be set No. 16 between, use No. 16 set, and so on.

UP STRIKER BREAKER CARD.

DRAFTS.

120 feeder wheel \times 120 stud wheel \times 58 stud wheel \times of drawing roller	4" dia.	
20 change × 20 stud pinion × 66 drawing roller wheel working diameter of feeder	× 10½"	

SPEEDS OF WORKERS.

- 52 change × 24 drawing roller pinion × 28 stud pinion × 88\
 doffer wheel × 64 stud pinion × 190 revs. of cylinder ...

 66 drawing roller wheel × 54 stud wheel × 88 doffer wheel
 × 96 stud wheel × 92 worker wheel
 - 13.5 revs. per min. × 29.8" working circumference = 33.5 ft. per min

UP STRIKER FINISHER CARD.

DRAFTS.

120 feeder wheel × 120 stud of drawing roller	wheel × 58	stud whe	el × 4	•	: 12.
20 change × 20 stud pinion working diameter of fe	× 66 draw eder	ing roller	wheel ×	101"	

SPEEDS OF WORKERS.

- - 19.9 revs. per min. \times 26.7" working circumference = 44.8 ft. per min.

DRAWING FRAMES.

Drawing Frames.—After the carding processes comes the drawing. In an ordinary bessian yarn system there are two drawings usually called first and second drawings. The cans taken from the finishers are put up at the back of the first drawing, and so many of them are run into one at the front of the first drawing—usually four ends are run into one. The cans from the front of the first drawing are put up at the back of the second drawing and so many are again run into one at the front of the second drawing—usually two ends are run into one here, but at both drawings more are often put up, never less for the making of hessian yarns.

So far as the material passing over the drawings, the most important point is to see that the gills are not overloaded—that is, that the sliver is well down through the gill pins. You should always see the points of the gill pins if you wish a level sliver at the front of the drawing, and this will also ensure a level and regular spun rove. No matter how well the jute has been carded, if the drawing gills are overloaded, irregular and lumpy spun rove will follow. Two kinds of first drawings are illustrated, and the particulars of gear and speed are given. The circular first drawing is not very much used now in Dundee at least; why it has been laid aside I have never been able exactly to understand, as it could do a large amount of work and do it well without much mechanical attention, and was a machine easily managed by the worker. From its general compactness and the small space occupied by it, I have an impression it will come back again.

The First Drawing, now most in use, is the push bar drawing, and there is no doubt it has been a great success. It may be driven at any speed within reason; but it must not be too heavily laden, or the fibre will incline to slide over the points of the pins. With a light load, so that the gill pins will go well up through the material, it will

make a thorough job, and do a fair quantity per day of 10 hours—say from 30 cwt. to 35 cwt.—with two heads. It works best with a single end over each gill, and the four ends run into one at the front. This, however, is of course a matter of opinion, and sometimes of convenience in the arrangement of the work to be done. Two heads are sufficient for a 56 spindle roving.

The gill bars of the push bar drawing are actuated by pinions. When the bars are working, so many of them are in the teeth of these pinions, the others both above and below not actually into the wheels, are being pushed along by the others as they pass out of the teeth, hence, the name push or slide drawing. To keep the bars tight upon the top is imperative, and a pinion and coupling has been arranged for on this machine, so that if the bars wear a little slack this slackness can be taken off. The success of the push drawing has been owing to the bars rising up straight at the back, and they do this nearer to a spiral drawing than any other drawing we have had before, consequently the less slackness you allow to get upon the bars, the nearer the perpendicular will the gill bar pins rise through the sliver at the back end, which is the great point to be desired.

As there is no intricate work about the arrangement for actuating the gill bars, simply four pinions with teeth into which the end of the bars move, it only requires to de kept clean. It has become very popular.

The Second Drawing, or, as it is sometimes called, the finishing drawing, is usually a spiral drawing—so called from the gill bars being actuated by screws. To the speed of a spiral drawing or reving there is a limit beyond which it is impossible to go. No finishing drawing will make such a level sliver as a spiral drawing—that is the result of my experience; many others hold a different opinion, however. The push bar drawing is being adopted as a second drawing, but as I have not worked them as such, would rather not express an opinion of its merits as a finishing drawing. The screws, wipers, slides, &c. require careful attention, so that the heads of gill bars are kept upon the "pitch." To possess a thorough knowledge of the screws of spiral drawings and rovings, and to be able to keep them running on the "pitch" without any tampering with the "pitch pin," is about the best test of the fitness of a mill mechanic for his work; and all apprentice mill mechanics should make it their business to thoroughly master this, as without a thorough knowledge of this they will never be the master of their trade,

of a mill mechanic for his work; and all apprentice mill mechanics should make it their business to thoroughly master this, as without a thorough knowledge of this they will never be the master of their trade.

Two heads of a spiral drawing are sufficient for a 56 spindle roving, 10" × 5" pitch, but many people prefer three heads to a roving. If you have three heads in your second drawing to each roving, this will necessitate the second drawings being at right angles to the first drawings, and, of course, in line with the rovings, and this means you will have to drive the second drawings with belts over a universal guide. The arrangement, either as regards the floor space or driving arrangement, never seems so direct and complete as when the breakers, finishers, and drawings are in parallel lines, and the rovings at right angles to the second drawings.

A second drawing of two heads is able to produce sliver for a 56 spindle roving, $10'' \times 5''$ pitch, making 30 ewt. to 35 ewt. of rovo in 10 hours.

Here we may explain what is meant by the gill bars going off the "pitch." The gill bars of any drawing or roving, except, of course, rotary drawings and rovings, are driven by a small pin, called the *" pitch" pin. If the bars do not move easily, either from some mechanical defect or from the gill bars getting jammed by a lump of jute, or a "choke," as it is termed, this pitch pin will break; the gill bars of the head which has gone out of order will cease to move. while the other head or heads will continue to work as before. The head which has ceased working, owing to the breakage of the "pitch pin," will not work until this pin has been renewed, and the obstruction removed; and the smaller the pitch pin is in diameter the better, as it will do the less damage to the gill bars when it breaks easily than if it requires an unnecessary amount of obstruction to break it, and the smaller the pin you can work with is the real guarantee that the screws, wipers, slides, &c., are mechanically in good order, and also thoroughly clean.

PITCH PIN FOR PUSH BAR DRAWING.—This pin works both heads of the drawing, and should not be more than No. 8 Birming-ham wire gauge second drawing pitch pin, which works only one of the drawing heads, should not be more than No. 10 B.W.G., and the roving pitch pins No. 15 B.W.G. If you work with these pins, there will not be much wrong with the gill bars before you will know it.

*See page 162 for illustration of "pitch pin" arrangement.

The number of	gill bars	in circular drawings is -	52
,,	"	one head of push bar is	327
,,	,,	" spiral second drawing in	3 21 P
,,	**	" roving is -	22

The "cans" from the second drawings should be put up in setts of eight a time at the back of the roving.

Drawings.—Sometimes the drawing rollers and pressing rollers are made "hard to hard"—by that term is meant that both surfaces of the rollers are metal—but the most common method employed is that the pressing roller is covered with leather. If the rollers are hard to hard, they are both fluted with a round top and bottom flute, and the flutes work into one another; and we may remark here, in passing, that, for the purpose of calculation, a round top and bottom fluted roller 2½ in. diameter is always taken at 3 in. diameter. This, as will be readily understood, is owing to the depth of flutes making the circumference of roller longer than if with plain flutes. Leather-covered pressing rollers on a round top and bottom fluted roller are often used in first drawings; but usually leather pressing rollers, either in drawings or rovings, work upon a drawing roller with V flutes, or scratch flutes, as they are sometimes called.

DRAFT PLATE WITH DRAFT PINION AND DRAFT ATTACHED TO MACHINE.

Push Bar D	rawing		Circular Dra	-	
Draft.	C,	Pinion.	Draft.	U	Pinion
$2\frac{1}{2}$		96	3		60
· 3		80	33		52
34		68	1		45
4*		60	41		40
41	.,,	53	5		36
$\frac{4\frac{1}{4}}{5}$		48	6	•••	30
5 1		44	61	•••	28
62		40	7 3	•••	26
64		37	1	•••	

Second	Drawing	Spiral-
Draft.	· ·	Pinion.
5	***	64
$5\frac{1}{2}$	•••	58
6	•••	53
6.		49
6 <u>!</u> 7	•••	46
73		43
$\frac{71}{8}$	•••	40
	•••	38
$8\frac{1}{2}$		36
91		34
9 1 10	***	32
• 17	•••	

DRAWING DRAFT ARRANGEMENTS.

First Drawing-Push Bar

Speed Pulleys 180 revolutions per minute; pulley pinion 34 teeth

Draft arrangement-hard-to-hard rollers-

*(3")
$$\frac{24 \times 56 \times 74 \times 50 \times 23 \times 32}{80 \times 20 \times 34 \times 89 \times 40 \times 1_{10}^{10}} = 8.3 \text{ draft.}$$

*(3") $\frac{2\frac{1}{9} \times 56 \times 74 \times 50 \times 28 \times 32}{\frac{\text{Chairty}}{\text{Number}} \times 20 \times 34 \times 39 \times 40 \times 11\frac{1}{9}} = 264.9 \text{ Constant Number for draft}$

First Drawing-Push Bar.

Speed Pulleys 180 revolutions per minute.

Draft arrangement—Leather rollers on round fluted roller or plain fluted roller.

$$\frac{21 \times 76 \times 74 \times 50 \times 23 \times 32}{56 \times 19 \times 34 \times 39 \times 40 \times 116} = 3.9 \text{ draft.}$$

$$\frac{2\frac{1}{6}\times76\times74\times50\times28\times32}{\frac{\text{Changes}\times19\times34\times39\times40\times1\frac{1}{18}}{\text{minter}}}=222\cdot5 \text{ Constant Number for draft.}$$

*In the calculations remember remarks as to round top and bottom fluted rollers versus plain or V fluted rollers.

First Drawing Circular.

Speed Pulleys 240 revolutions per minute—pulley pinion 28 teeth.

Draft arrangement-hard-to-hard rollers-

 $(3\frac{1}{2})$ $\frac{3^n \times 18 \times 120 \times 27 \times 15}{22 \times 18 \times 52 \times 15 \times 6} = \frac{3 \cdot 30}{120}$ draft between drawing roller and retaining roller.

$$(3\frac{1}{2})$$
 $\frac{3^{2} \times 18 \times 120 \times 27 \times 15}{22 \times 18 \times c.p. \times 15 \times 3''} = 171.8$ Constant Number for draft,

First Drawing-Circular.

Speed pulleys 240 revolutions per minute.

Draft arrangement—leather rollers on round fluted roller or plain fluted roller.

Second Drawing-Spiral.

Speed Pulleys 170 revolutions per minute-pulley pinion 28 teeth.

Draft arrangement-leather pressing roller on a plain or V fluted roller.

$$\frac{24 \times 35 \times 68 \times 60}{43 \times 25 \times 25 \times 118} = 7.88$$
 draft.

 $\frac{2\frac{1}{2}\times35\times68\times69}{\frac{\text{Change}}{\text{pulsion}}} = 339\cdot03$ —Constant Number for draft.

ARRANGEMENTS OF WHEELS FOR CALCULATION OF SPEED OF GILL BARS IN DRAWINGS AND ROVINGS.

Driving Shaft, 160 revolutions per minute-see plan.

Drum Push Bar Drawing, 16" Pulleys Drum Circular " 21" Pulleys 14" Drum Spiral 16" 16" Pulleys

Thus -

- (

ř

1st Push Bar Drawing Pulley Pinion, 34 teeth.

 $\frac{6}{7}160 \times \frac{10}{14} = 1820$, say 180 speed of pulleys.

 $\frac{3}{6}$ 180 × $\frac{3}{5}$ 6 × $\frac{20}{74}$ × $\frac{3}{5}$ 6 = 20.08 revolutions per minute -- speed of Gill Bar Shaft, upon which is Gill Bar Wheel, into which the bars work. This wheel has 17 teeth.

 $\frac{1}{8}180 \times \frac{c}{s_0} \times \frac{s_0}{74} \times \frac{s_0}{s_0} = 590$ constant number for speed of Gill Bars. $17 \times 20.08 = 341.36$, speed of Gill Bars per minute.

This is a fair speed, With this speed this drawing will take sliver from a finisher producing 35 cwt. per 10 hours.

Breaker Draft, say, about 13/134.

Finisher ,,

Dollop, 32/33 lbs.

1st Circular Drawing Pulley Pinion, 32 teeth.

 $160 \times \frac{21}{14} = 240$ revolutions of pulleys per minute.

 $240 \times \frac{32}{18} \times \frac{18}{120} \times \frac{59}{110} =$ almost 7 revolutions of Gill Bar Wheel per minute.

 $240 \times \frac{32}{78} \times \frac{18}{120} \times \frac{6}{110} = 134$ constant number.

Number of teeth or spaces for bars in Gill Bar Wheel 52.

52 x 7 = 364 Drops of Gill Bars per minute

With same arrangement as to Breaker, Finisher, Dollop, &c., this drawing will take from a finisher producing 35 cwt. per day.

Then--

2nd Spiral Drawing—pulley pinion 30 teeth.

\$160 \times \frac{16}{16} = 160 revolutions of pulleys per minute. \$160 \times \frac{16}{15} \times \frac{1}{16} \times \fr

This drawing, with two heads at this speed on bars, and with a 74 draft, will take the production from either of the 1st drawings, Push Bar or Circular.

Norg. The relations of speed between the retaining roller and gill bars on a Screw Gill Roving are the same for 200/250 lbs. rove as for 60/70 lbs. rove.

Then-

Roving —Drum, 25"; Pulleys, 18".

[Twist pinion, 35" on 2\frac{1}{4}" rollers.

Grist ,, 35".

Rack ,, 17".

Traverse ,, 28".

Weight of rove, 72\frac{1}{2}/75 lbs. per spindle.

With this arrangement roving will produce 28/30 shifts = 35 cwt, in 10 hours.

In this case particulars are given previous to working out speed of gill bars, as the speed of bars depend on these particulars.

SPEED OF DRAWING ROLLER BY SPEED FROM SHAFT DRIVING ROVING PULLEYS.

 $160 \times \frac{2.5}{1.8} \times \frac{3.5}{6.0} = 129.6$ revolutions of drawing roller per minute.

Engine, 10 hours = 600 minutes.

 $129.6 \times 600 = 77760$ revolutions of drawing roller in 10 hours.

 $77760 \times 7.06 = 548985.60$ inches in 10 hours.

548985·60 36" - 15249·6 yds.

 $\frac{15249.6}{14400}$ = 1.05 spyndles per spindle in 10 hours by engine.

This roving arrangement produces 35 cwt. of rove at $72\frac{1}{2}/75$ lbs. per spyndle, by 56 spindles, $10^{\circ} \times 5^{\circ}$ pitch.

35 cwt. = 3920 lbs.

$$\frac{3920}{75}$$
 = 52.26 spyndles of rove at 75 lbs. per spindle from 56 spindles.

 $\frac{52 \cdot 26}{56} = 933 \text{ apyndles per spindle actual in 10 hours.}$

11.1 per cent. difference between engine and actual production.
Engine production, 1.05
Actual ,, .933
,, Difference, .117

1.05 : 100 : : .117 : Answer, 11.1.

Pitch of Gill Bar Screws for Second Spiral Drawings and also Spiral Rowings.

The screws for these drawings and rovings, made by Messrs Fairbairn, Naylor, & Macpherson, are always cut a certain number of threads per inch, so that they are not always measurable by an 4th or 15th.

In the Second Drawings-

Top screws have 12 threads per inch.

Bottom 0.8

Rovings --

40.4

Top screws have 2: threads per inch.

Bottom , 0.8 ` , , ,,

If you observe the working of gill bars in the second spiral drawing, you will notice that there are most frequently 14 gill bars in the top screws of drawing and 7 in the bottom screws; sometimes there will be 15 in the top and 6 in the bottom; and frequently one will be halfway between. The distance from where the gill bar rises to where it descends is 81 inches.

Pitch of top screws, $1\frac{3}{4}$ per inch. Top screw, $8.25 \times 1.75 = 14.43$ Bottom ,, $8.25 \times 0.8 = 6.6$ Total, 21. gill bars in a head of 2nd drawing.

Roving, $10' \times 5''$ spiral. Top screw, $7.875 \times 2^{\circ} = 15.75$ Bottom ,, $7.875 \times 0.8 = 6.3$

Total, 22.0 gill bars in one head of roving.

Nors.—For illustrations of Drawing and Roving Screws, see pages 144 and 158.

PATENT CIRCULAR DRAWING FRAME.

Sectional elevation showing gearing at driving end.

SCALE ITH.


A	Driving pinions,	•••		•••	36, 39, & 42 teeth.
В	Delivery roller wheel,		••		78 teeth.
C	Delivery roller pinion,		•••		17 teeth.
D	Intermediate,	•••	•••	•••	80 teeth.
E	Drawing roller pinion,		•••	•••	18 teeth.
F	Stud wheel for driving	brush,		•••	46 teeth.
G	Stud pinion for do.	•••		•••	12 teeth.
н	Brush wheel,	•••	••	•••	80 teeth.
I	Wheel on shaft for dri	iving circl	e,		24 teeth.
J	Wheel on circle,			•••	110 teeth.
K	Retaining roller wheel	for drivi	ng brush,	•••	18 teeth.
L	Intermediate for do.			••	18 teeth.
M	Brush wheel				18 teeth.

Arrangement of Whoels for calculation of speed of gill bars-

 $\frac{240}{78} \times \frac{32}{78} \times \frac{18}{120} \times \frac{52}{110}$. 7 revolutions of gill bar wheel per minute.

 $\frac{240\times32}{78\times120\times110}=134$ constant No. for speed gill bars.


Number of spaces for gill bars in gill bar wheel 52; therefore, $52 \times 7 = 364$ drops of gill bars per minute.

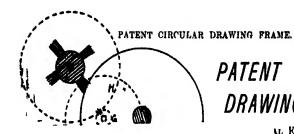

PATENT CIRCULAR DRAWING FRAME.

LL ELEVATION SHOWING SG AT DRIVING END.

1 ITH - ONE FOOT.

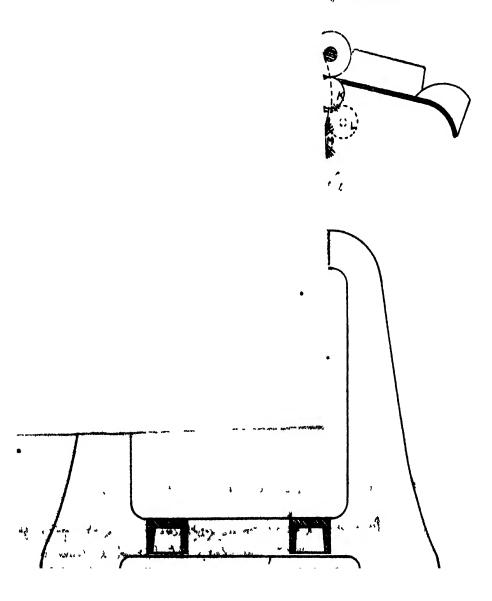

PATENT CIRCULAR DRAWING FRAME. . .

Sectional elevation showing yearing at end opposite to driving pulleys.

SCALE STH.

. A	Delivery roller pinion,		•••		17 teeth.
В	Stud wheel,		•••		120 teeth.
('	Draught changes,	••	•••	•••	26 to 60 teeth.
D	Wheel on circle for dri	iving fo	llers,	•••	110 teeth
E	Wheel on shaft for d	riving	circle at p	oulley	
	end,	•••			24 teeth.
F	Stud wheel for driving	retain	ing roller,		27 teeth.
G	Stud pinion for do.,		•••		15 teeth.
н	Retaining roller wheel	,	•••		15 teeth. F

DRAFT ARRANGEMENT-


Pressing Rollers hard to hard.

$$\frac{3\times18\times120\times27\times15}{22\times18\times C.P.\times25\times3} = 171.8$$
 constant No. for draft.

Pressing Rollers-leather covered on a plain or V fluted roller.

$$\frac{3\times18\times120\times27\times15}{18\times18\times52\times15\times3}$$
:=3.46 draft.

$$\frac{3 \times 18 \times 120 \times 27 \times 15}{18 \times 18 \times C.P. \times 15 \times 3} = 180$$
 constant No, for draft,

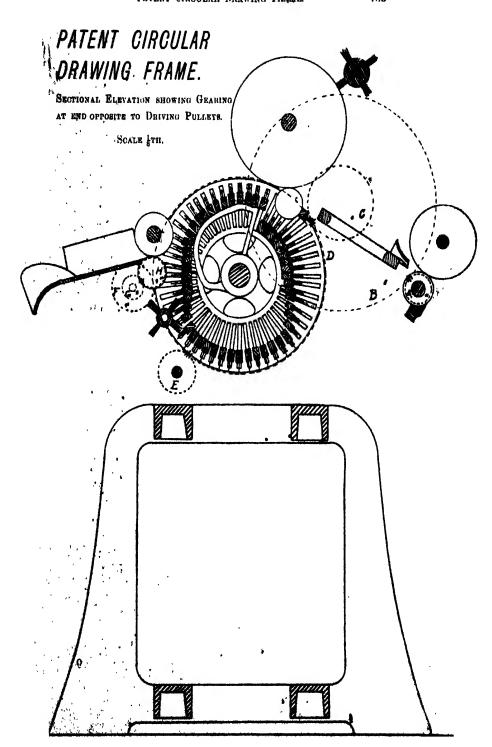

PATENT PUSH OR SLIDE DRAWING FRAME.

Sectional elevation showing gearing at driving end.

₹,			Scale ft	h.		
12	A	Driving pinions,			r	30, 34 & 38 teeth
	В	Stud Wheel,		••	•••	70 teeth.
	Q	Stud pinion,	•••	•••	•••	19 teeth.
7	D	Short shaft wheel,			••	78 teeth.
•	E	Short shaft pinion,	••		•••	34 teeth.
Steed	FF	Faller shaft wheels,	•			50 teeth.
7	G	Intermediate,			•••	62 teeth.
	H	Draught changes,				34 to 80 teets
	1	Stripping roller pinion	,			26 teeth.
•	J	Intermediate,		•		100 teets.
	ĸ	Delivery collect pinion	for driv	ing strip	ping	
		ıoller,	•	••	•	38 teeth.
	ւ ւ	Retaining roller pinion	18,			22 teeth
	M	Intermediate, .	••	•	••	24 teeth.

DRAFT ARRANGEMENT-

Hard to hard pressing rollers-

$$\begin{array}{c} (8') \\ 2\frac{1}{2} \times 56 \times 74 \times 50 \times 23 \times 32 \\ 56 \times 20 \times 34 \times 39 \times 40 \times 11\frac{5}{6} = 3.9 \text{ diaft.} \end{array}$$


$$(3'') = \frac{2\frac{1}{2} \times 56}{C \cdot P_{*} \times 20} \times \frac{74 \times 50}{31 \times 39} \times \frac{28 \times 32}{10 \times 11_{10}} = 222.5$$
 constant No. for draft.

Pressing Rollers-Leather covered on a plain or a V fluted roller-

$$\frac{24 \times 76 \times 74 \times 50 \times 23 \times 32}{\text{C.P.} \times 19 \times 34 \times 39 \times 40 \times 116} = 264.9$$
 constant for draft.

PATENT SLIDE DRAWING FRAME.

SECTIONAL ELEVATION SHOWING GEARING AT DRIVING END.

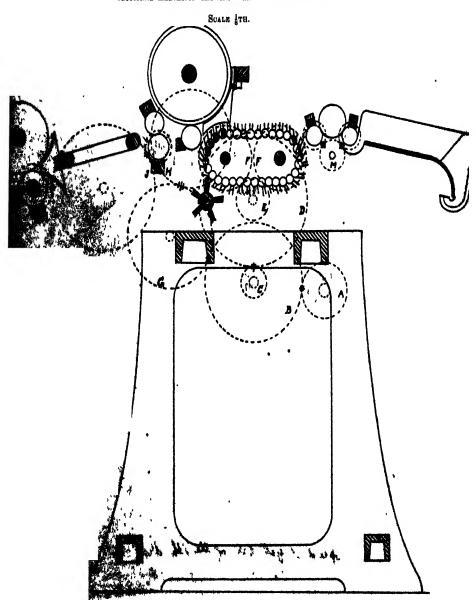

PATENT PUSH OR SLIDE DRAWING FRAME.

Sectional elevation showing gearing at end apposite to driving pulleys.

SCALE Ath.

A	Retaining Roller wheel	ม ,			32 and 33 teeth.
В	Stud wheel,	•••	•••	• •	40 teeth
C	Stud pmion,	•••			23 teeth.
D	Intermediate,	•••	••	•••	64 teeth. 1
E	Faller shaft pinion,			•••	39 toeth.
F	Stud wheel,	•••			33 teeth
G	Stud pinion,	•••	•••	•••	23 teeth.
н	Brush wheel,			•••	36 teeth.
l	Drawing roller piniou,		••		28 teeth.
J	Intermediate,	•••		•••	130 teeth.
K	Delivery Roller pinions),	•••	••	37 and 38 teeth.

Arrangements of Wheels for calculation of speed of gill bars-

*180 \times 34 \times 20 \times 34 20 08 revolutions of gill bar shaft upon which is 56 \times 74 \times 50 gill bar wheel 17 teeth into which bars work.


Then $17 \times 20.08 = 341.36$ speed of gill bars per minute.

 180 $\stackrel{<}{_{\sim}}$ $\stackrel{<}{_{\sim}}$ $^{\circ}$ $^{\circ}$ Constant Number for gill bar shaft.

NOTE. - Speed Pulleys 180 revolutions per minute.

PATENT SLIDE DRAWING FRAME.


SECTIONAL ELEVATION SHOWING GRARING AT END OPPOSITE TO DRIVING PULLETY

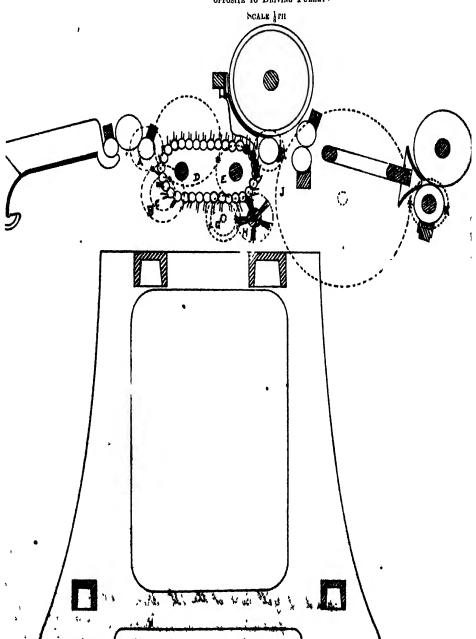


SLIDE FOR PUSH BAR DRAWING.

SCALE 3" TO ONE FOOT.


Elevation of Guide Plate "A" for pins on gill bar cranks.

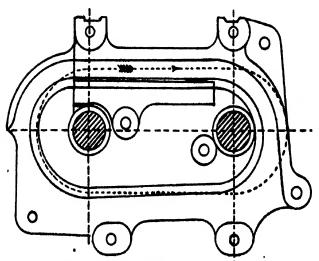



Elevation of Guide Plate "B" for gill bars.

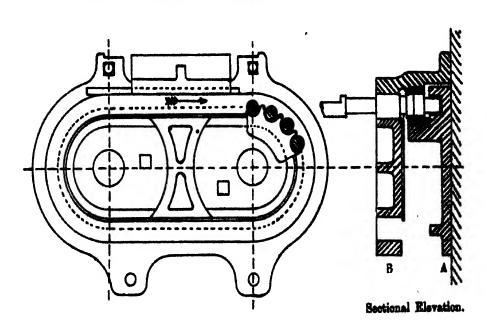

GILL BARS FOR PUSH BAR DRAWING. * SCALE STIL.

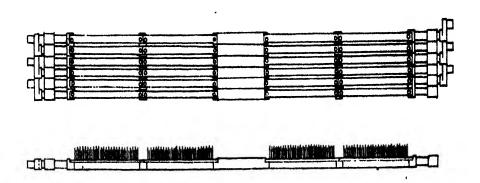



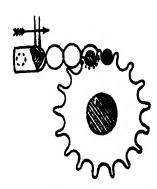

Elevation of Pinion and Cross Section of gill ban

*

Sectional elevation showing gearing at end opposite to driving pulleys.

SCALE Ath

A	Back shaft pinion,	•••	•••	25 teeth.				
В	Intermediate,	•	•••	25 teeth.				
O	Stud wheel,	•••		68 teeth.				
D	Stud pinion,	•••	•••	25 teeth.				
E	Retaining roller wheel,		•••	69 teeth.				
F F	Retaining roller pinions,	•••		24 teeth.				
G	Intermediate,		•••	24 teeth,				
Ħ	H Wheel for driving single back shaft (separate							
**	6 1 1 1)	, -		19 teeth,				
	for each nead,)	•••	•••	10 000011,				
1	Wheel on single back shaft,	•••	•••	19 teeth,				
J	Bevil for driving screws,	••	•••	21 teeth.				
ĸ	Bevil pinion on bottom screw	,	•••	14 teeth.				
L	Drawing roller pinion for d	riving del	iverv					
	11			41 teeth,				
	roller,	• 4 •	•••	41 000011,				
M	Intermediate,	•••	•••	88 teeth.				
N	Delivery roller pinion,	***	•••	56 teeth.				


DRAFT ARRANGEMENT -

Pressing Rollers-Leather covered on a plain or V fluted roller-

$$\frac{2\frac{1}{2} \times 85 \times 68}{48 \times 25 \times 25 \times 1\frac{16}{16}} = 7.88$$
 draft.

 $\frac{2\frac{1}{2}\times35^4\times68\times69}{\text{C. P.}\times25\times25\times25\times115}=389\cdot03$ constant for draft.

^{*} If this pinion is a 34, 329.606 will be constant No.

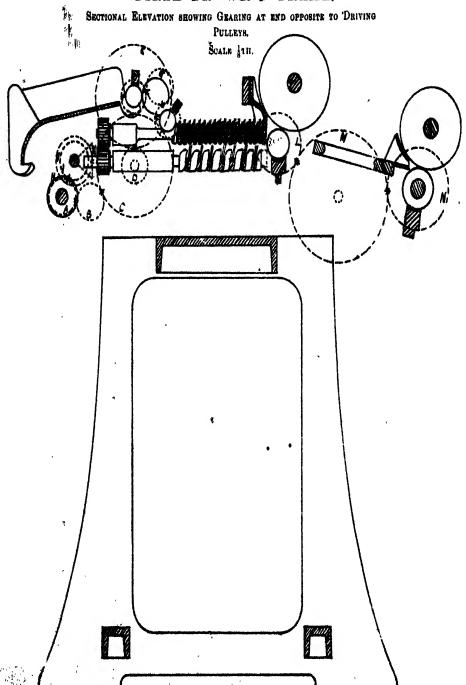

Sectional elevation showing gearing at driving end.

SCALE 1th.

A	Draught Changes,	٠		•••	32 to 64 teeth.	12
В	Intermediate,		••		80 teeth.	
1c	Driving pinion,	•	•		24 teeth.	
D	Intermediate, .			•••	32 teeth.	
, E	Back shaft pinion,	•••	•••	•••	34 teeth	
F	Wheel for driving single	e back st	aft (sepa	rate		
!	for each head),	•••	••	•••	19 teeth.	
G	Wheel on single back sl	haft,	•••	•••	19 teeth.	
† H	Bevil wheel for driving	screws,	•••		21 teeth.	

Arrangement of Wheels for calculation of speed of gill bars-

$$\frac{\bullet 160 \times 30 \times 19 \cdot 21}{35 \times 19 \times 14} = 205 \text{ speed gill bars per minute.}$$


$$160 \times C.P. \times 19 \times 21$$


 $35^{\circ} \times 19 \times 14 = 6.85$ constant No. for gill bars.

^{*} If this Pinion is a 34, 705 will be constant No.


^{*}Note-Speed of Pulleys 160 revolutions per minute.

Sectional Elevation showing Gearing at Driving End. Scale $\frac{1}{8}$ th.

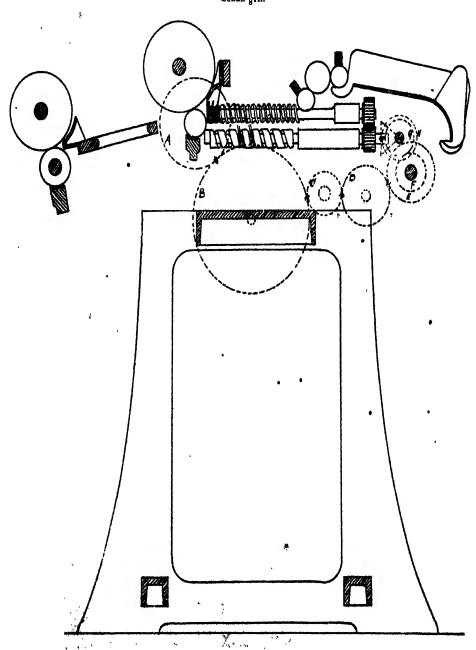

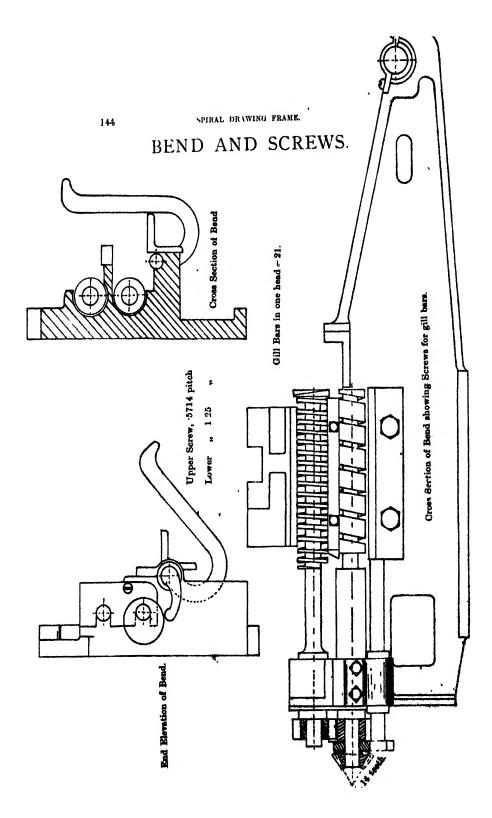


DRAWING GILLS.

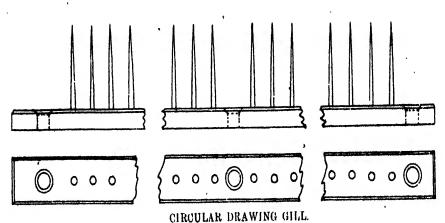

181' × 1" × 1" Bruss.

34 pins per inch.

174"-1-60-No. 15, 14". Rivet No. 8, 14".

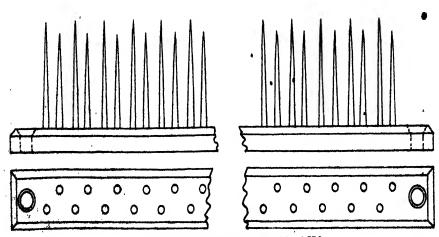


FIRST PUSH BAR DRAWING GILL.


8" x 1" x 1" Brass!"

21" pins per inch.

7"-2-18-No. 14, 12" and 11". Rivet No. 8, 1

DRAWING GILLS.

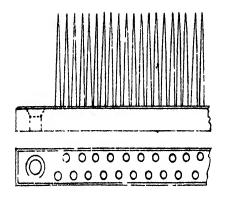


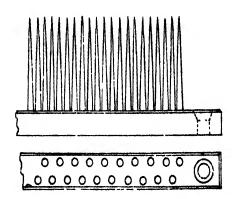

SECOND DRAWING SPIRAL.

7" × 1.1" × 1" Brass.

5 pins per inch.
6"-2-30. No. 16-14". Rivet No. 10, 18'.

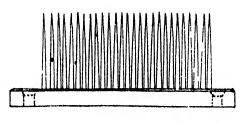



10" × 5" Roving Gill. 2\hat{8} × \hat{8}" × \hat{3}\hat{7}_2 Brass. 6 pins per inch. 2\hat{8}"-2-13. No. 16, 1". Gill Rivet, 1", No. 11.

SPECIFICATION AND PARTICULARS OF DRAWING AND ROVING GILLS FOR HESSIAN YARNS.

The student will note as to the arrangement of the dimension.

Push Bar Drawing Gills.

· 8" × " × 1" brass.

1 40

. 41 11/4

rows. plus. 7", 2, 18, No. 14, 13 and 11 -- 21 pius per inch.

Note.—That front row of pins are Ith shorter than back row.

Circular Drawing.

18½" × ½" × ½" brass.

rows. pins. 171", 1, 60, No. 15, 11", 31 pins per inch.

Second Drawing Spiral.

 $7'' \times \frac{13''}{3''} \times \frac{1}{4}''$ brass.

6", 2, 30, No. 16, 11, 5 pins per inch.

Roving 10" × 5" Pitch.

· 27" × 3" × 3" brass.

· 21, , 2, 13, No. 16, — 1", 6 pins per inch.

Gill Rivets Push Bar-No. 8, 1".

Circular Bar-No. 8, 11".

Second Spiral-No. 10, 11". "

Rovings 10" × 5"—No. 11, 1".

GILLS FOR HESSIANS.

(Recommended by Fairbairn).

1st Push Bar Drawing, No. 15 w.g., 21 pine per row of 7 ins, 2nd Spiral No. 15 w.g., 30 6 ins. ,, Spiral Roving No. 16 w.g., 14 21 ins.

GILLS FOR WARPS.

1st Push Bar Drawing, No. 15 w.g., 18 pins per row of 7 ins. 2nd Push Bar Drawing, No. 15 w.g., 25 ... 7 ins. Spiral Roving, No. 16 w.g., 12 21 ins.

GILLS FOR WEFTS.

1st Push Bar Drawing, No. 14 w.g., 16 per row of 7 ins. No. 15 w.g., 22 · 2nd 7 ins. No. 15 w g., 11 Spiral Roving, 21 ins.

FLUTING OF DRAWING ROLLERS.

The Drawing Rollers of first and second drawings and also the rovings are fluted to a certain pitch, so many flutes in the circum-These are not all of the same pitch, hence the term The reason for making the flutes irregular irregular fluted roller. in the pitch is that when made so, this irregularity of flute prevents the pressing roller becoming fluted by the pressure of the pressing If the pressing roller is allowed to work until it is fluted and working into the flutes of drawing roller, this makes the sliver smaller than is intended, and for the same reason if this takes place at the roving small rove will be the result. Automatic motions are fitted on the drawing rollers of rovings and spinning frames to move the drawing rollers on end; this prevents the drawing rollers getting grooved at one part of the roller, and of course makes the drawing rollers last out much longer.

	Roller	in 2"	Flutes	32
	,,	21"	,,	34
Preparing Drawing Roller	11	21"	"	36
	•••	23″	,,	38
		$2\frac{1}{2}$ "		40
		3"		48
Spinning Dalming Ballon		4.,		64
Spinning Drawing Rollers.		41"		66

16 flutes per inch diameter.

DIAGRAM OF PUSH BAR DRAWING.

Pressing and Drawing Roller-hard-to-hard. SCALE 3" TO ONE FOOT.


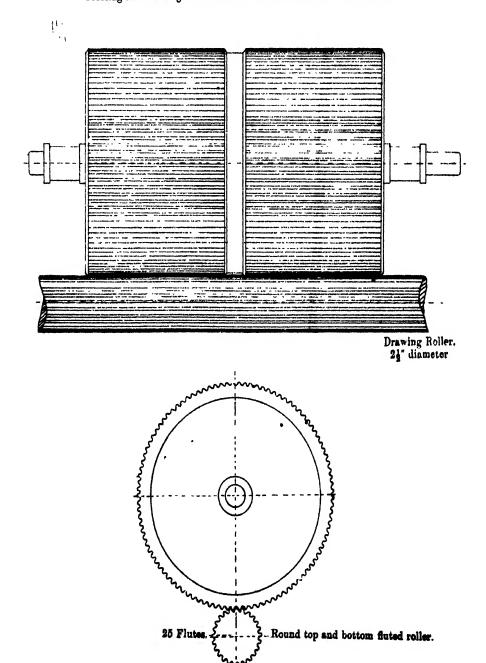



DIAGRAM OF PUSH BAR DRAWING.

Pressing and Drawing—Leather covered Pressing Roller.

Scale 3" TO ONE FOOT.

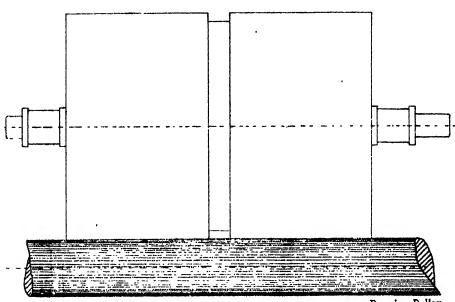

Drawing Roller 21" diameter.

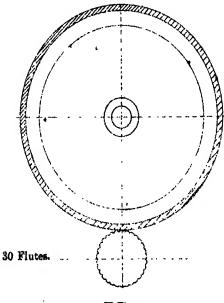

V Flute.

ROVING.

ROVING.—The cans being taken in setts of eight each from the second drawing, are put up at the back of the roving, one end over each gill, and are delivered on to the rove bobbin in front of roving. On the roving there are four change pinions—first, the twist pinion; second, the draft or grist pinion; third, the traverse pinion; and, fourth, the rack pinion. For a rove of 70,75 lbs. per spindle, the twist pinion is 35, with 24 drawing roller; rack pinion, 15; and traverse pinion, 28 teeth.

Note. - Rowing Rack Pinion.—A mark on the side of one of the teeth in the pinion is put there for a guide. When you put on a rack pinion, the top catch should be into the marked tooth, after the rack is wound up.

This Clock shows the quantity taken off on a day or week.

Drawing roller .. 21" diam. - 7.06 circumference.

 $1 \times 59 \times 60 \times 60 \times 60 \times 60 \times 60 \times 46 = 732780 =$ revolutions of roller for $1 \times 10 \times 10 \times 10 \times 10 \times 12 \times 24 \times 1$ one round of clock,

732780 × 7:06 = 5173426:80 inches, and

5178426:80 : 36 = 143706:3 yds.

143706.3 ÷ 14400 = 9.97 spyndles per spindle, and

9.97 × 56 - 558.32 apyndles in one round of clock.

Note — That the dial of roving clock is marked off in 40 points 10 parts marked 4, 8, 10, 16, 20, 24, 28, 32, 36, and 40.

The following are the Roving, Twist, and Draft arrangements.

R. Draft arrangement-

$$\frac{A}{B} \times \frac{C}{D} \times \frac{E}{F} \times \frac{G}{H}$$

152 ROVING.

In this case-

A - Diameter of Drawing Roller

B = Pinion on

C = ,, on back shaft.

 $\left\{ \begin{array}{l} \mathbf{E} \\ \mathbf{F} \end{array} \right\}$ — Double intermediate at opposite end of roving.

G = Wheel on retaining roller in gear with F.

H . Diameter of drawing roller.

Thus-

 $\frac{24\times36\times70\times70}{38\times24\times24\times113}=9\cdot35$ draft between drawing roller and retaining roller

Change pinion. $\begin{array}{ccc} 24\times36\times70\times70 \\ C_{\star}\times24\times24\times113 \end{array} = \cdot2599 = constant \ number.$

Twist Annangement.—Drawing roller, 2! in. dia. = 7.06 circumforence.

In this case-

A - Drawing roller wheel.

B Twist Pinion.

C - Pinion on driving shaft of roving, driving D, the pinion on end of spindle driver shaft.

D = Pinion on end of spindle driver shaft.

E . Bevel pinion on spindle shaft, driving & the pinion in spindle.

F - Pinion on spindle.

G - Circumference of drawing roller

Thus--

 $60 \times 44 \times 21$ 36 × 22 × 14 × 7.06 = .75 twists per inch.

 $\frac{60 \times 44 \times 21}{\text{Twist } 22 \times 14 \times 7.06} = 25.4 = \text{constant number for twists per inch.}$

ROVING. 153

SPEED SPINDLES.—Roving shaft, 215 revolutions per minute; Preparing shaft, 160; Drum, 24' diameter; Pulleys, 18' diameter.

$$\frac{160 \times 24}{18} = 213.33$$
. Say 215 revs. per minute of Main Shaft Roving

In this case

A = Speed, main shaft of roving.

B - Pinion on , ...

C Pinion on end of spindle shaft of roving.

D Bevel pinion on spindle ...

E Pinion on spindle.

Thus-

$$\frac{215 + 44 - 21}{22 \times 14}$$
 645 Revolutions of spindle per minute

With the above arrangement of draft, twist, and speed of spindles, the roving will make 28/30 shifts in 10 hours, or 21/22 points on the clock dial, in a week of 56 hours. This, by the clock, means rather more than five spyndles per spindle, per week of 56 hours.

Draft and Twist Plate attached to $10^{\circ} \times 5^{\circ}$ spiral roving, with drawing roller 24° diameter.

Drait.		Pinion.	Twist	Pinion.
5		20	1.5	17
$5\frac{1}{2}$		22	1.25	21
6		24	1.	26
$6\frac{1}{2}$		26	.9	29
7		28	-8	52
7 !		30	·7	37
่ย้		32	•6	43
8^{1}_{2}		34	·5	52
9		36		
9 j	•	38		
10		40		

*When changing a roller from 2! to 2; "diameter, put on a 37 pinion on drawing roller, and for every 1, th smaller the roller wears. When it is turned up, allow one-tenth less on the drawing roller pinion. This will keep the draft plate correct. Example:—

^{*}Norg. -A full sized Drawing Roller, that is 21" diameter, has on it a 38 teeth pinion.


SPIRAL DISC ROVING FRAME, 10" × 5" BOBBIN.

Sectional elevation showing gearing at end opposite to the driving pulleys.

SCALE STH.

A	Twist Changes (on driving shaft	t),		17 to 52 teeth.
В	Intermediate,	•••		150 teeth.
Ø	Twist Wheel (on drawing roller	rs),	•••	60. teeth
Ð	Drawing roller wheel,	• • • •	•••	38 teeth.
EЕ	Intermediates,	*		36 teeth.
F	Intermediate,	•••	•••	40 teeth.
G	Draught Changes (on back shaft	t),		20 to 40 testh.
H	Wheel for driving single back s	shaft (sep	arate	
	for each head),		•••	22 teeth.
I	Wheel on single back shaft,		•••	22 teeth.
J	Bevel wheel for driving screws,	•••		24 teeth.
K	Bevel pinion on bottom screw,	•••	•••	16 teeth.
$\mathbf{L} \; \mathbf{L}$	Wheels for driving top screw,	•••	•••	14 teeth.
M	Intermediate,	•••	•••	54 teeth.
N	Wheel on countershaft for drivi	ing discs,		30 teeth.
000	Mitres for driving discs,		•••	28 teeth.
· P •	Pinion on end of bowl shaft,	••	• • • •	20 teeth.
\mathbf{Q}	Wheel on short countershaft,	••		96 teeth.
R	Traverse Changes,		• • •	20 to 40 teeth.
s	Intermediate,	•••	•••	32 teeth.
${f T}$	Wheel on mangle wheel pinion	shaft,	• • •	108 teeth.
U	Pinion for driving differential w	vhoel,	•••	12 toeth.
V	Intermediate,	•••	'	27 teeth.
. W	Differential Wheel,	•••	•••	78 teeth.
X X X	Differential bevels,			30 teeth.
Y	When I am now of Jid' mandial has			
	Wheel on pap of differential be-	vel,	•••	30 teeth.
\mathbf{z}	Wheel on countershaft,	vel, •		30 teeth. 24 toeth.
Z a				
	Wheel on countershaft, Wheel on countershaft, Intermediate,	···•*		24 toeth.
a	Wheel on countershaft, Wheel on countershaft, Intermediate, Intermediate,	*		24 toeth. 48 teeth.
a b	Wheel on countershaft, Wheel on countershaft, Intermediate,	• 		24 toeth. 48 teeth. 96 teeth.
a b c	Wheel on countershaft, Wheel on countershaft, Intermediate, Intermediate,	• 		24 toeth. 48 teeth. 96 toeth. 92 teeth.
a b c d	Wheel on countershaft, Wheel on countershaft, Intermediate, Intermediate, Wheel on bobbin shaft,	• 		24 toeth. 48 teeth. 96 toeth. 92 teeth.
a b c d	Wheel on countershaft, Wheel on countershaft, Intermediate, Intermediate, Wheel on bobbin shaft, Bevel wheel on bobbin shaft (one for e	 	24 toeth. 48 teeth. 96 toeth. 92 toeth. 30 teeth.
a b c d	Wheel on countershaft, Wheel on countershaft, Intermediate, Intermediate, Wheel on bobbin shaft, Bevel wheel on bobbin shaft (two spindles),	 one for e	 overy	24 toeth. 48 teeth. 96 toeth. 92 toeth. 30 toeth.
a b c d e	Wheel on countershaft, Wheel on countershaft, Intermediate, Intermediate, Wheel on bobbin shaft, Bevel wheel on bobbin shaft (two spindles), Spur and bevel intermediate,	 one for e	 overy 	24 toeth. 48 teeth. 96 toeth. 92 toeth. 30 toeth. 21 toeth.
a b c d e	Wheel on countershaft, Wheel on countershaft, Intermediate, Intermediate, Wheel on bobbin shaft, Bevel wheel on bobbin shaft (two spindles), Spur and bevel intermediate, Bobbin pinions, Bevel wheel on pinion shaft (two spindles,	 one for e	 overy 	24 toeth. 48 teeth. 96 toeth. 92 toeth. 30 toeth. 21 toeth.
a b c d e	Wheel on countershaft, Wheel on countershaft, Intermediate, Intermediate, Wheel on bobbin shaft, Bevel wheel on bobbin shaft (two spindles), Spur and bevel intermediate, Bobbin pinions, Bevel wheel on pinion shaft (two spindles, Spur and bevel intermediate,	one for e	 very	24 toeth. 48 teeth. 96 toeth. 92 toeth. 30 toeth. 21 toeth. 28 teeth. 14 teeth. 21 teeth. 28 teeth.
a b c d e	Wheel on countershaft, Wheel on countershaft, Intermediate, Intermediate, Wheel on bobbin shaft, Bevel wheel on bobbin shaft (two spindles), Spur and bevel intermediate, Bobbin pinions, Bevel wheel on pinion shaft (two spindles,	one for e	 very	24 toeth. 48 teeth. 96 toeth. 92 toeth. 30 toeth. 21 toeth. 28 teeth. 14 toeth.

SPIRAL DISC ROVING FRAME.

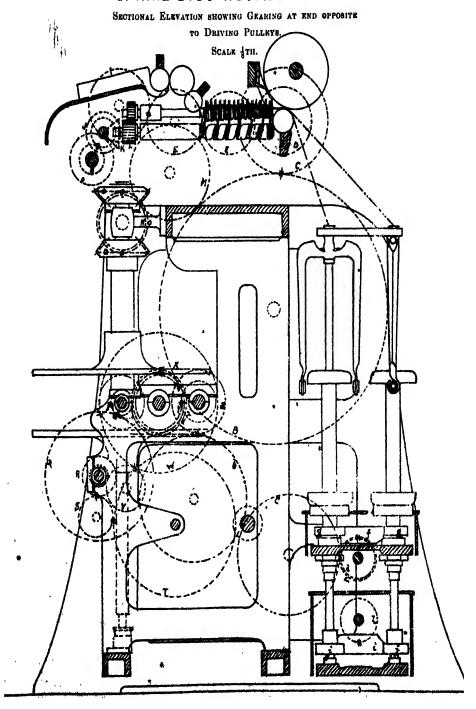

SPIRAL DISC ROVING FRAME, 10" x 5" BOBBIN.

Sectional elevation showing gearing at pulley end.

SCALE TH.

A	Wheel for driving single back al		arate	22 teeth.
р	for each head),,	•••	•••	22 teeth.
В	Wheel on single back shaft,	•••	•••	24 teeth.
C	Bevel wheel for driving screws,	•••	•••	
D	Bevel pinion on bottom screw,	•••	•••	16 teeth.
EΕ	Wheels for driving top screw,	•••	••	14 teeth.
F	Back shaft pinion,	•••	•••	24 toeth.
G	Intermediate,	•••	•••	30 teeth.
H	Stud Wheel,	•••	•••	70 teeth.
Ţ	Stud Pinion,	•••	•••	24 teeth.
J	Retaining roller wheel,	•••	•••	70 teeth.
KKK	Wheels for driving lower retain	ing rolle	r,	24 teeth.
Į,	Wheel on driving shaft,		•••	44 teeth.
M M	· ·			84 teeth.
N	Wheel on spindle shaft,		•••	22 teeth.
0	Bevel wheel on spindle shaft,	•••		21 teeth.
P	Spur and bevel intermediate,			28 teeth.
$\mathbf{Q}\mathbf{Q}$	Spindle Pinions,		•••	14 teeth.
R	Bevel Wheel on hobbin shaft,	•••		21 teeth.
s	Spur and bevel intermediate,	•••	•••	28 teeth
тт	Bobbin Pinions,	•••		14 teeth.
Ū	•			5 teeth.
_	Mangle wheel pinion,	•••	•••	73 teeth.
V	Mangle wheel.	· · · ·	•••	20 teeth.
W	Rack pinion (for traversing bold	oins),	•••	20 teeth.
IAFT A	RRANGEMENT-,			
51,	$^{\prime} \times 86 \times 70 \times 70 = 9.35 \text{ draft.}$		¥	XPX

$$\frac{2\frac{17}{4} \times 86 \times 70 \times 70}{38 \times 24 \times 24} \times \frac{70}{112} = 9.35 \text{ draft.}$$

 $\frac{2\frac{1}{4}''\times C,P,\times}{38\times 24\times 24\times 24\times 118}=\cdot 2599$ constant No. for draft.

TWIST ARRANGEMENT-

$$\frac{60 \times 44 \times 21}{36 \times 22 \times 14 \times 7.06} = .75$$
 twists per inch.


 $60\times44\times21$.C.P. $\times22\times14$ $\times^{-1}\cdot06$ = 25.495 constant No. for twist.

Speed Spindle = Speed Main Shaft Roving × 3. Main Shaft Roving, 215 revolutions per minute.


 $\frac{44 \times 21}{22 \times 14} = 3$. Thus, 215 \times 3 = 645 revolutions per minute.

SPIRAL DISC ROVING FRAME.

SECTIONAL ELEVATION SHOWING GEARING AT PULLEY END

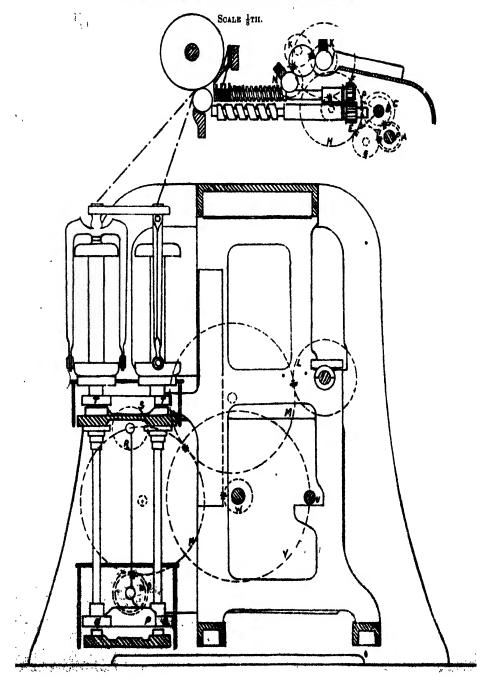

SCALE 3" TO UNE FOOT.

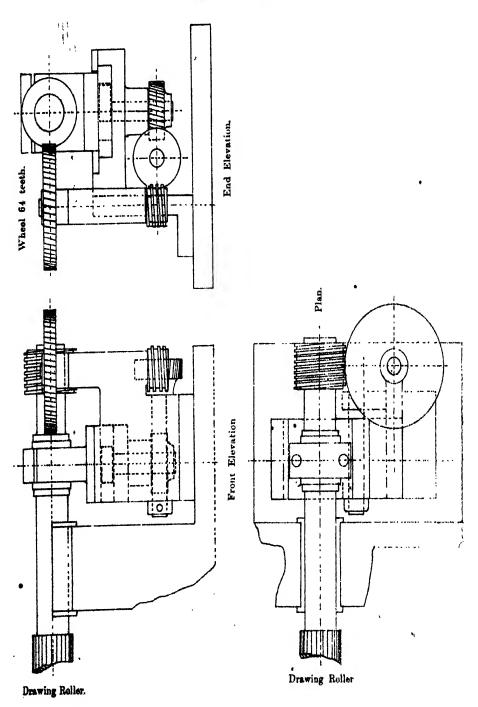

PARTICULARS OF AUTOMATIC MOTION FOR ROVING DRAWING ROLLER.

(For Diagram see page 159).

Wheel in gear with worm (single thread) on Drawing Roller, 64 teeth.

Two pinions each 36 teeth in gear, with single thread worms, as shown on diagram. Thus—

Movement of eccentric $1\frac{1}{2}$ inches—that is $\frac{3}{4}''$ to the right and $\frac{3}{4}''$ to left side.

Then— $\frac{1\frac{1}{2}}{82944} = \frac{3}{82944} = \frac{3}{2} \times \frac{1}{82944} = \frac{3}{165888} = \frac{1}{55296}$ travel of the eccentric for each revolution of the drawing roller.

GENERAL INSTRUCTIONS AS TO WORKING OF ROVING.


There is no doubt that the roving is one of the most important machines in a jute mill. Two parts of this machine require continual attention, namely, the differential motion and traverse gear, and the screws working the gill bars.


First, in reference to the differential motion, a description of this having been given by Mr Joseph Hovell, which has been much appreciated by those interested in jute machinery, it is not necessary to go into this in detail; only a diagram of this part of the roving frame is therefore given, and the calculations stated, so that the student will have the particulars ready to hand as a reference.


The second part of the machine which is of importance is the gill bars and scrows actuating same. If a large and steady production is wanted of the roving, this part of it will require constant and careful attention by those in charge. I have already stated my opinion as to their repair and upkeep; and can only repeat here, that the importance of this part of the roving cannot be overstated-the gill bars must be kept thoroughly clean, the gill pins sharp and well sett up. All this can only be done by so many heads of bars being taken out each day and cleaned, the scrows also cleaned and picked, the collar for pitch pin being carefully kept in order. Never allow the hole in collar for pitch pin to become wide at the edge next the pinion, or the pin will bend round between the collar and pinion, instead of breaking clean off, and when this occurs, will sometimes drive the carriage or head of bars in a jerky way, thus making thin parts on the rove, may not be noticed until the roves are on the spinning frame-small rove and small yarn being the result. All this may be avoided by care and attention combined with a knowledge of the proper working of the gill bars and the screws actuating them.

One other point may be mentioned, and that is never allow the crown wheels, as they are usually called, that drive the bobbin drivers to be too much worn and round in the teeth, as this also tends to make the rove soft and irregular, and consequently unfit for spinning purposes.

Make sure that the mangle wheel is in good order at the turning pins, and the bracket-carrying mangle wheel pinion is kept firm. With due attention to these details, there will not be much wrong with the roves, and you will have a chance to get a fair quantity of them from the roving.

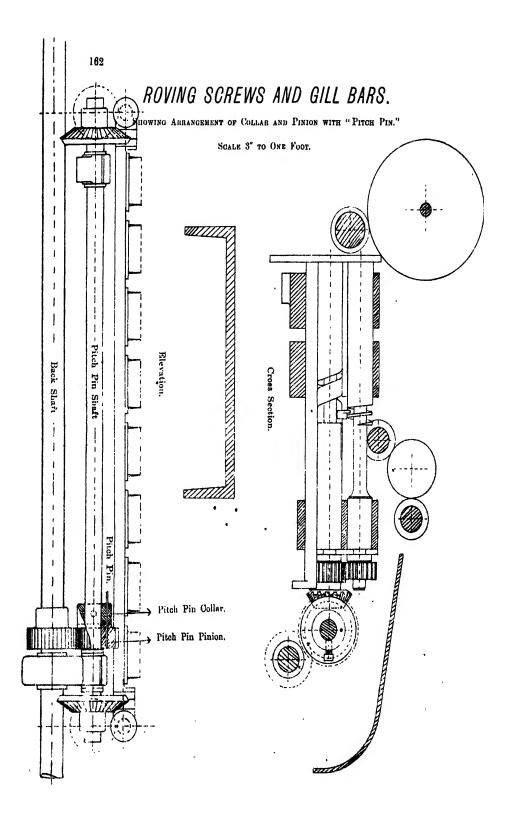

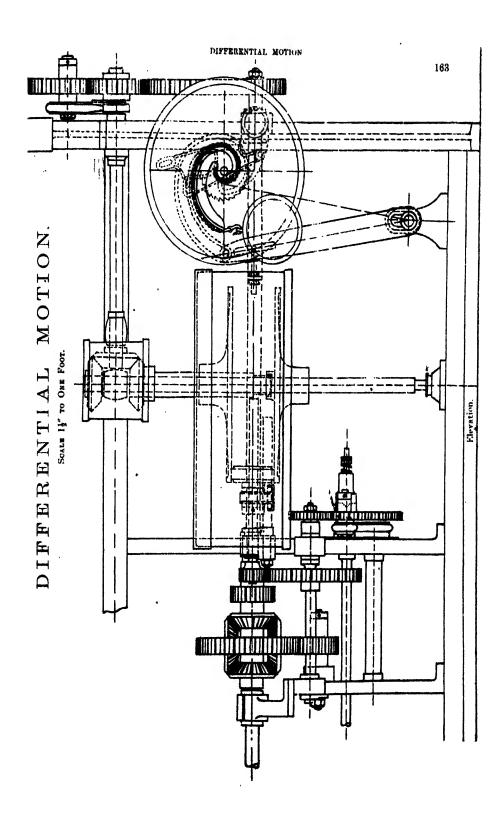

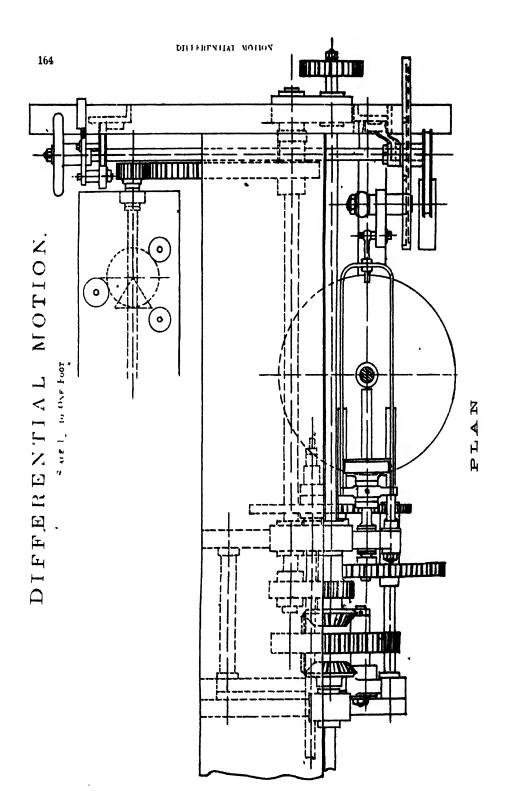

DESCRIPTION OF THE DISC AND DIFFERENTIAL MOTION ON A ROVING FRAME

The fellowing formula shows how to calculate the position of the bowl between the disc plates in any diameter of bobbin or drawing roller, but note that in the calculation the number of teeth in the differential wheel is taken at half of the actual number for the reason that one revolution of the differential wheel has a double effect on the wheel which it controls

Working dia, on discs for full bobbin—5.85. Diameter of full bobbin—5.

", ", empty ", 19 5 ", empty bobbin shank—1½".

Drawing Roller Wheel × Diameter on disc × Pinion on end of bowl shaft × Pinion on short shaft × 3* × Diameter of bobbin shank

Wheel on and of counter shaft for driving disc plates × Diameter of bowl × Wheel on end of short shaft × differential wheel × 1* × Diameter of drawing roller

*The figures here 3 to 1 express shortly the flet result of the train of wheels from driving shaft to spindles, and also from the loose running bavel wheel controlled by the differential motion wheel to hobbin.

Formula for full bobbin
$$\frac{60 \times 5 \cdot 85 \times 20 \times 12 \times 8 \times 5''}{30 \times 5 \times 96 \times (\frac{7}{4}) \cdot 39 \times 1 \times 2\frac{3}{4}''} = 1.$$

$$\frac{60 \times 19 \cdot 5 \times 20 \times 12 \times 3 \times 1\frac{1}{4}}{30 \times 5 \times 96 \times (\frac{7}{4}) \cdot 39 \times 1 \times 2\frac{3}{4}''} = 1.$$

$$\frac{60 \times 19 \cdot 5 \times 20 \times 12 \times 3 \times 1\frac{1}{4}}{30 \times 5 \times 96 \times (\frac{7}{4}) \cdot 39 \times 1 \times 2\frac{3}{4}'} = 1.$$

$$\frac{90 \times A \times 20 \times 12 \times 3 \times B}{30 \times 5 \times 96 \times (\frac{7}{4}) \cdot 39 \times 1 \times 2\frac{3}{4}} = 29 \cdot 25 \text{ Constant No. } \frac{1}{4}$$

From this Commant No. you can find the diameter of bobbin, and the working diameter for friction ball upon the disc plate as follows:—

- A Working diameter of friction ball upon disc plate.
- B Dismeter of bobbin

Working die, of ball upon plate 5" die, of hobbin when ball is working 19 5" disc plate,

The position of the bowl between the discs will not practically be quite the same as the calculations because an allowance must be made for contraction of the rove by the twist.

The figures used in above calculations are taken from the rovings made by Messrs Fairbairn, Naylor, Macpherson, & Co., Leeds, at the present day.

To find the speed of the empty hobbin 1\frac{1}{2}" diameter, and say 2\frac{1}{4}" diameter, the same diameter as the drawing roller, and also when full, say 5" diameter.

Speed of roving main shaft 218 revolutions per minute.

Twist pinion 35 teeth.

Bobbin Shank 13" diameter = 4.71" circumference.

Bobbin when full 5 , ~15.70

which subtract from the speed of the roving shaft 218-63:58 = 154:42 and

$$\frac{154.42 \times 30 \times 48 \cdot .21}{24 \times 30 \times 14} = 463.26 \text{ revolutions of bobbin.}$$

which subtract from the speed of the spindles $654-463\cdot26=190\cdot74$ and $190.74\times4\cdot71-898\cdot38$ inches of rove laid on per minute.

Again when the bobbin is say 21" diameter the same as the drawing roller.

$$\frac{127\cdot16}{30}\times\frac{60}{5}\times\frac{13}{96}\times\frac{20}{(\frac{17}{5})\cdot39}$$
 - $42\cdot38$ revolutions of the differential wheel.

which subtract from the speed of the roving shaft 218-42 38 = 175.62 and

$$\frac{175.62\times30\times18\times21}{24\times30\times14}$$
 =526.86 revolutions of bobbin.

which subtract from the speed of the spindles 654-526.86 = 127.14 and $127.14 \times 7.06 - 897.60$ inches of rove laid on per minute.

Again when the bobbin is full say 5" diameter.

$$\frac{127\cdot16\times60\times5\cdot85\times20\times-12}{30\times5\times5\times96\times(\frac{5}{4})\cdot39}\cdot19\cdot07\text{ revolutions of differential wheel.}$$

which subtract from the speed of the roving shaft 218-19.07 = 198.93 and

$$\frac{198 \cdot 93 \times 30 \times 48 \times 21}{24 \times 30 \times 14} = 596 \cdot 79 \text{ revolutions of bobbin.}$$

which subtract from the speed of the spindles $654-596\cdot79=57\cdot21$ and $57\cdot21\times15\cdot70=898\cdot19$ inches of rove laid on per minute.

Arrangement to find the speed of Roving Traverse when the bobbin is empty and full, that is 1½" and 5" diameter, or 4.71 and 15.70 inches in circumference.

Speid of Drawing Roller 127:16 revolutions per minute; Traverse Pinion 22 teeth for 75/80 lb. rove.

when empty
$$\frac{127 \cdot 16}{80 \times 5} \cdot \frac{60 \times 19 \cdot 5}{80 \times 5} \cdot \frac{20 \times 22 \times 5}{80 \times 5} = \frac{2.83 \text{ speed of traverse.}}{2.83 \text{ speed of traverse.}}$$
 when full
$$\frac{127 \cdot 16 \times 60 \times 5.86 \times 20 \times 22}{80 \times 5 \times 96 \times 108 \times 73} = \frac{2.864}{127 \cdot 16 \times 60 \times C} = \frac{20 \times 22 \times 5}{96 \times 108 \times 73} = \frac{1478 \text{ Constant No}}{127 \cdot 16 \times 60 \times C} = \frac{20 \times 22 \times 5}{96 \times 108 \times 73} = \frac{1478 \text{ Constant No}}{127 \cdot 16 \times 60 \times C} = \frac{127 \cdot 16 \times 60 \times C}{96 \times 108 \times 73} = \frac{1478 \text{ Constant No}}{127 \cdot 16 \times 60 \times C} = \frac{127 \cdot 16 \times 60 \times C}{96 \times 108 \times 73} = \frac{127 \cdot 16 \times 60 \times C}{127 \cdot 16 \times 60 \times C} = \frac{127 \cdot 16 \times 60 \times C}{96 \times 108 \times 73} = \frac{127 \cdot 16 \times 60 \times C}{127 \cdot 16 \times 60 \times C} = \frac{127 \cdot 16 \times 60 \times C}{96 \times 108 \times 73} = \frac{127 \cdot 16 \times 60 \times C}{127 \cdot 16 \times 60 \times C} = \frac{127 \cdot 16 \times 60 \times C}{96 \times 108 \times 73} = \frac{127 \cdot 16 \times 60 \times C}{127 \cdot 16 \times 60 \times C} = \frac{127 \cdot 16 \times 60 \times C}{96 \times 108 \times 73} = \frac{127 \cdot 16 \times 60 \times C}{127 \cdot 16 \times 60 \times C} = \frac{127 \cdot 16 \times 60 \times C}{96 \times 108 \times 73} = \frac{127 \cdot 16 \times 60 \times C}{127 \cdot 16 \times 60 \times C} = \frac{127 \cdot 16 \times 60 \times C}{96 \times 108 \times 73} = \frac{127 \cdot 16 \times 60 \times C}{127 \cdot 16 \times 60 \times C} = \frac{127 \cdot 16 \times 60 \times C}{127 \cdot 16 \times 60 \times C} = \frac{127 \cdot 16 \times 60 \times C}{127 \cdot 16 \times 60 \times C} = \frac{127 \cdot 16 \times 60 \times C}{127 \cdot 16 \times C} = \frac{127 \cdot 16 \times C$$

There is no method of calculating what traverse pinion should be used. This is not a question of length, but a question of the thickness of each size of rove; on this roving we find a 22" tooth pinion gives the proper build for a 75 lb. rove.

When the bolbm is empty (that is 4.71 inches in circumference), the drawing roller moves 127:16 revolutions per minute, and the traverse 2:88 per minute, which is equal to 44 to 1, and the circumference of the roller 7"; therefore 308 inches are delivered for each up and down movement of traverse, and

For a thicker rove the traverse would have to go faster, and for a finer a little slower.

When the rove is full (that is 15:70 inches circumference), the drawing roller moves 127-16 revolutions per minute, and the traverse 864 per minute, which is equal to 147-17 to 1, and the circumference of the roller being 7"; therefore 1030:19 inches are delivered in each up and down of the traverse.

The pinions upon the traverse shaft of this roving are 20 teeth, No. 6 pitch, and therefore equal to $3\frac{\pi}{16}$ dismeter at pitch lines. One revolution of this pinion is 10 40 inches, but the pinion, owing to the shape of the turning points of the mangle wheel, only moves the traverse of the bobbin board 10" up and 10" down.


You will therefore observe that when the bobbin is empty it goes slower and the traverse faster, and vice versa when the bobbin is full; the speed of the bobbin is always opposite to the speed of the traverse.


168 SNAIE

SNAIL.

(OLD STYLE).

SCALE 3" TO ONE FOOT

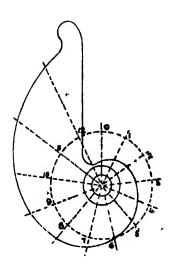

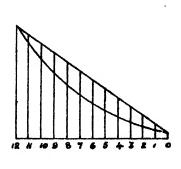

ROTARY DRAWING AND ROVINGS.

I do not feel called upon to say much about these machines. Their use for hessian yarn is limited to a small portion of the trade, The gills are fixed upon a shaft placed close up to the drawing roller. An illustration is given of drawing and also of roving showing the arrangement and the relation of the speed of gill to retaining and drawing roller All the other parts of the machines are much the same as in spiral machinery. For heavy wefts, a rotary roving will be found very convenient you can take off a good production of rove, and make a good job, as sliver is light; but you can make up the weight, owing to the shortness of the draft required in a rotary roying. *1 have given an arrangement with rotary roving, and have also given an example for hessian wefts--say, from 8/12 lbs. per spyndle. As in the case of spiral machinery. it is important that the gills be kept clean, and the gill pins sharp and carefully sett up. If this is not done, the tendency is for the rotary gill to "lap," and this causes irregularity in the rove. this roving is, however, kept clean and in good order, not much trouble will be experienced in doing the work of an arrangement such as is given in a few pages further on

ROTARY ROVING.—For heavy rove, 200 to 250 lbs, if made from poor stuff, and from which sacking wefts are to be spin, rotary rovings are generally employed. An illustration on page 170 shows the centres of gills and rollers; three different sets of wheels and pinions are given. This allows of the reach between centre of gill shaft and retaining rollers being set in three different positions, according to the rove being made. If the material is weak, the retaining roller should be closer upon the gill than when it is strong. When the jute is strong, the retaining roller must not be too near the gills, or the sliver will not draw at the pressing roller.

^{*}See page 185 for arrangement of Machinery Making Rove 105 lbs per spyudle, from which is to be spun 20 lbs. Weft.

The following are particulars of two arrangements of Rotary Gills:-

First drawing rotary, $7\frac{1}{2}" \times 3" \times \frac{1}{4}"$ brass, $3\frac{1}{4}$ pins per inch, set over $6\frac{1}{2}"$, 30 rows, 24 pins, No. $14-\frac{3}{4}"$, $\frac{1}{2}"$ out; or,


Second drawing rotary, $6'' \times 3'' \times \frac{1}{4}''$ brass, $8\frac{1}{4}$ pin per inch, 30 rows, 21 pins, No. $14 - \frac{3}{4}''$, $\frac{1}{2}''$ out;

Rotary roving gill, $2'' \times 3''$ dia. brass, 28 rows, 8 pins, No. 14— $\frac{3}{4}$ ", set over $1\frac{1}{2}$ ", 5 pins per inch, and $\frac{1}{2}$ " out;

First drawing rotary, $7'' \times 3'' \times \frac{1}{4}''$ brass, 5 pins per inch, 30 rows, 30 pins, No. 15— $\frac{3}{4}''$, $\frac{1}{2}''$ out; to work with

Roving rotary, $1\frac{5}{9}" \times 2\frac{1}{4}" \times \frac{1}{4}"$ brass, $5\frac{1}{2}$ pins per inch, 26 rows, 7 pins, No. $16 - \frac{5}{9}"$, $\frac{3}{9}"$ out.

ROTARY ROVING GILLS.

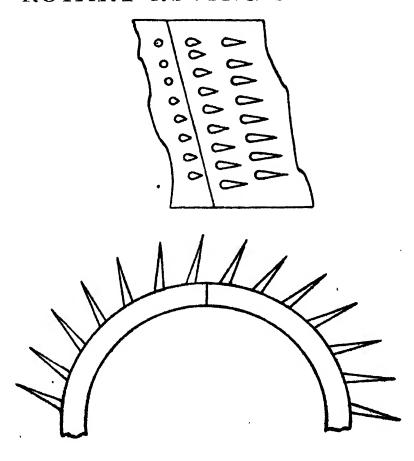

ROTARY ROVING FRAME.

SCALE ATH.


Diagrams showing' Three Sets of Wheels and Pinions for altering "Reach' between Retaining Roller and Gill Shaft.

A = Drawing Roller.

C = Gill Shaft.


B = Pressing

D and E = Retaining Rollers.

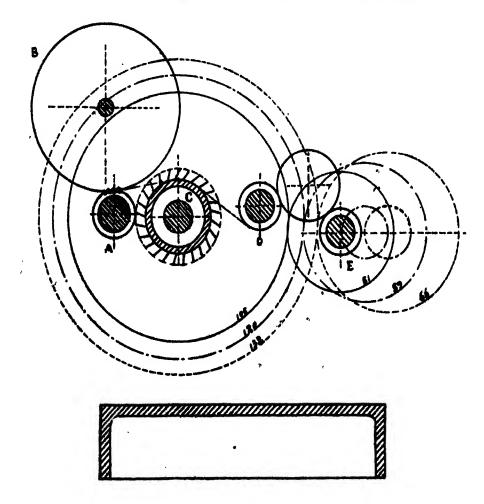

Norz —The surface speed of the Rotary Gill at the point of the pin is almost equal to the surface speed of the Retaining Roller.

ROTARY DRAWING FRAME.

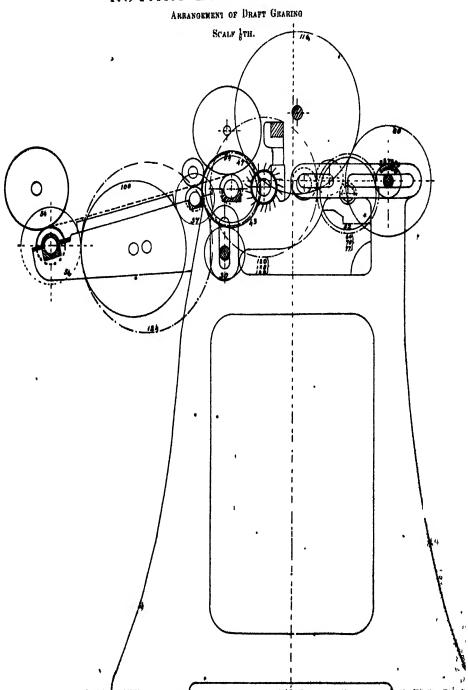


ROTARY DRAWING FRAME.

DRAFT ARRANGEMENT.

Back Roller Wheel,	•••	•••	•••	•••	52 teeth.
Change Pinion,	•••	•••	***	•••	25 teeth.
Stud Wheel	•••	•••	•••		80 teeth.
Front Roller Wheel,	•••	•••	•••	••	47 teeth.
Working diameter of	Front Ro	ller,	•••	••	3.4 inches.
	Back Roll	ler,			2 ,,
	52 × 80	$\frac{\times 3.4}{\times 2} = 6$	draft.		
	25×47	× 2			

DOUBLE ROTARY DRAWING FRAME.

ARRANGEMENT OF DRAFT GRARING.

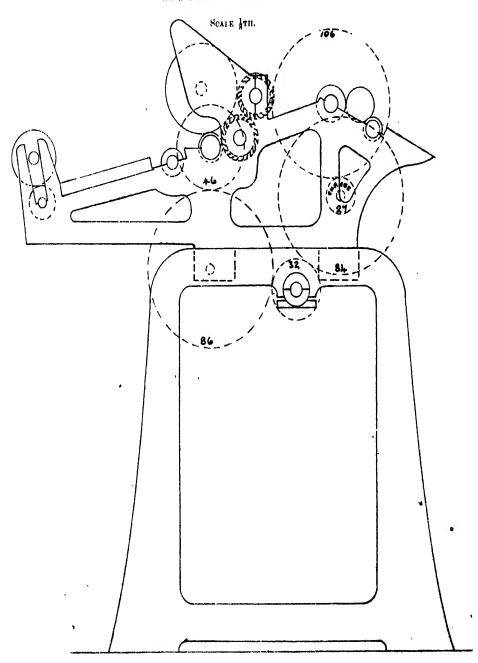


DRAFT GEARING FOR DOUBLE ROTARY FRAME.

Back Roller Wheel,	•••	•••	•••	106 teeth.
Draft Pinon,		•••	• • •	27 ,,
Stud Wheel,	•••		•-•	84 ",
Drawing Roller Whe	el,	•••	•••	46 ,,
Diameter of Drawing	Roller,	•••	•••	24".
" Retainin	g Roller,	•••	•••	3″
	106 × 84	$\frac{\times 2\frac{1}{2}}{\times 3}$. 6 diaft.		

SPINNING ROVING FRAME.

Arrangement of Draft and Twist Geahing for Roving, Bobbin $8'' \times 4''$

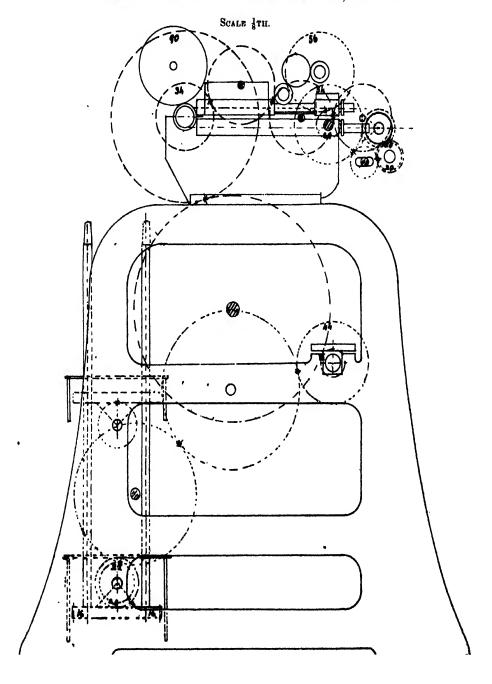

SPINNING ROVING FRAME, 8" TRAVERSE.

DAFT ARRANGEMENT-

Retaining Roller Wheel,	•••	•••	•••	56	tootl	h.
Drawing Roller Pinion,	•••	•••	•••	34	,.	
Double Intermediate,	•••	•••	54 au	d 20	,,	
Back Shaft Pinion,	•••	•••	••	20	,,	
" " Change	e,	•••	•••	20	••	
Diameter of Drawing Rolle	er and Retain	ning Rolle	er, 2" and	1]]".		

TWIST ARRANGEMENT-

Drawing Roller Wheel,	•••	•••	•••	90 tooth.
Wheel on Main Shaft of Ro	oving,		•••	44 ,,
Bevel Pinion on Spindle Sh	a f t,	••		24 "
Twist Pinion,	•••	•••	•••	14 ,,
Pinion on end of Spindle Sl	haft,	•••	•••	22 "
,, on Spindle,	•••	•••	•••	16

Diameter of Drawing Roller, 2" = 6.28 circumforence.

$$90 \times 44 \times 24$$
 $14 \times 22 \times 16 \times 6 \cdot 28$: 3 Twist per inch.

90
$$\times$$
 44 \times 24 \times 22 \times 16 \times 6 28 $=$ 43 Constant Number. Pinlou.

Speed Roving Spindles,
$$\frac{44}{2} \times \frac{24}{16} = 3$$
.

Speed Spindles - Speed Main Shaft of Roving x 3.

The Speed of Spindles of Roving Spinning 48/60 lbs. west yarn is . about 1050 revolutions per minute.

SPEEDS OF JUTE SPINNING MACHINERY.

(Recommended by Fairbairn, Naylor, Macpherson, & Co., Ltd., Leeds).

4 ft. × 6 ft. SHELL BREAKER CARD.

Oylinder, 190 revolutions per minute; Surface Speed, 2485 ft. over points of pins.

7" Workers, 24 revolutions per minute; Surface Speed, 54 ft. over points of pins.

11" Strippers, 133 revolutions per minute; Surface Speed, 443 ft. over points of pius.

Change pinion on Cylinder, 48 teeth.

4 ft. × 6 ft. CIRCULAR FINISHER CARD.

Cylinder, 190 revolutions per minute; Surface Speed, 2470 ft. over points of pins.

7" Workers, 15 revolutions per minute; Surface Speed 33 ft. over points of pins.

11" Strippers, 147 revolutions per minute; Surface Speed, 490 ft. over points of pins.

Change Pinion on Cylinder, 56 treth.

1st and 2nd Spiral Drawings.

150 to 160 Drops of Gill Bars per minute.

PUNH BAR OR SLIDE DRAWING.

350 Drops of Gill Bars per minute.

1st CIRCULAR DRAWING.

306 Drops of Gill Bars per minute.

SPIRAL ROVINGS, 10" × 5" BOBBINS.

Speed of Spindles, 540 revolutions per minute.

Drops of Gill Bars will vary with the Twists and Drafts, but the bars can be run at the same speed as for Spiral Drawing.

SPEED OF SPINNING FRAME SPINDLES.

6"	Traverse,	1500	revolutions	per minute.
5 <u>3</u> ″	,,	1600	,,	
5"	,,	1800	93	,,
11,"	"	2000	,,	٠,
41"	11	2200	•,	,,
4"	11	2600	11	• ,,
3 1"	11	2800	17	**
31"	>1	3000	**	"
31"	,,	8200		33
3"	91	3400	,,	` 99
$2\frac{3}{4}$ "	11	8400	"	27

REMARKS ON PREPARING MACHINERY.


Before finishing this chapter upon preparing machinery, let me make a few general remarks. If work of a fair quality and quantity is to be made, the machinery must be kept clean and in good mechanical order; the breaker and finisher workers, strippers, &c., should be regularly picked and cleaned in a thorough manner during the meal hours; and once every three months the setting of the rollers should be tried, to see if they are correct, and adjusted where necessary; all the pins in cylinder, &c., kept in good order; the drawings and rovings cleaned thoroughly once every six weeks or two months at least, and the cleaning should be done as much as possible in the day time, so that the condition of the machines can be thoroughly seen and examined, and little things can then be put right-wheels and pinions, &c., renewed, where necessary. all this is done in an orderly and systematic manner, the machinery will run without much trouble or annoyance to the workers, and quality and quantity will be ensured; without this there will neither be the one nor the other, but continual worry and annoyance will be the daily result.

Dimensions of Sliver Cans in use for Preparing Machinery :-

```
Breaker Cans, 13" × 11" × 36". Oval.
Finisher , 12" × 9" × 36". ,
Drawing , 12" × 9" × 36". ,
Roving , 10" × 7" × 36". ,
```


Note.—Sometimes the breaker, finisher, and drawing cans are made oblong, the roving cans are always made oval.

All the calculations and illustrations in this chapter are off machines made by Messrs Fairbairn, Naylor, Macpherson, & Co., Limited, Leeds, who stand first as makers of jute machinery, their attention to the many intricate details, as well as to the general finish and fitting up of this class of machinery, having secured for them a world wide reputation. Without their kind assistance and permission it would have been impossible to illustrate the various machines. The calculations for machines by other makers are worked out by the same methods.

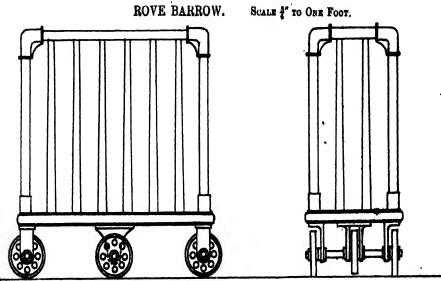



Front Elevation,

End Elevation.

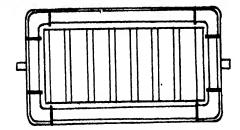

This Barrow holds one shift— 56 roves × 10" × 5" roving.



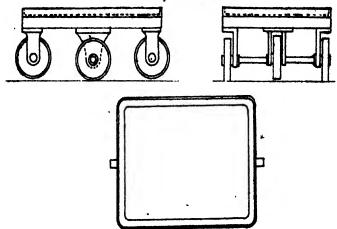

ARRANGEMENT TO PRODUCE ROVE FOR 9/12 LBS. WEFT AND. WARP HESSIAN QUALITY.

WEIGHT OF ROVE WANTED 721/75 LBS. PER SPYNDLE.

Breaker Single Doffer—Cylinder, 190 revolutions per minute; cylinder pinion, 46 teeth.

Dollop, 33 lbs.; clock, 13:13, calculated from feed roller 10% diameter = 33:77 inches circumference.

Draft between feed and drawing roller-

$$\frac{4 \times 80 \times 110 \times 110}{52 \times 26 \times 20 \times 109} = 1332$$
 draft.

Finisher, 10 ends into 1; Cylinder, 190 revolutions per minute; cylinder pinion, 56 teeth.

Draft between feed and drawing roller-

$$\frac{4 \times 104 \times 96 \times 96}{75 \times 32 \times 28 \times 4} = 14.26$$
 draft.

Speed pulleys, 180 revolutions per minute.

Push bar drawing, 4 ends into 1; pulley pinion, 34 teeth.

Leather pressing roller-

$$\frac{160 \times 16}{14} = 1824$$
 revolutions pulley per minute.

$$\frac{2\frac{1}{2} \times 56 \times 74 \times 50 \times 28 \times 32}{52 \times 20 \times 84 \times 39 \times 40 \times 118} = 3.5$$

Pulleys, 160 revolutions per minute.

Second drawing spiral, 2 ends into 1; pulley pinion, 30 teeth-

$$\frac{160 \times 16}{16} = 160$$
 revolutions of pulleys per minute.

$$\frac{21 \times 34 \times 68 \times 69}{43 \times 25 \times 25 \times 112} = 7.65$$
 draft.

Roving, 1 end into 1—Speed pulleys, 225 revolutions per minute.

$$\frac{21 \times 32 \times 70 \times 70}{38 \times 24 \times 24 \times 115} = 8^{1}31$$
 draft.

The following example will show arrangement and weight of rove in this system:—

Breaker dollop, 83 lbs.

clock, 18.13 yards.

draft, 13.32.

 $13.32 \times 13.13 = 174.89$ yards delivered at front of breaker, weighs 33 lbs.

Finisher, 10 ends into 1.

Draft, 13.32.

 $\frac{33 \times 10}{13 \cdot 32} = 24 \cdot 77$ lbs. weight of 174 89 yards at front of finisher.

Push bar drawing, 4 ends into 1.

Draft 3.5

 $\frac{24.77 \times 4}{3.5}$ = 28.31 lbs. weight of 174.89 yards at front of 1st drawing.

Second drawing spiral, 2 ends into 1.

Draft.

 $\frac{28.31 \times 2}{7.65} = 7.40 \text{ lbs. weight of } 174.89 \text{ yards at front of } 2\text{nd drawing.}$

Roving Spiral—56 spindles, $10'' \times 5''$ pitch—675 revs. of spindles per minute.

Draft 8-31.

 $\frac{7.40}{8.31}$ = .890 lbs. weight of 174.89 yards at front of Roving.

174.89: 14400:::890:73.2 lbs. per spyndle.

The actual weight of this rove was $72\frac{1}{2}$ lbs.

ARRANGEMENT TO PRODUCE ROVE FOR 7/8 LBS. WARP.

WEIGHT OF ROVE WANTED 671 LBS.

Breaker Double Doffer-cylinder, 190 revolutions per minute; cylinder pinion, 44 teeth.

, clock, calculated from feed roller 201" diameter = 12.95 yards.

,, draft, 9·7 ; dollop, 22 lbs.

12.95 × 9.7 = 125.6 yards delivered at front of breaker in one round of clock.

Finisher single doffer—10 ends into 1; cylinder, 190 revs. per minute. Draft cylinder pinion, 56 teeth.

 $\frac{22 \times 10}{14 \cdot 26}$ = 15.42 lbs. weight of 125.6 yards at front of finisher.

Push Bar Drawing, 4 ends into 1; draft, 3}; leather pressing rollers; pulley pinion, 34 teeth.

 $\frac{160 \times 16}{11}$ 182% revolutions pulleys per minute.

 $\frac{15^{\circ}42 \times 4}{3\frac{1}{4}}$ = 17.62 lbs. weight of 125.6 yards at front of 1st drawing.

Second Drawing Spiral, 2 ends into 1.

Draft, 7.65.

 $\frac{17.62 \times 2}{7.65}$ = 4.60 lbs, weight of 125.6 yards at front of 2nd drawing.

Roving Spiral, 1 end into 1-Speed Spindles 675 revs. per minute.

Draft, 8.

 $\frac{4.60}{8} = .575$ lbs. weight of 125.6 yards at front of roving.

Actual weight of this 10ve, 65/67 1lbs.

Roving, - - - 32

Twist Pinion, - - 32

Grist , - - 31

Traverse , - - 28

Rack , - - 17

These three examples are sufficient for the explanation of this part of the subject. Different arrangements are in operation to do the same thing. Many of them are based upon the opinion and experience of those in charge, others are in a measure based upon convenience. The production required from the system also determines to a certain extent the arrangement. Theory in this matter has often—within limits, of course—to give way to what is best in practice.

ARRANGEMENT TO PRODUCE ROVE FOR 16/24 LBS. WEFT OF ORDINARY HESSIAN QUALITY.

ROVE TO BE 105/110 LBS.

Breaker Single Doffer-cylinder, 195 revolutions per minute; cylinder pinion, 46 teeth.

Dollop, 33 lbs. ; clock—13·16 yds., calculated from feed roller $10\sqrt[3]{}''$ dis. = 33·77 inches.

Draft between feed and drawing roller-

$$\frac{4 \times 80 \times 110 \times 110}{52 \times 26 \times 20 \times 102} = 13.32$$
 draft.

Draft between doffer and drawing roller-

$$\frac{4}{23} \times \frac{54}{26} \times \frac{88}{15\frac{1}{2}} = 2.05 \text{ draft.}$$

This is only shown as a draft that is necessary for delivery of material from doffer to drawing roller. This draft is not necessary in working out the total draft of breaker.

Finisher Single Doffer—cylinder, 195 revolutions per minute; cylinder pinion, 64 teeth.

Finisher, 10 ends into 1.

Draft between feed and drawing roller-

$$\frac{4}{75} \times \frac{104}{32} \times \frac{96}{32} \times \frac{96}{4} = 12.48 \text{ draft.}$$

CIRCULAR DRAWING—pulley pinion, 32 teeth.

$$\frac{21}{14} = 240 \text{ revolutions per minute.}$$

Pressing and drawing roller, hard to hard $(3\frac{1}{2}")$ —

$$\frac{3}{2} \times \frac{120}{50} \times \frac{27}{15} \times \frac{15}{3} = 3.43 \text{ draft.}$$

4 ends into 1.

Second drawing spiral—pulley pinion, 30 teeth.

Leather pressing rollers-

$$\frac{160}{16} \times \frac{16}{16} = 160 \text{ revolutions per minute.}$$

$$\frac{2\frac{1}{8} \times 34 \times 68 \times 69}{32 \times 25 \times 25 \times 11\frac{15}{140}} = 10.32 \text{ draft.}$$

2 ends into 1.

Roving-Rotary, 48 spindles; 10" x 5" pitch.

Speed spindles-

Twist arrangement-

$$\begin{array}{l} 60 \times 44 \times 21 \\ 42 \times 22 \times 14 \times 7.06 = 60 \text{ twist on rove.} \\ 60 \times 44 \times 21 \\ \hline C \times 22 \times 14 \times 7.06 = 25.495 \end{array}$$

Rotary Rowing Grist arrangement-

$$\frac{2\frac{1}{4}}{44} \times \frac{80}{\times} \times \frac{60}{C} \times \frac{118}{118} = 126.686$$
 constant number.

The following example will show the way to find weight of rove in this system—

Breaker dollop, 33 lbs.

, clock, 13·13 yds.

,, draft, 13·32 ,,

 $13.32 \times 13.13 = 174.89$ yards delivered at front of breaker, weighs 33 lbs.

Finisher, 10 ends into 1.

Draft, 12:48.

$$\frac{33 \times 10}{12'48}$$
 = 27.24 lbs. weight of 174.89 yards delivered at front of finisher

Circular-1st drawing, 4 ends into 1.

Draft-

$$\frac{27.24 \times 4^{\circ}}{8.43}$$
 = 31.76 lbs., weight of 174.89 yards delivered at front of lst drawing.

Second drawing-spiral 2 ends into 1.

Draft, 10.32.

Roving rotary, 1 end into 1-draft.

Draft-4.69.

$$\frac{6.15}{4.69} = 1.31$$
 lbs., weight of 174.89 yards delivered at front of roving.

174.89 : 14400 : : 1.31 : 107.8 lbs. per spyndle.

The actual weight of this rove was 105/106 lbs.

Roving twist pinion, 42 teeth.

This roving made 44 shifts in 10 hours, and produced rove at 105 lbs per spyndle, and kept three trames 72 spindles each, 4 in. pitch, 5 in traverse, spinning 20 lbs west. The production from these three frames was 242 spyndles in 10 hours, this average being taken over a period of three months.

$$\frac{1 \text{ tons (wis Qr. Lbs})}{242 \times 20 - 4840 \text{ lbs.}} - \frac{2}{2} = \frac{3}{3} = \frac{1}{6}$$

Spinning frame-Particulars of speed spindle

$$\frac{220}{14}$$
 $\times \frac{28}{14}$ $\times \frac{10}{17}$ 2514 2 revs of spindles per minute.

To find speed of spindle -

$$A \times B \times D$$

- A Speed Driving Shaft,
- B Drum upon Driving Shaft.
- C Pulleys on Cylinder Arbor of Frame
- D Diameter of Cylinder.
- E Diameter of Spindle Wove

Cylinder 10" diameter; Drawing Roller Wheel 120 teeth.

Twist Wheel and Pinion 90 and 76 teeth.

Spindle Weive 1 !" diameter.

Drawing Roller 13" diameter

Retaining ,, 1½'

" Wheel 75 teeth.

Double Intermediate 80,86. Draft arrangement.

Twist arrangement—cylinder pinion, 34 teeth; drawing soller, 4\frac{1}{8}" din. - 12 95 circumference.

$$\frac{10}{13} \times \frac{90}{34} \times \frac{120}{76} \times \frac{12}{95} = 1.84$$
 twist per inch upon this yarn.

Grist arrangement -Drawing Roller Pinion or Grist Pinion 35 teeth.

$$\frac{41 \times 80 \times 75}{35 \times 86 \times 11}$$
 5 4 draft.

80 spyndles from 72 spindles =

DOUBLINGS AND DRAFTS.

7 to 12 LBS.

Breaker—30 lbs. dollop—to 12 yards clock—draft 12.
Finisher—10 ends into 1—cfreular—draft 16.
1st drawing—4 ends into 1—push-bar—draft 4.
2nd drawing—2 ends into 1—spiral—draft 6½.
Roving, - - ,, draft 8.
Will give 72 lbs. rove—exclusive of allowance for waste.

DOUBLE DOFFER CARDS.

Breaker—22 lbs. dollop—to 12 yards clock—draft 10. Finisher—10 ends into 1—circular—draft 14.

1st drawing—4 ends into 1—push-bar—draft 4.

2nd drawing—2 ends into 1—spiral—draft 6½.

Roving, - , draft 8.

Will give 74% lbs. rove—exclusive of allowance-for waste.

DOUBLINGS AND DRAFTS.

7 TO 12 LBS.

Rotary System.

Breaker 30 lbs. dollop to 12 yards c	lock,		•••	1)raft	14.
Finisher, 10 ends into 1-circular,	•••			,,	21.
1st Drawing, 4 ends into 1,	•••	•••		,,	41.
2nd , 2 , 1,		• • •	•••	"	$5\frac{1}{4}$.
Roving,	• • •			٠,	6.
Will give 73½ lbs. rove—exclus	sive of	allowar	ice for	waste.	

-

SACKING WEFT-AVERAGE 32 LBs.

Breaker 28 lbs, dollop to 12 yards clock,	•••		Draft 13.
Finisher, 10 ends into 1—half circular,	•••	•	,, 16.
lst Drawing, 4 ends into 1—push bar,	• • •	•••	,, 3⅓.
2nd ,, 2 ,, 1 ,,		•••	" 4] .
Roving-spiral, *		• • •	,, 7.
TITIES 100 the nove evaluates of	wanta .	llowand	345

The results given above will be the same whether the finisher card be fed from laps or cans, provided the same number of ends be put up in each case.

The machines and draft arrangements for Sacking Warps are precisely the same as for Hessian Yarns, the only difference being that the quality of jute is lower in the former case, and the yarn is frequently harder twisted.

SACKING WARP ARRANGEMENT.

Dollop 32 lbs. .. Breaker Clock = 10 yds.

Breaker Draft Arrangement.

$$\frac{4'' \times 72 \times 120 \times 120}{72 \times 10 \times 24 \times 94''} = 14$$
 draft.

 $14 \times 10 = 140$ yds. at front of breaker.

Finisher-10 ends into 1.

$$4'' \times 72 \times 120 \times 120 \times 120 \times 120 \times 13 \times 120 \times 120 = 15.91$$
 draft.

 $32 \times 10 \div 15.31 = 20.9$ lbs. weight of 140 yards at front of finisher.

1st Drawing (Lawson) 8 ends into 1.

$$\frac{3\frac{3}{16} \times 40 \times 70 \times 23}{23 \times 20 \times 58 \times 2'} = 4 \text{ draft.}$$

 $15.81 \times 8 \div 4 = 30.62$ lbs. at 1st Drawing.

2nd Drawing (Push Bar) one into one.

$$\frac{24'' \times 56 \times 74 \times 50 \times 23 \times 35}{60 \times 20 \times 31 \times 39 \times 40 \times 116} = 4\frac{1}{2} \text{ draft.}$$

 $30.62 \div 4.5 = 6.8$ lbs. at 2nd Drawing.

Roving (Lanson Spiral) one into one.

$$\frac{21'' \times 36 \times 56 \times 63}{48 \times 24 \times 24 \times 11''} = 5.9 \text{ draft.}$$

 $6.8 \div 5.9 = 1.15$ lbs. at roving.

140:14,400::1.15:118 lbs. weight of rove.

Rove actually weighs 115/120 lbs.

From this is spun 10/14 lbs. Warp,

SACKING WEFT ARRANGEMENT.

Dollop 82 lbs.

Breaker Clock - 10 yds.

Breaker Draft Arrangement.

$$\frac{4'' \wedge 72 \wedge 120 \times 120}{72 \times 16 \wedge 28 \wedge 9}$$
" = 12.03 draft.

 $12.03 \times 10 = 120.30$ yds. at front of breaker.

Finisher-10 ends into 1.

$$\frac{4^{\circ} \times 72 \times 120 \times 120}{72 \times 18 \times 26} \times \frac{120}{91}$$
 12.95 draft.

 $32 \times 10 \div 12.95 = 24.71$ lbs. weight of 120.30 yds. at front of finisher.

1st Drawing (Lawson's Link Gill) 8 ends into 1.

$$\frac{8.5}{23} \times \frac{40}{20} \times \frac{70}{58} \times \frac{23}{20} = 1$$
 draft.

 $24.71 \times 8 \div 4 = 49.42$ lbs. at 1st Drawing.

2nd Drawing (Push Bar) one end into one.

$$-2\frac{1}{4}$$
" \times 56 \times 74 \times 50 \times 23 \times 35 \times 4 draft, 67 \times 20 \times 34 \times 39 \times 40 \times $-1\frac{1}{16}$

49.42 + 4 = 12.35 at 2nd Drawing.

Roving (Ralary) one into one-(Lawson Roving).

$$-\frac{23'' \times 144}{72} \times \frac{74}{20} \times \frac{74}{3''} = 5.55$$
 draft.

 $12.35 \div 5.55 = 2.22$ lbs. at roving.

120.30: 14,400: :2.22: 265 lbs. weight of rove.

Actual weight of rove is 240 lbs. From this we spin from 32 lbs. up to 44 lbs.

JUTE SPINNING.

When the rove bobbins are filled at the roving, they are taken off and put into a rove barrow. They are then taken to the spinning department, put upon the spinning frames, and it is here that the operation of spinning commences

The spinning operation is performed by one machine. machine is called a spinning frame. Spinning frames are very much of the same construction, they only vary in the size of the spindle and the pitch of the spindles. By the pitch of the spindle is meant the distance between the centre of each spindle; and in speaking of a spinning frame, we usually speak of the frame as being of 4 inch pitch, 4 inch traverse, 4½ inch pitch, 4½ inch traverse, and so on as the case may be. As already mentioned, the pitch of the frame is the distance between the centre of the spindles; and by the traverse is meant the length of the bobbin which is to be filled upon the frame. In the spinning of hessian warps and wetts three sizes of bobbins are commonly in use--33 inch, 4 inch, and 5 inch. The 31 inch bobbin is used to spin from 7 to 8 pounds warp; the 4 inch bobbin, from 9 to 12 pounds, and sometimes 16 pounds. The 5 inch bobbin is used to spin from 16 to 24 pounds per spyndle. In the plan of the mill in this book the frames are all given 72 spindles, 4 inch pitch; but in a mill of from 5000 to 6000 spindles it is better to have a certain proportion of the spindles 33 inch, 4 inch, and 5 inch traverse; when this is the case, care should be taken to have all the frames made the same length, or nearly so, over all. This will keep up the uniform width of the passes from north to south, and to a considerable extent facilitate the regular traffic as well as add to the general appearance of this part of the mill.

The successful production of the yarn from a spinning frame depends more upon the worker in attendance (called a spinner) than any other machine in the mill. The frame may be in perfect order and mechanically correct, but everything will depend upon the ability of the spinner to produce good work, and a fair quantity of it. This ability can only be attained by long experience at this class of work.

There are three motions on the spinning frame:-

First, - The twist arrangement.

Second. - The grist arrangement.

Third, - The traverse arrangement.

The twist arrangement of wheels fixes the amount of turns or twists per inch to be put upon the yarn being spun. arrangement of wheels fixes the weight of the yarn-say, 7, 8, 9, or 10 pounds per spyndle of 14,400 yards, usually termed a spyndle. Whatever the size of yarn may be given, it is always understood that the spyndle contains 14,400 yards (see yarn table in recling chapter). The traverse arrangement, consisting of heart and heart motion wheel and pinion on the end of retaining roller, by the action of the lever from the heart (which is a form of eccentric or cam) to the traverso pulleys, which are fixed upon the traverse shaft, chains attached to these pulleys, and also to lever which is actuated by the eggentric or cam-commonly termed the heart motion-moves the bobbin board up and down If the frame is for 4' bobbins, that means the traverse of the bobbin up and down will be 4 inches up and 4 inches down, and so on alternately. The form of the heart determines the shape of the bobbin. The usual practice is to shape the heart so that the bobbin will be thickest in the centre, and this makes the bobbin build better while filling. An illustration of the heart motion and arrangement of the traverse pulleys and chains is given, and also the calculation for the traverse.* The same heart or eccentric is used for 33", 4", 41", and 5" traverse, the difference being made in the lever and pulleys for each of these sizes. spinning frame it is of the utmost importance that the bands, or lists, as they are commonly termed, be kept in good order. this band which drives the spindle is not kept uniformly tight, slack-twisted yarn will be the result. The broader the band you can work with the better, for 33 inch spindles the band should be 13 in. broad, 4 inch spindles 2 inches broad, and 41 to 5 ins. 21 in. bands; the length of band required in an ordinary frame, 4 inch pitch 4 inch traverse, is 65 inches. The pressing rollers should also have great care and attention bestowed upon them; and the frames in a large mill should be systematically gone over day by day, and the rollers carefully examined, and the bad ones-that is, those that are chipped or "off the truth"-taken out and turned in a turning The remaining point of importance to be mentioned is the adjustment of the rove plate over which the rove passes as it comes from the retaining roller to the drawing roller.

^{*} See page 207 for illustration of Heart Motion and Traverse Arrangement.

INSTRUCTIONS AS TO THE WORKING OF ROVE PLATE ON JUTE SPINNING FRAME (SEE Page 213).

First, let it be understood that the movement backward and forward of the rove plate and conductor in a spinning frame is intended either to open out the twist of the rove or to keep it in for a certain length of time while the rove is passing between the retaining and drawing rollers. The slower the rove passes down from the retaining roller the longer time will be taken for the twist to come out of the rove; hence the reason for keeping the rove forward by the plate, and keeping the top half of conductor well back when the rove is passing quickly between retaining and drawing rollers, as in a heavy size more freedom is required by the rove to allow the twist to come out of it quickly, otherwise the rove "will run."

Again, when spinning a light size of yarn, 7 to 8 lbs. per spyndle, you wish to keep the twist on the rove while passing between retaining and drawing rollers as long as you possibly can—within limits, of course—as in a light size, if you open up the twist of the rove too quickly as it comes off the rove plate to the bite of pressing and drawing rollers, it will tend to breakage of the yarn—particularly weft yarn.

Thus, for yarn, say, 8 lbs, weft, to allow the twist being kept on the rove, set the rove plate so that rove will rest easy on the front of conductor. This eases the strain down to the bite of pressing and drawing rollers, and saves the yarn from breaking where there is not much twist being put on, as in weft of the lighter weights.

Then, for 8 lbs. warp yarn, bring forward the plate a little, to allow the twist to come off the rove a little quicker than in the previous case. This will allow the yarn to draw more equally, and it will take on the twist better; and there is not so much danger of the yarn breaking with the twist that is put on warp yarns.

Then, for, say, from 12/14 lbs. warp and weft yarns, bring forward the rove plate about a ‡ of an inch from the position referred to in above instructions for 8 lbs. weft and warp, and let the rove touch the plate across its whole breadth. This putting forward the plate is intended to make the rove tighter between the retaining roller and conductor, and tends to keep the rove from "running," as it is termed. Then put back the rod from which the conductor is hung, so that the rove while passing through the conductor will only touch the back of

its lower half, the upper half of the length of conductor being kept about "" clear of the rove as it comes over the rove plate. This position of rove plate, conductor rod, and conductor, allows the twist to come out off the rove in sufficient time to allow the drawing roller to put on the proper draft without breakage to the yarn or the "running" of the rove. Then, say, for 16/24 lbs. yarn, as the rove will in these sizes be heavier, and also be passing still faster through between retaining roller and drawing roller the distance forward of rove plate will have to be slightly increased, and the conductor rod also put a little further back, than in the case of the 12/14 lbs. yarn.

A new arrangement of gear attached to the rove plate of spinning frames made by Messrs Fairbairn, Naylor, Macpherson, & Co., Limited, saves much time. All the rove plates are fixed upon one rod, and by the movement of a handle placed at driving end of frame the rove plates across the whole length of frame are moved at one time, and can be readily set to the position required for the yarn being spun. An illustration is given (see page 213).

*With reference to the pressure on the pressing rollers, you will require more pressure on the rollers for 24 lbs than for 8/12 lbs., but one cannot be too careful as to the pressure put upon the pressing rollers. If more pressure is being put on the rollers than is absolutely necessary, this means more horse-power, which, in a mill of 5/6000 spindles, might be—and, I believe, often is—a very serious thing in regard to consumpt of coal, oil, &c. This pressing of the rollers is one of the things that must be learned by care, attention, and experience.

EXPLANATION OF THE TERM THE ROVE "RUNNING"

If the twist is not entirely out of the rove by the time it is actually at the bite of the drawing and pressing rollers, the rove will "run"—that is, the rove will be caught by the pressing and drawing rollers and dragged down at the surface speed of the drawing roller. The pressure on the retaining roller will not keep it back. This, of course, is owing to the strength of the rove, the twist not being out of it. By the time the rove is in the bite, it must be in the form of a thin sliver. The causes for this "running" may be various. If the pressing roller against the retaining roller gets out of order this would cause it; but it mostly happens when the rove plate and conductor are not properly set for the size of the yarn being spun. For example if you attempted to spin, say 20 lbs. with rove plate and conductor set to spin 5 lbs., the rove would certainly "run." This, of course,


*See pages 210 and 211 for illustrations of the methods adopted to apply pressure to pressing rollers

will be readily gathered from what has been said as to the setting of rove plate and conductor, for the different sizes; and in the extreme case which we have taken as an example, the running of the rove would in that case be caused by the increased speed of the rollers drawing the rove down before the twist was properly out; and this, in a certain degree, is more or less always the cause of the rove "running" - always, of course, making certain that the pressing roller, drawing roller, &c., are in proper working order.

SPEED OF SPINNING FRAME SPINDLES.


So far as the speed of the spindles is concerned, very much depends upon the size of them, if a fair speed is to be kept upon the frame without damage to the spindles. Very many of the spindles are made too light both in the haft and in the blade. A heavy collar or neck, fitted tight into the spindle rail, will also conduce very much to the life of the spindle, if a fair speed is being put upon it, and if that speed is to be kept on continuously without damage. Whenever any lift is noticed upon the spindle, the neck should be knocked down, to take the lift off. Nothing will damage the spindles more than the neck slack in the neck rail, or the cone of the spindle being allowed to wear in the neck until the spindle has a lift between the neck and the step. It is imperative that the neck be kept close down on the cone-this is the secret of the life of the spindle. following speeds are given to show what is the regular speed to be put upon the different sizes of spindles for the different sizes and twists of yarn being spun.

- 3" spindle, spinning 8 lbs hard warp, say, 5½ to 6 turns per inch, speed spindle 3,300 revolutions per minute.
- $3\frac{\pi}{4}$ spindles, spinning 8 lbs starching warp, say, $4\frac{\pi}{4}$ turns per inch = 3,100 revolutions per minute.
 - 4" spindles, spinning 8 to 10 lbs. weft = 2,700 revolutions per minute.
 - 12 to 16 pounds = 2,600 revolutions per minute.
 - 18 to 24 pounds weft = 2,500 revolutions per minute.

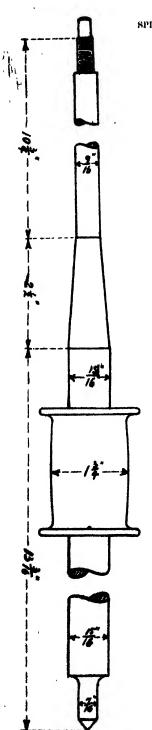

SPINNING SPINDLE AND FLYER.

4" TRAVERSI - HALF SIZE.

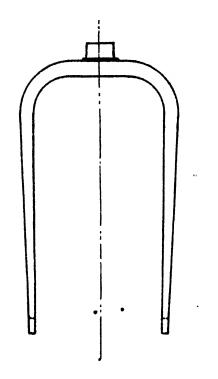



THE PRODUCTION FROM THE SPINNING FRAMES.

So far as the production of the spinning frames is concerned, everything here, as in the roving in the preparing flat, depends upon the organization, steadiness, care, and attention of the workers, from the overseer onwards. Without organization, perseverance, and the individual attention of the workers, the production will suffer. As in every department of the mill, cleanliness here is of the utmost importance. Without cleanliness you cannot be doing much good in the spinning department. If you are clean in this department you may not be doing all that you might desire to do; but if you are dirty you may rely upon it, you cannot be doing very much good.

The question of production in this department is considered by many the most important in the mill. I think, however, that the production from the preparing machinery is quite as important as the production from the spinning machinery. We very soldom hear anything of what the production of the preparing machinery is. The production from a roving frame is of quite as much importance as the production of a spinning frame. Many things go to decide the question of production in the spinning department. First, the question of twist is an important factor in the production. If a mill be spinning a large proportion of west yarns, the result will, or ought to be, a much larger production than from a mill working a large proportion of warp yarn. The cause of this difference of production is, of course, owing to the difference between west and warp twist. A frame which would do 60 spyndles of 8 or 9 pounds hessian weft, the same frame spinning warps of the same quality would not do much more than 50 spyndles. While it is perfectly true that the twist plays an important part in the question of production, there are other causes which will add to it, and the want of which will just as readily tend to the loss of production. In speaking of production in this department, it is great folly to speak of what is the best that can be done in the course of a day, a week, or even a month. The only correct average for the production of a spinning department is to take the average over a year. We very seldom here what the production for a year is, but we often hear of what we have done in a day-shall we say a very fine day, with the weather and everything else in favour of a good result. enough, we never hear how much production has been taken off in the morning. If a fair production is being made-say, 4 to 4% spyndles per spindle, in a mill spinning warps and wefts, the whole of which is

to be woven in a factory which may be a part of the same works, an average of 4 to 41 spyndles per spindle for all the year round will be a fair production; and to do this, will require the jute not only to be of the quality indicated in the chapter upon batching, but it will require all the points which the reader's attention was directed to in the introductory chapter-namely, punctuality, cleanliness, and organization. Without determination to be punctual the production suffers, and without the same determination to be clean, you will not have much chance to get this production; and without organization, which should be the constant care and attention of those in charge of this department, you will not have very much chance of the daily and weekly output being of any regularity worthy of the name. But given these points, and if attention and consideration be bestowed upon them by all those interested, a very fair and reasonable production, day by day, may be looked for: and will, with perseverance, give to a mill an average for a year which will compare favourably with the ordinary run of a jute spinning mill. While we have said all this on the question of production, no one, not even an expert, can very well speak upon the production of a jute mill without thoroughly understanding the kind of work that is being done. The production of a spinning department might seem to an outsider fairly good; and if investigated by an expert, there would be nothing special about it. This, you will see, might be the case from what has already been said as to the twist being put upon the yarn; while it is also true that the production of a mill might seem to an outsider a very ordinary one--they might say it was very poor, but which, upon investigation, might be very good; this being also to some extent depending upon the class of yarn The real success, so far as production is concerned, will be found by every one who is personally interested doing every day their very best, and if all do this, the best results will be sure to follow.

When the bobbins have been filled they are put into boxes and wheeled away on a bobbin barrow to either the cop-winding, the warp-winding, or the reeling departments. To see that the empty bobbins are kept steadily on the road back from these departments to the spinning frames is not the least important point to be kept before the people in charge of the spinning department. Every empty bobbin should be set up in its place ready to be handled by the shifters when they come to shift the frames. If this is not done endless annoyance and confusion, not to say anything of loss of time, will be the result.

Illustrations are given of spinning frames by two makers. The Messrs Low, of Monifieth, make almost a speciality of this machine; and as makers of frames, they stand in the front rank. I am indebted to them for their kindness in giving me permission to illustrate their spinning frame. The following pages give the particulars of gearing for twist, and draft calculations by both makers. There is also given the heart and traverse motion arrangement by both firms. The diagrams will be of much service in showing the whole arrangement of this part of a spinning frame, which is so important to the proper filling of the bobbin.

TWIST OF HESSIAN YARNS.

The twist of these yarns may vary according to the quality of the jute and the quality of the hessian being made; but for a good standard hessian, in a mill where it is the aim and intention to produce the same all the year round, there should be no necessity for varying the twist; and I am convinced, from experience, that it is unnecessary and should never be permitted on any consideration. Twist is money, and this should never be lost sight of. But apart from that, tampering with the twist of the yarn, either warp or weft, means tampering with the quality and appearance of the cloth. You will not have any suggestion as to softening the twist, it will always be the other way-"harden it up." This, of course, reacts upon the finish of the cloth, and may lead to serious trouble, on the delivery of the goods. But, as has been already said, if there is an effort all round to keep the quality of the batch as equal as possible, there will not be any necessity to tamper with the twist, which can only lead to loss of production in the first place, and trouble as to the quality of the goods manufactured from the same.

The following twists are given as an illustration of the twist put upon these yarns when they are to be worked into cops and wound on a bobbin warp winding machine, and woven at once in a factory adjoining a mill. If the yarns, weft and warp, are to be reeled and bundled, they must be coped and wound again; a little more twist may sometimes be necessary, but not much—say, not more than 3% on the weft, and 2% on the warp pinion.

West 7	Twists per inch. 3.80	Starching Warp.	Twists per inch. 4:49	Hard Warp. 8	Twists per inch.
8	3.44	8	4.28	10	4 87
9	3.14	9	4.	14	3.81
10	2.89	10	3.81		
12	2.58	12	8.65		
14	2.40	14	3.18		
16	2.19				
20	1.90				
24	1.68				

Usual weft sizes for hessians, 7/14 lbs.

Spinning frame, 4" pitch, 4" traverse (Fairbairn)

Twist arrangement and calculations-

Diameter of drawing roller, 4".

Cylinder pinion, 28 teeth.

$$\frac{A}{B} \times \frac{C}{D} \times \frac{E}{F \times G} = \text{twist per inch}$$

In this case-

ì

A = diameter of cylinder.

B == ,, spindlo werve.

C = wheel of double intermediate, on which is twist pinion.

D - cylinder pinion.

E = drawing roller wheel.

F = twist pinion.

G = circumference of drawing roller.

Drameter, D. Roller.

$$4'' \quad \frac{10}{1\frac{3}{4}} \times \frac{90}{28} \times \frac{120}{60 \times 12 \cdot 56} = 2 \cdot 92 \text{ twists per inch.}$$

$$\frac{10}{1\frac{3}{4}} \times \frac{90}{28} \times \frac{120}{\frac{10000}{10000} \times 12 \cdot 56} = 175 \cdot 484 \text{ constant number for twist.}$$

$$\frac{10}{1\frac{3}{4}} \times \frac{90}{1\frac{3}{4}} \times \frac{120}{29} \times \frac{120}{\frac{10000}{10000} \times 12 \cdot 37} = 178 \cdot 179 \text{ constant number.}$$

$$\frac{10}{3\frac{3}{6}''} \times \frac{90}{1\frac{3}{4}} \times \frac{120}{28} \times \frac{120}{\frac{10000}{1000} \times 12 \cdot 17} = 181 \cdot 107 \text{ constant number.}$$

$$\frac{10}{3\frac{3}{16}''} \times \frac{90}{120} \times \frac{120}{120} = 181 \cdot 133 \text{ constant number.}$$

$$\frac{10}{3\frac{3}{16}''} \times \frac{90}{120} \times \frac{120}{\frac{10000}{1200} \times 12 \cdot 17} = 184 \cdot 133 \text{ constant number.}$$

Diameter, D Roller.

$$33'' = \frac{10}{13} \times \frac{90}{28} \times \frac{120}{\frac{\text{Twist}}{\text{plnion}} \times 11 \cdot 78} = 187 \cdot 103 \text{ constant number.}$$
 $3\frac{11''}{13} \times \frac{10}{28} \times \frac{90}{\frac{\text{Twist}}{\text{plnion}} \times 11 \cdot 58} = 190 \cdot 335 \text{ constant number.}$
 $3\frac{5}{3}'' = \frac{10}{13} \times \frac{90}{28} \times \frac{120}{\frac{\text{Twist}}{\text{plnion}} \times 11 \cdot 38} = 193 \cdot 680 \text{ constant number.}$
 $3\frac{5}{3}'' = \frac{10}{13} \times \frac{90}{28} \times \frac{120}{\frac{\text{Twist}}{\text{plnion}} \times 11 \cdot 19} = 196 \cdot 968 \text{ constant number.}$
 $3\frac{10}{13} \times \frac{90}{13} \times \frac{120}{28} \times \frac{120}{\frac{\text{Twist}}{\text{plnion}} \times 11 \cdot 19} = 196 \cdot 968 \text{ constant number.}$
 $3\frac{1}{2}'' = \frac{10}{13} \times \frac{90}{28} \times \frac{120}{\frac{\text{Twist}}{\text{plnion}} \times 11 \cdot 19} = 200 \cdot 553 \text{ constant number.}$

Spinning frame 4" pitch, 4" traverse (Fairbairn).

Twist arrangement and calculations-

Diameter of drawing roller, 4". Cylinder pinion, 34 teeth.

Diameter, D. Roller.

$$4'' \quad \frac{10}{1\frac{3}{4}} \times \frac{90}{34} \times \frac{120}{\frac{\text{Twist}}{\text{pinton}} \times 12 \cdot 56} = 144 \cdot 516 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 146 \cdot 734 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 149 \cdot 147 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 149 \cdot 147 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 151 \cdot 639 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 151 \cdot 639 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 154 \cdot 085 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 154 \cdot 085 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 154 \cdot 085 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 156 \cdot 746 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 156 \cdot 746 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 156 \cdot 746 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 156 \cdot 746 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 156 \cdot 746 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 159 \cdot 501 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 159 \cdot 501 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 159 \cdot 501 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 159 \cdot 501 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 159 \cdot 501 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 159 \cdot 501 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 159 \cdot 501 \text{ constant number.}$$

$$10 \quad 90 \quad 120 \quad = 162 \cdot 209 \text{ constant number.}$$

Diameter, D. Roller.

Spinning frame, 4" pitch, 4" traverse (Fairbairn).

Draft arrangement-

Diameter of drawing roller, 4".

Double intermediate, 50",

$$\frac{A}{B} \times \frac{C}{D} \times \frac{E}{F} = draft.$$

In this case-

IA = diameter of drawing roller.

·B - a drawing roller pinion or grist pinion.

$$\left\{\begin{array}{c} \mathbf{C} \\ \mathbf{D} \end{array}\right\}$$
 = double intermediate.

E - retaining roller wheel.

F = diameter of retaining roller.

Thus-

10 Roller.

4"
$$\frac{4}{45} \times \frac{90}{44} \times \frac{111}{2\frac{1}{2}} = 9.08$$
 draft between drawing roller and retaining roller.

$$\frac{4}{45} \times \frac{90}{44} \times \frac{111}{2\frac{1}{2}} = 363.272 \text{ constant number for draft.}$$

$$\frac{3\frac{1}{16}}{\frac{3\frac{1}{16}}{\frac{3}{16}}} \times \frac{90}{44} \times \frac{111}{2\frac{1}{2}} = 357.596 \text{ constant number.}$$

$$3\frac{1}{16} \times \frac{3\frac{7}{16}}{\frac{3}{16}} \times \frac{90}{44} \times \frac{111}{2\frac{1}{2}} = 351.920 \text{ constant number.}$$

$$3\frac{1}{16} \times \frac{3\frac{1}{16}}{\frac{3}{16}} \times \frac{90}{44} \times \frac{111}{2\frac{1}{2}} = 346.244 \text{ constant number.}$$

$$3\frac{1}{16} \times \frac{3\frac{3}{16}}{\frac{3}{16}} \times \frac{90}{44} \times \frac{111}{2\frac{1}{2}} = 340.568 \text{ constant number.}$$

$$3\frac{1}{16} \times \frac{3\frac{1}{16}}{\frac{3}{16}} \times \frac{90}{44} \times \frac{111}{2\frac{1}{2}} = 340.568 \text{ constant number.}$$

$$3\frac{1}{16} \times \frac{3\frac{1}{16}}{\frac{3}{16}} \times \frac{90}{44} \times \frac{111}{2\frac{1}{2}} = 334.892 \text{ constant number.}$$

Diameter, D. Roller.

$$3\frac{5}{8}''$$
 $\frac{3\frac{5}{8}}{G. p} \times \frac{90}{44} \times \frac{111}{2\frac{1}{2}} = 329.215 \text{ constant number.}$
 $3\frac{6}{16}''$ $\frac{3\frac{6}{16}}{G. p.} \times \frac{90}{44} \times \frac{111}{2\frac{1}{2}} = 323.539 \text{ constant number.}$
 $3\frac{1}{2}''$ $\frac{3\frac{1}{2}}{G. p.} \times \frac{90}{44} \times \frac{111}{2\frac{1}{2}} = 317.863 \text{ constant number.}$

Spinning frame, 4" pitch, 4" traverse (Fairbairn).

Draft arrangement-

Diameter of drawing roller, 4".

,, retaining roller, 24".

Double intermediate, "0".

Diameter, D. Roller.

$$\frac{4}{G. p.} \times \frac{90}{60} \times \frac{111}{2\frac{1}{2}} = 266.4 \text{ constant number.}$$

$$3\frac{15}{16}'' \frac{3\frac{15}{16}}{G. p.} \times \frac{90}{60} \times \frac{111}{2\frac{1}{2}} = 262.237 \text{ constant number.}$$

$$3\frac{7}{16}'' \frac{3\frac{7}{16}}{G. p.} \times \frac{90}{60} \times \frac{111}{2\frac{1}{2}} = 258.075 \text{ constant number.}$$

$$3\frac{15}{16}'' \frac{3\frac{15}{16}}{G. p.} \times \frac{90}{60} \times \frac{111}{2\frac{1}{2}} = 253.912 \text{ constant number.}$$

$$3\frac{3}{16}'' \frac{3\frac{15}{16}}{G. p.} \times \frac{90}{60} \times \frac{111}{2\frac{1}{2}} = 249.750 \text{ constant number.}$$

$$3\frac{15}{16}'' \frac{3\frac{15}{16}}{G. p.} \times \frac{90}{90} \times \frac{111}{2\frac{1}{2}} = 245.587 \text{ constant number.}$$

$$3\frac{5}{16}'' \frac{3\frac{5}{16}}{G. p.} \times \frac{90}{60} \times \frac{111}{2\frac{1}{2}} = 241.425 \text{ constant number.}$$

$$3\frac{5}{16}'' \frac{3\frac{5}{16}}{G. p.} \times \frac{90}{60} \times \frac{111}{2\frac{1}{2}} = 237.262 \text{ constant number.}$$

$$3\frac{5}{16}'' \frac{3\frac{5}{16}}{G. p.} \times \frac{90}{60} \times \frac{111}{2\frac{1}{2}} = 233.1 \text{ constant number.}$$

Sectional elevation showing yearing at end opposite to the driving pulleys.


SCALE 1 th.

(For Diagram see page 204).

A A	Drawing roller wheels,			•••	44 teeth.
ВВ	Stud wheels,		•••	•••	90 teeth.
O O	Draught changes,	• • •		•••	33 to 60 toeth.
D D	Retaining roller wheel	В,			111 teeth.
EE	Pintons on retaining re	ollers f	or driving	heart	
	wheels,	•••		•••	11 teeth.
FF	Heart wheels,	•••			120 teeth.

SECTIONAL ELEVATION SHOWING GEARING AT END OPPOSITE TO THE DRIVING PULLEYS.

SCALE 1 th.

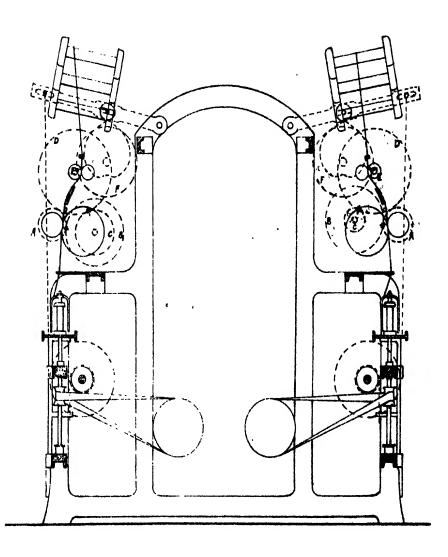

Sectional elevation showing gearing at pulley end


SCALE 1 th.


· (For diagram see page 206).

A A	Cylinder pinions,	28 teeth.
ВВ	Intermediates,	144 teeth.
οс	Twint wheels,	90 teeth.
D D	Twist changes,	26 to 60 teeth
EE	Drawing roller wheels,	120 teeth.

SECTIONAL ELEVATION SHOWING GEARING AT PULLEY END.

 $Scals_{-1.6}^{-4}th$

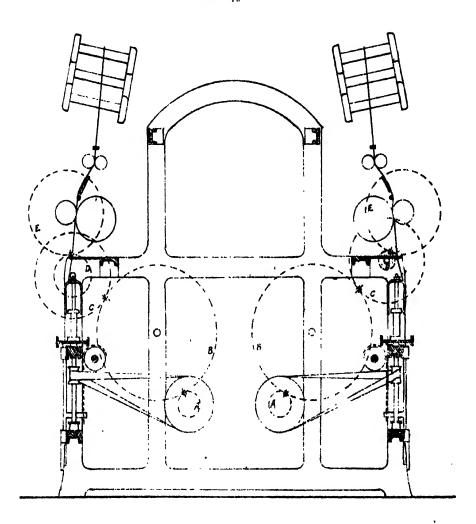


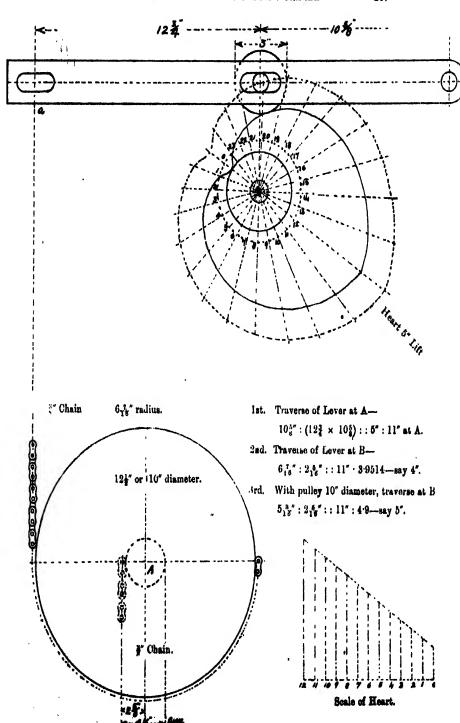


208 BOBBIN.

BOBBIN.

4" TRAVERSE (FULL SIZE) - SHOWING SHAPE OF BOBBIN WHEN FULL.

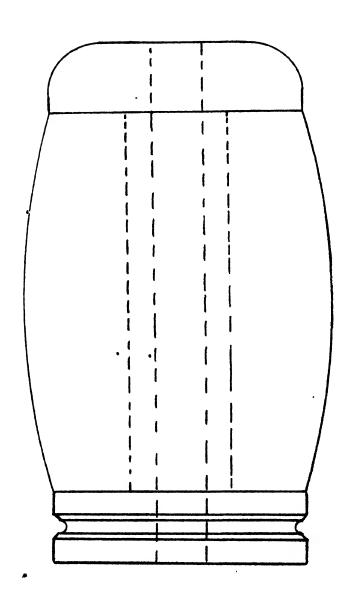

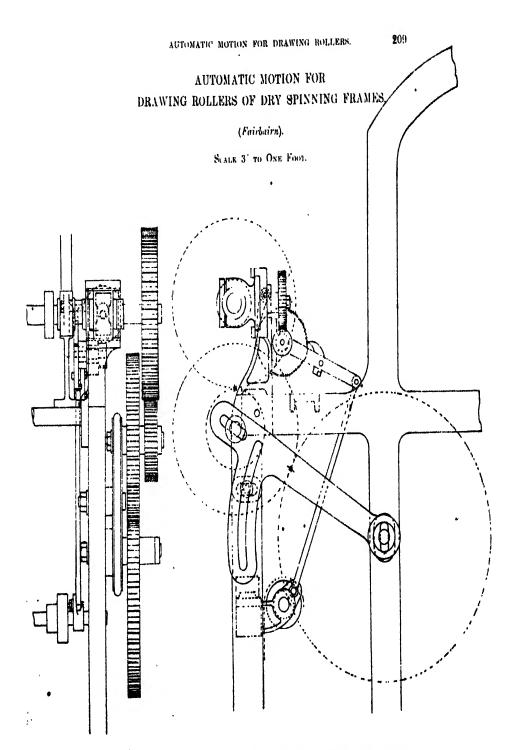


Nors.-The movement of drawing roller end ways is \frac{1}{4}" in each direction.

ARRANGEMENT OF SPRING FOR PRESSING ROLLER SPINNING FRAME.

SCALE 12" TO ONE FOOT.

ARRANGEMENT OF LEVER AND WEIGHT FOR PRESSING ROLLER OF SPINNING FRAME.

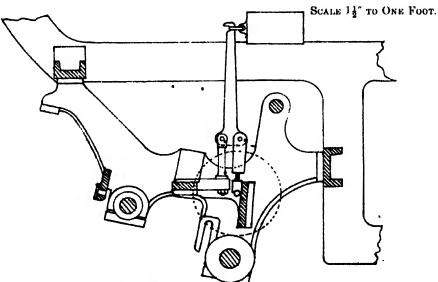


For pressure on pressing roller. Proportion of levers—
Arm of pressing roller = 1½" Arm of weight == 10"

Ratio $\frac{13}{10} = \frac{1}{6.6}$ and if weight is 12 lbs. then—

 $12 \times 6.6 = 79.2$ lbs. = pressure upon two balls.

ELEVATION OF SPINNING FRAME BEND.

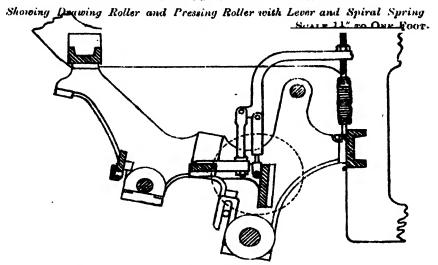


For pressure on pressing roller. Proportion of levers-Arm of pressing roller = 11". Arm of spring = 81".

= - and if pull of spring = 12 lbs. then-Ratio -5.6 $12 \times 5.6 - 62.2$ lbs. -- pressure upon two balls.

ELEVATION OF SPINNING FRAME BEND.

Showing Retaining Roller and Stip Roller with Lever and Weight. SCALE 12" TO ONE FOOT.

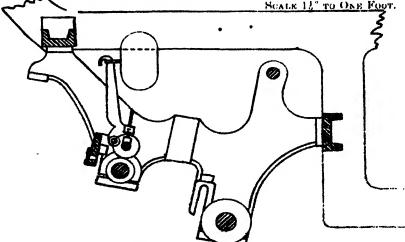


For pressure on slip roller. Proportion of levers-Arm of slip roller = $1\frac{1}{3}$. Arm of weight = $7\frac{1}{3}$

and if weight is 6 lbs. then-


 $6 \times 6 \cdot 6 = 39 \cdot 6$ lbs. = pressure upon two balls.

AUTOMATIC MOTION FOR SPINNING FRAME DRAWING ROLLERS.

SCALE 8" TO ONE FOOT.

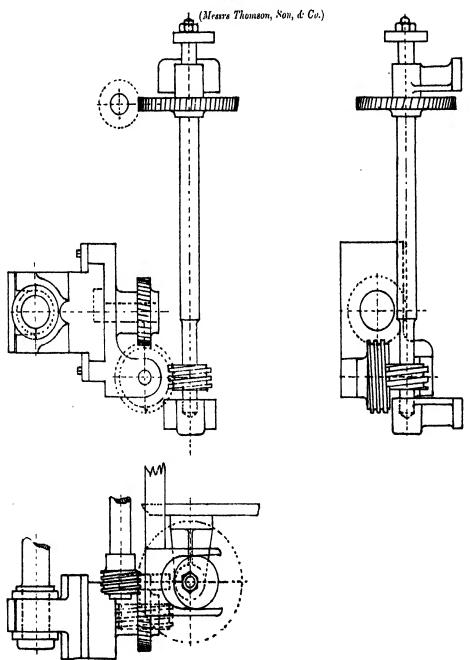


ROVE PLATE ARRANGEMENT.

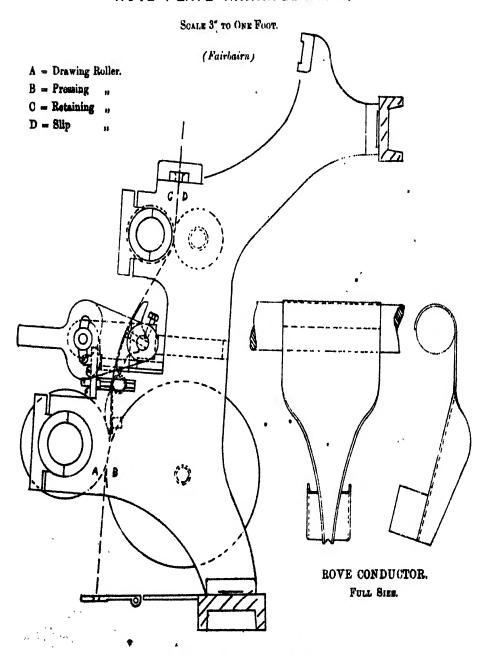

For explanation of the working of Rove Plate see page 192.

SPINNING FRAME.

4" TRAVERSE-(Low, Monifieth)

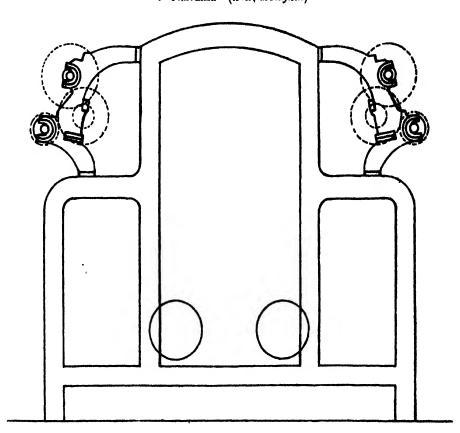


ELEVATION PASS END SHOWING GRIST GEARING.

SCALE 10TH.

Diameter of Drawing Roller,	4"
" Retaining Roller,	21,"
Pinion on Drawing Roller,	30 teeth,
Wheel on Retaining Roller,	80 teeth.
Double Intermediate.	70/35 teeth.

SPINNING FRAME.

4" TRAVERSE—(Low, Monifieth).

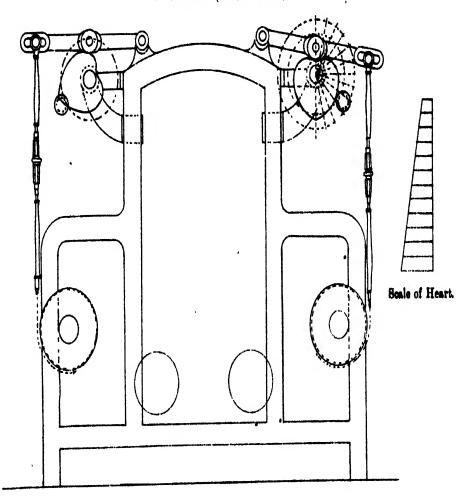


ELEVATION PASS END SHOWING HEART MOTION ARRANGEMENT FOR TRAVERSE OF BOBBIN.

SCALE 14TH.

SPINNING FRAME.

4" TRAVERBE-(Low, Monifieth).

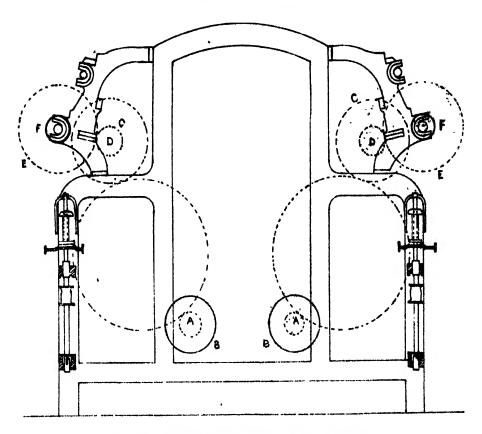


ELEVATION DRIVING END SHOWING TWIST GEARING.*

SCALE 15TH.

- A = Cylinder Pinion. .
- B Diameter of Cylinder.
- C = Wheel of double intermediate.
- D Twist Pinion.
- E = Drawing Roller Wheel.
- F Diameter of Drawing Roller.

* See page 220,

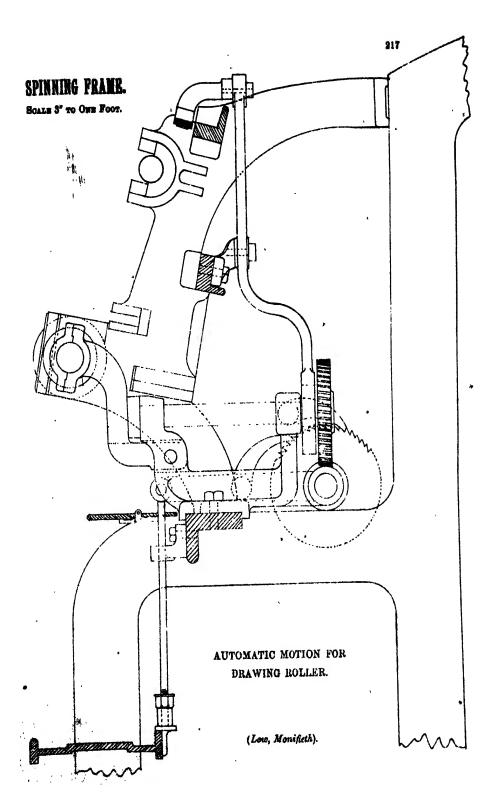

SPINNING FRAMES.

The following particulars show the general practice as to gearing, &c., followed by Messrs Low, Monifieth, in the construction of their Spinning Frames:—

For 4" traverse frames they have to vary some of the parts considerably, to meet different requirements, and they have gable patterns 5' 3"—5' 6" and 5' 8" wide.

Then for Twist—The Spindle Werve is 15" and sometimes 12" diameter.

Cylinder, 9" or 10" diameter.
Cylinder Pinions, 24—28—30 teeth.
Intermediate Stud Wheel, 150 or 156 teeth.
Twist Wheel, 80 teeth.
Changes, from 25 to 50 teeth.
Drawing Roller Wheel, 114 teeth.
Drawing Roller Boss, 4" diameter.

The above is their ordinary practice, and the drawings are made to it—but they sometimes make the Twist Wheel 90 teeth, and Drawing Roller Wheel 120 teeth, which increases the size of the Cylinder Pinion somewhat, and this is on the right side.

For the Draft-Drawing Roller Boss, 4".

Changes at pass end, 25 to 50 teeth.
Stud Wheel, 70 teeth.
Changes on nave of do., 25 to 50 teeth.
Retaining Roller Wheel, 80 teeth.
Retaining Roller Boss, 2½" diameter.

The above is for a 10" Reach Boud, but when 9" reach is used, they generally put in the Stud Wheel 60 teeth instead of 70, as the latter fills up the shorter space rather too much.

For the Heart or Lifter Motion—Pinion of 11 teeth on Retaining Roller, with 128 or 132 teeth on nave of Heart.

The Chain Pulley on Lifter Shaft is 11½" diameter, and the Bosses on this Shaft are 3\rightarrow" to 4" diameter.

DRAFT ARRANGEMENT

Spinning Frame, 4" pitch, 4" Traverse. Low, Monifieth. Frame, 10" reach.

Diameter of drawing roller, 4".

,, ,, retaining ,, 2½".

Pimon on drawing , change.
Wheel on retaining , 80 toeth.

Double intermediate , 70 or 78.

$$\frac{A}{B} \times \frac{O}{D} \times \frac{E}{E} \qquad draft,$$

A - Diameter of Drawing Roller.

B = Grest or Change Pinion.

$$-\frac{C}{D}$$
 - Double Intermediate

F = Wheel on Retaining Roller.

$$\frac{3_{18}^{6}}{C} \times \frac{70}{45} \times \frac{80}{2\frac{1}{2}} = 177.83 \text{ constant number for draft.}$$

$$\frac{3_{\frac{1}{2}}}{C!} \times \frac{70}{45} \times \frac{80}{2\frac{1}{2}} = 174.22 \quad , \quad , \quad ,$$

Double intermediate, $\frac{70}{35} \times \frac{80}{2\frac{1}{2}} = 256 \text{ constant number for draft.}$

$$\frac{3_{\frac{18}{18}}}{C} \times \frac{70}{35} \times \frac{80}{2\frac{1}{2}} = 252 \quad , \quad , \quad , \quad ,$$

$$\frac{3_{\frac{18}{18}}}{C} \times \frac{70}{35} \times \frac{80}{2\frac{1}{2}} = 248 \quad , \quad , \quad , \quad ,$$

$$\frac{3_{\frac{18}{18}}}{C} \times \frac{70}{35} \times \frac{80}{2\frac{1}{2}} = 244 \quad , \quad , \quad , \quad ,$$

$$\frac{3_{\frac{18}{16}}}{C} \times \frac{70}{35} \times \frac{80}{2\frac{1}{2}} = 240 \quad , \quad , \quad , \quad ,$$

$$\frac{3_{\frac{18}{16}}}{C} \times \frac{70}{35} \times \frac{80}{2\frac{1}{2}} = 240 \quad , \quad , \quad , \quad ,$$

$$\frac{3_{\frac{18}{16}}}{C} \times \frac{70}{35} \times \frac{80}{2\frac{1}{2}} = 232 \quad , \quad , \quad , \quad ,$$

$$\frac{3_{\frac{18}{16}}}{C} \times \frac{70}{35} \times \frac{80}{2\frac{1}{2}} = 232 \quad , \quad , \quad , \quad ,$$

$$\frac{3_{\frac{18}{16}}}{C} \times \frac{70}{35} \times \frac{80}{2\frac{1}{2}} = 228 \quad , \quad , \quad , \quad ,$$

$$\frac{3_{\frac{19}{16}}}{C} \times \frac{70}{35} \times \frac{80}{2\frac{1}{2}} = 228 \quad , \quad , \quad , \quad ,$$

$$\frac{3_{\frac{19}{16}}}{C} \times \frac{70}{35} \times \frac{80}{2\frac{1}{2}} = 228 \quad , \quad , \quad , \quad ,$$

$$\frac{3_{\frac{19}{16}}}{C} \times \frac{70}{35} \times \frac{80}{2\frac{1}{2}} = 228 \quad , \quad , \quad , \quad ,$$

TWIST ARRANGEMENTS.

Spinning Frame, 4" pitch, 4" traverse. Low, Monifieth. Cylinder, 10' diameter.

Spindle Werve, 13".

Cylinder Pinions, 24-28-30 teeth.

 $35 2\frac{1}{2}$

Twist Wheel, 80 teeth, or Double Intermediate.

Drawing Roller Wheel, 114 teeth.

$$\frac{\mathbf{A}}{\mathbf{B}} \times \frac{\mathbf{C}}{\mathbf{D}} \times \frac{\mathbf{E}}{\mathbf{F}} \times \mathbf{G} = \text{Twists per inch.}$$

A = Diameter of Cylinder

B = ,, Spindle Werve.

C = Twist Wheel,

D = Cylinder Pinion.

E - Drawing Roller Wheel.

F = Twist Pinion.

G = Circumference of Drawing Roller.

Diameter of Drawing Roller

 \mathbf{z}

$$4" \qquad \frac{10"}{1\frac{3}{4}} \times \frac{80}{24} \times \frac{114}{50 \times 12 \cdot 56"} = 3.45 \text{ Twists per inch.}$$

$$4" \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{24} \times \frac{114}{\frac{10000}{100000} \times 12 \cdot 56} = 172 \cdot 88 \text{ Constant No. for Twist.}$$

$$3\frac{15"}{16"} \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{24} \times \frac{114}{\times 12 \cdot 37} = 175 \cdot 51 \qquad ... \qquad ...$$

$$3\frac{15"}{13} \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{24} \times \frac{114}{\times 12 \cdot 17} = 181 \cdot 40 \qquad ... \qquad ...$$

$$3\frac{15"}{16"} \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{24} \times \frac{114}{\times 11 \cdot 79} = 184 \cdot 17 \qquad ... \qquad ...$$

$$3\frac{15"}{16"} \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{24} \times \frac{114}{\times 11 \cdot 58} = 187 \cdot 51 \qquad ... \qquad ...$$

$$3\frac{15"}{16"} \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{24} \times \frac{114}{\times 11 \cdot 38} = 190 \cdot 81 \qquad ... \qquad ...$$

$$3\frac{15"}{16"} \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{24} \times \frac{114}{\times 11 \cdot 19} = 194 \cdot 04 \qquad ... \qquad ...$$

$$3\frac{10}{2}" \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{24} \times \frac{114}{\times 11 \cdot 19} = 194 \cdot 04 \qquad ... \qquad ...$$

Twist Arrangement - Cylinder Pinion, 28 teeth.

Diameter of Drawing Roller.

Twist Arrangement -- Cylinder Pinion, 30 teeth.

Diameter of Drawing Roller.

ij.

11

$$3\frac{15}{16}'' \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{30} \times \frac{114}{\times 11 \cdot 97} = 145 \cdot 12 \text{ Constant No. for Twist.}$$

$$3\frac{3}{4}'' \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{30} \times \frac{114}{\times 11 \cdot 79} = 147 \cdot 34$$

$$3\frac{11}{16}'' \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{30} \times \frac{114}{\times 11 \cdot 58} = 150 \cdot 01$$

$$3\frac{5}{6}'' \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{30} \times \frac{114}{\times 11 \cdot 38} = 151 \cdot 77$$

$$\frac{10}{1\frac{3}{4}} \times \frac{80}{30} \times \frac{114}{\times 11 \cdot 19} = 155 \cdot 24$$

$$3\frac{1}{4}'' \qquad \frac{10}{1\frac{3}{4}} \times \frac{80}{30} \times \frac{114}{\times 11 \cdot 19} = 158 \cdot 06$$

$$\frac{10}{1\frac{3}{4}} \times \frac{80}{30} \times \frac{114}{\times 10 \cdot 99} = 158 \cdot 06$$

TWIST ARRANGEMENT.

Spinning Frame, 4" pitch, 4" traverse. Low, Monifieth.

Cylinder, 10" diameter.

Spindle Werve, 17" diameter.

Cylinder Pinions, 28-30 teeth.

Twist Wheel, 90 teeth.

Drawing Roller Wheel, 120 teeth.

Diameter of Drawing Roller, 4"

Diameter of Drawing Roller.

Twist Arrangement-Cylinder Pinion, 30 teeth

$$4'' \qquad \frac{10}{13} \times \frac{90}{30} \times \frac{120}{\times 12.56} = 163.78 \text{ Constant No. for Twist.}$$

$$3^{15''}_{13} \qquad \frac{10}{13} \times \frac{90}{30} \times \frac{120}{\times 12.37} = 166.30 \qquad ... \qquad ...$$

$$3^{2''}_{13} \qquad \frac{10}{13} \times \frac{90}{30} \times \frac{120}{\times 12.17} = 169.03 \qquad ... \qquad ...$$

$$3^{15''}_{13} \qquad \frac{10}{13} \times \frac{90}{30} \times \frac{120}{\times 11.97} = 171.85 \qquad ... \qquad ...$$

$$3^{11}_{10} \qquad \frac{10}{13} \times \frac{90}{30} \times \frac{120}{\times 11.79} = 174.48 \qquad ... \qquad ...$$

$$3^{11}_{10} \qquad \frac{10}{13} \times \frac{90}{30} \times \frac{120}{\times 11.58} = 177.64 \qquad ... \qquad ...$$

$$3^{11}_{10} \qquad \frac{10}{13} \times \frac{90}{30} \times \frac{120}{\times 11.58} = 180.76 \qquad ... \qquad ...$$

Diameter of Drawing Roller.

T.

Twist Arrangement -Cylinder Pinion, 24-28-30 teeth

Cylinder, 9" diameter.

Spindle Werve, 14" diameter.

Cylinder Pinions, 24 -- 28-30 teeth.

Twist Wheel, 80 teeth.

Drawing Roller Wheel, 114 teeth.

Diameter of Drawing Roller, 4".

$$\frac{9}{1\frac{5}{4}} \times \frac{80}{24} \times \frac{114}{\times 12.56} = 167.56 \text{ Constant No. for Twist.}$$

$$\frac{9}{1\frac{5}{8}} \times \frac{80}{24} \times \frac{114}{\times 12.37} = 170.13$$

$$\frac{9}{1\frac{5}{8}} \times \frac{80}{24} \times \frac{114}{\times 12.17} = 172.93$$

$$\frac{9}{1\frac{5}{8}} \times \frac{80}{24} \times \frac{114}{\times 11.97} = 175.82$$

$$\frac{9}{1\frac{5}{8}} \times \frac{80}{24} \times \frac{114}{\times 11.79} = 178.50$$

$$\frac{9}{1\frac{5}{8}} \times \frac{80}{24} \times \frac{114}{\times 11.58} = 181.74$$

$$\frac{9}{1\frac{5}{8}} \times \frac{80}{24} \times \frac{114}{\times 11.38} = 184.93$$

$$\frac{9}{1\frac{5}{8}} \times \frac{80}{24} \times \frac{114}{\times 11.19} = 168.07$$

Diameter of Drawing Roller,

$$\frac{9}{1\frac{5}{2}} \times \frac{80}{1\frac{5}{2}} \times \frac{114}{24} = 191.50 \text{ Constant No. for Twist.}$$

Twist Pinion-Cylinder Pinion, 28 teeth.

Diameter of Drawing Roller.


Twist Pinion-Cylinder Pinion, 30 teeth.

$$4'' \qquad \frac{9}{1\frac{5}{8}} \times \frac{80}{30} \times \frac{114}{\times 12.56} = 134.05$$

31 <i>8</i> ″	$\frac{9}{1\frac{5}{8}} \times \frac{80}{30} \times$		= 136.11 Constant No. for Twist.
3 ĝ″	9 80 × × × 1 ₈ 30	114 × 1217	= 138·34 ,, ,,
313"	$\frac{9}{1\frac{5}{4}} \times \frac{80}{30} \times$		- 140·48 ,, ,,
33"	x x	114 × 11·79	142:80 n n
311"	x x	114 × 11·58	145·89 ,, ,,
34"	× · ×	114 × 11·38	<i>-</i> 147·95 ,, ,,
3 0 "	x x	114 × 11·19	-= 150·46 ,, ,,
81,"	x x	114 × 10 99	= 15 3· 2 0 ,, .,

COTTON BELT JOINT.

Showing Methud adopted for Fixing-Rivets used 5", No. 6.

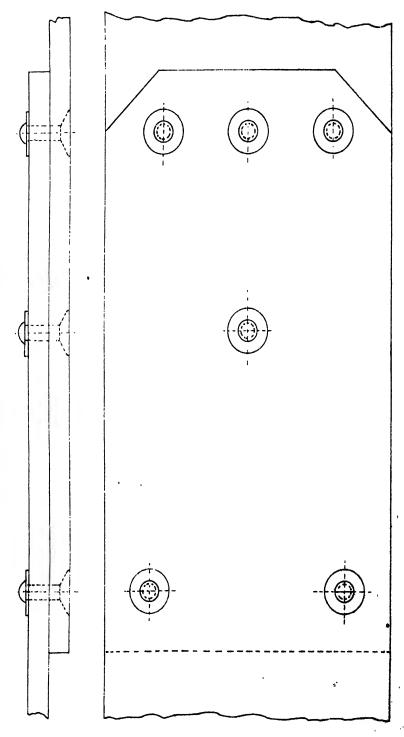

THE DRIVING OF THE SPINNING FRAME.

The steadiness of the drive to the Spinning Frame Spindles is of much importance, and it will always be observed that when a pair of engines are working together driving a mill, the driving will be much steadier than when working with a single engine. A 72 Spindle Frame, 4 inch pitch, 4 inch traverse, will require a belt 4 inches broad and 80 feet long, according to the plan of mill given in this book. At one time all the belts used in jute mills were made of leather, but this is not now the case Many mills work cotton belting. This belt has many advantages over leather for driving jute mill machinery; not only is it cheaper, but it runs much smoother, owing to the absence of joints. There is only one joint in the belt. This joint is made very easily, and in a much shorter time than you can make a sewed joint. The cost of the six copper rivets and washers is trifling compared with the price of belt laces. This is a diagram showing the form of joint used largely for Spinning Frame Belts made of cotton solid woven (see diagram page 228)

These belts will drive the Frame, and not require to be kept so tight as leather belts. They do not require nearly so much attention and upkeep as leather belts do, the laces for which are a serious matter, as the average life of a belt lace of good quality is only about 21/3 months. A cotton belt will run for about 6/8 months without anything being done to the joint, and it will run from 4/5 years with very little trouble and without much expense At the end of that time there will not be more than two or three joints in the belt. During that period a leather belt will have cost something, if it is still running, in the shape of laces, and there will be rather more than two or three joints in it. It should be always borne in mind whether the belt is made of leather or cotton, that the guide pulleys should be properly set to the driving drum and to the driving pulleys of frame. On this depends in a great measure the life of a belt. Much destruction is caused to belts by the guides being improperly set, throwing an unnecessary strain and consequent wear upon the edges. This, of course, ruins the belt whether of leather or cotton. If the guide pulleys are correctly set to the driving pulley the "belt fork" will never touch the belt except when required to shift it from one pulley When the belt is running on either pulley it should be quite free, and should not press against the side of belt fork. This can be easily accomplished if the guide is set as described.

. :

INSTRUCTIONS FOR SETTING GUIDE PULLEYS FOR SPINNING FRAME BELTS.

(See Diagram page 231).

In this diagram the arrow at A shows the direction the belt is running on the drum D. This is called the "leading side" of the belt The edges of the guide pulley from which the belt is running on the drum should be set in line with the edge of the drum. is 4 inches broad and the drum six inches broad, the edge of pulley should be set to throw belt one inch from edge of drum, and when the bolt is running on drum, it will be one inch within each side of it, Second—the guide pulley should be set so that a plumb line from the circumference of guide pulley should fall between the two pulleys at P as dotted line. This insures that the fork will have the same pressure on the belt edge when putting on as when you put it off. Third-a line from the edge of each guide pulley to a point at a distance equal to half the width of guide pulley from the circumference of cylinder pulley will set the guide pulley to the angle required to keep the belt running fair. If attention be given to these three points and the guide pulley frame is set parallel to the driving shaft, there is no fear but the belt will run without damage to its edges. Belt forks are often made of round iron i inches or inches This is not a good thing for any kind of belt. diagram shows a fork which will be found very easy upon the belts and is supplied by Fairbairn to all their Spinning Frames.

DIAGRAM OF BELT FORK FOR SPINNING FRAME. *Scale 3" to One Foot.


Cross Section at A B.

Fall Size.

Plan.

SPINNING FRAME.

SCALE 1" TO ONE FOOT.

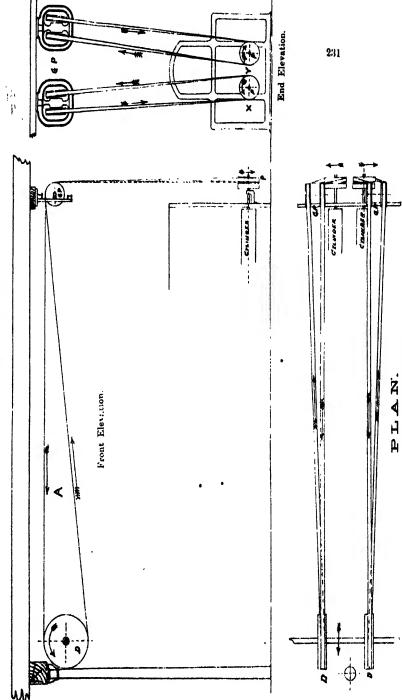

232 COP WINDING

COP WINDING.

If the west which has been spun upon the frames is to be made into cops, it is taken to the cop-winding department. Here it is wound upon the cop machines into cops, according to the size of the shuttles in which the west is to be used in the process of weaving. Usually, hessian cops are made 9 inches long, and 11 inches in diameter. Sometimes they are made 9 inches by 12 inches; but if the looms are being driven fast, I think a 9 inch by 11 inch cop is preferable, as there is less tendency to make waste. Illustrations of three different types of cop machines are given-the original machine of Combo, Barbour, & Company; Messrs Lee, Croll, & Company; and Messrs Charles Parker, Son, & Company. The last two mentioned are very much of the same construction. The cop cone in these two machines is in an inverted position from the former machine. This will be readily understood from a reference to the diagrams given. All the machines do their work equally well. My experience has, however, been confined to the machine of Messrs Combo, Barbour, & Company. It is sometimes said of this machine that it is difficult to keep up—that is to say, that it is difficult to keep in mechanical order. I cannot, however, say I have found it very much trouble; that, however, is a matter of opinion. I am inclined to think that Messrs Combe, Barbour, & Company's machine can be driven at a greater speed than the others mentioned. In a mill, the workers get accustomed to either of them; and, of course, both employers and employees make use of what they have been accustomed to. Particulars, arrangement of speeds, &c., are given. The cops when taken of the spindles are either put into pans or bags. If they are to be used at once in a factory, they are very often put into pans; if they are to be sent a distance, they are always put into bags. . It is of importance that the pan or bag be made the exact breadth of the length of cop. This is not to allow the cops to shift about and get broken; as, if they are in any way knocked about, they are apt to become soft, and this will always lead to unnecessary waste in the weaving department. The cop pan is usually made 16 inches long, 11 inches deep, and 94 inches broad. The bag-to hold about 56 to 60 pounds weightis made 22 inches broad, 10 inches wide, and 22 inches deep. The

waste in this department is a matter which requires continual attention. My experience is, that for ordinary hessian wells the waste will average about 4 per cent, the cop machine of 54 spindles will require three winders, and they will wind into cops, on an average, 60 spyndles of 8 or 9 lbs. in 10 hours. When the size is from 10 to 12 pounds, it will depend to some extent upon the ability of the winder as to whether she will be able to wind the production of a 72 spindle frame. This, of course, is a matter for arrangement when it happens in the department.

PARTICULARS OF COP MACHINE GEARING.

(Parker, Son, & Co.)

Spindle driving wheel (a) 46 teeth.

" pinion (b) 16 teeth.


Travelling cloth pulley (c and d) each 71 dia.

Worm, single thread, right hand (e).

Worm Wheel 24 teeth, right hand (f).


Cloth roller 41" dia. (g).

Driving Pulleys (P) generally 15" dia. \times 3 $\frac{\pi}{6}$ ", and run 260 revolutions for ordinary jute hessian cops.

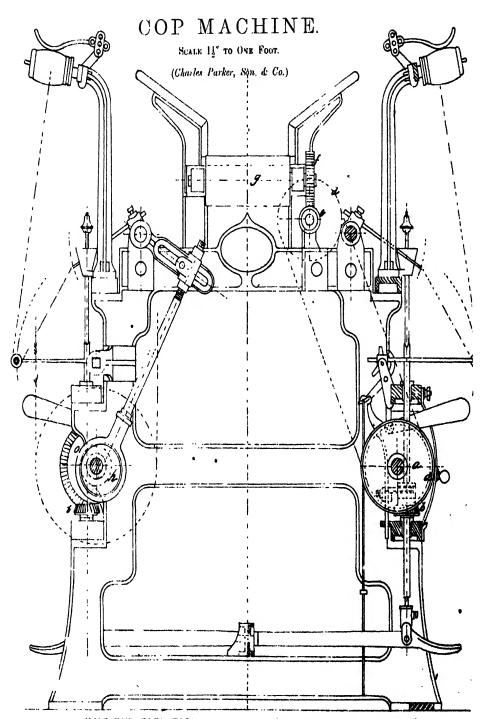

HALF END ELEVATION

HALF SECTIONAL ELEVATION

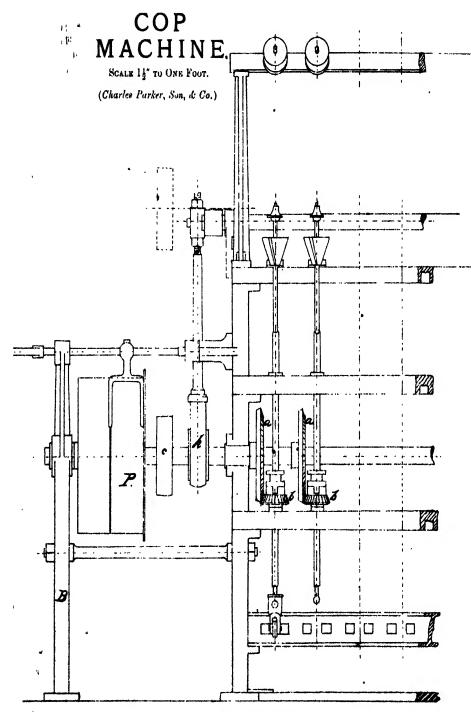


FRONT ELEVATION.

COP MACHINE.

Scale $1\frac{1}{2}$ " to One Foot.

(Charles Purker, Son, & Co.)

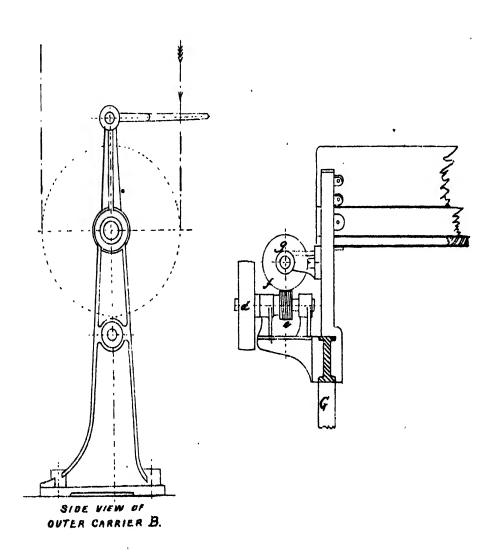


COP MACHINE.

SCALE TO ONE FOOT

(Thomson, Son, & Co.)


Speed pulleys 528 revolutions per minute.

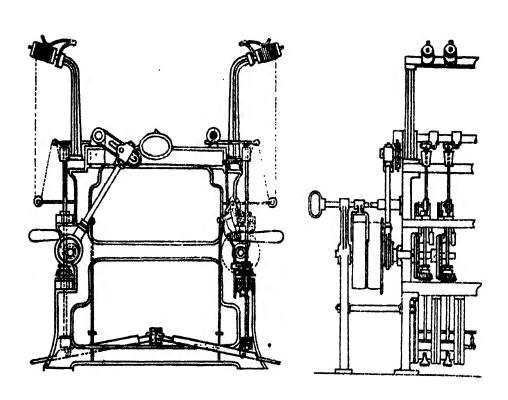

COP MACHINE.

SCALE 3" TO ONE FOOT.

(Coombe, Barbour, & Coombe.)

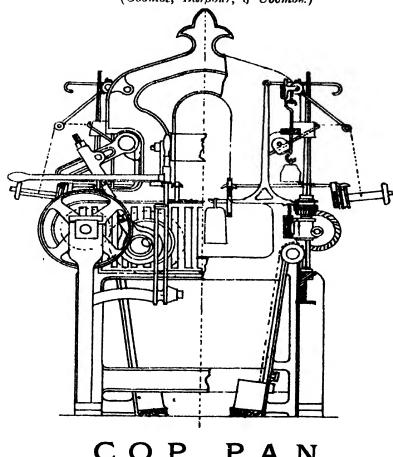

COP PAN









COP MACHINE

SCALE 3" TO ONE FOOT.

(Lee, Croll, & Co.)

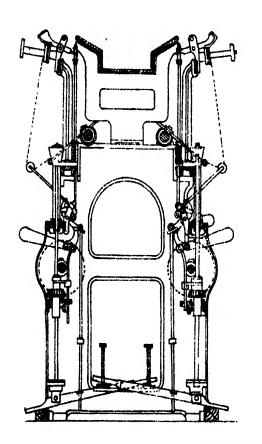

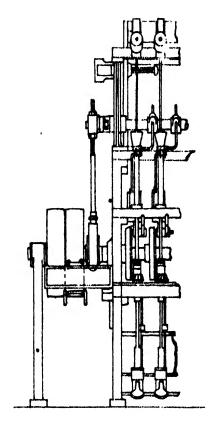

COP MACHINE.

Spindle Pinion 16 teeth.

Wheel on Driving Shaft 46 teeth.

Pulleys usually about 16" diameter.

Speed of Spindles from 800 to 1000 revolutions per minute.


SPINDLE AND COP WITH CONE FOR COP WINDING MACHINE.


(Coombe, Barbour, if Coembe.) Scale Hale Size. Usual Size of Cop 6" x 11g".

REELING AND BUNDLING.

Here the yarn which has been spun, either warp or west, which is to be delivered in the bundle, is brought to be recled - that is, that the yarn is recled round the barrel, or swift, as it is more Upon this barrel or swift a certain number usually termed. of threads are tied up into cuts, heers, hanks, and spyndles (see yarn table). When the yarn is taken of the reels, it is taken and weighed, or sized is the term generally in use. So many spyndles are put into a bundle, according to the size of the yarn. In this department much care and attention is necessary by the workers and by those in charge. It is of much importance that the tell of the yarn should be correct. By the term "tell," is meant the number of threads and yards in a "cut." 120 threads are in each "cut," the tell wheel for 7 to 9 lbs, will have 125 teeth, and for 10 to 20 lbs., 123 teeth. This enables the recler, with ordinary care, to put in the correct number -- 120 threads into each cut. By care and attention in the reeling department, very much can be done to keep the yarn regular After the yarn is recled and sized, it is handed upon the weight over to the bundlers, who lay first one bank and then another upon a bundling stool (see illustration), so many bands being put round it. The bands are tied round, and knotted up with a "bundling pin," and the yarn is then laid in the yarn warehouse to wait such time at required to deliver it. It is essential to the look of the yarn, while is is being bundled, that the bundlers display taste and some degree of pride in the making up of the bundles. No matter how well the varn may have been spun and reoled, if it is carelessly and slovenly bundled, this will tend to detract from its appearance; and I almost venture to say, from the market value of the yarn.

POWER REEL

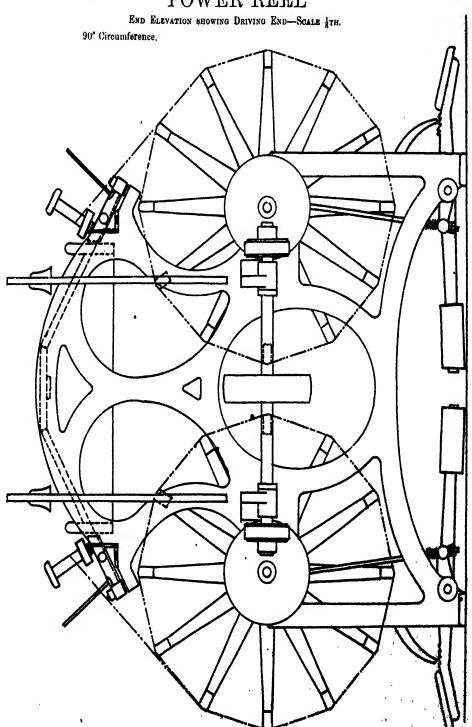

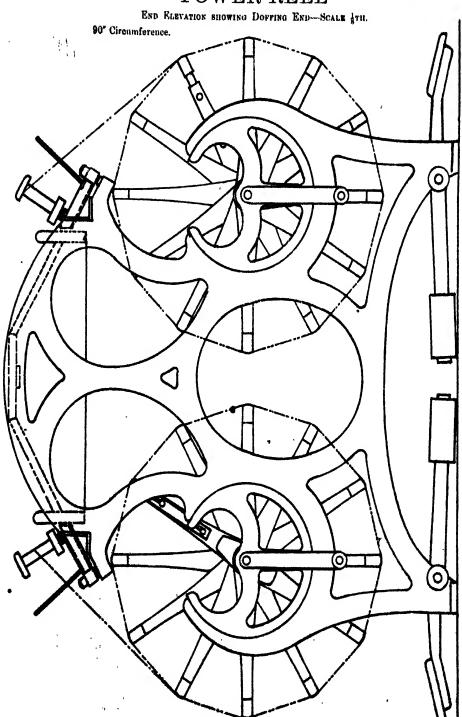

INSTRUCTIONS AND PARTICULARS AS TO THE REELING OF THE YARNS.

The reel is 12 ft. 4 in. long, and 90 in. in circumference; and the rails upon which the yarns are recled are attached to spokes. In a Fairbairn reel there are 12 spokes in the swift, as the reel is sometimes called. By a reference to the illustration, it will be seen that these spokes make the yarn, when on the reel, in the form of a 12-sided figure. This is to allow the yarn to come off without trouble. And when the reel or swift has been filled, an arrangement is provided to make part of the swift or barrel collapse; and the reeler has then to draw the yarn all to the one end, and by turning the wheel provided for the purpose, she can lift off the yarn and hang it on the hook at the end of her reel. From thence it is taken to the bundling department, when it is made into the size of bundles required. These bundles are commonly made a certain size for a certain weight of yarn (see table); but sometimes special sizes of bundles are made, according to the order in hands.

7/12 lbs, yarn is recled in hands of 6 cuts each.

13/24	••	11	••	4	,,
25/32	••	**	••	3	•••

TABLE SHOWING THE NUMBER OF SPYNDLES IN A BUNDLE OF THE DIFFERENT SIZES OF YARN.

			•	•		
Lim	Spls	Weight of I	પાદ.			
7	8	56 lbs.	Bundles	are made up	ın hanks o	f half a spl
8	7	56 ,.		31	,,	,,
9	6	54 ,,	,,,	, ••	,,	,,
$9\frac{1}{2}$	6	57 ,.	**	,	11	19
10	6	60 ,,	••	,,	"	,,
11	ō	55 "	,,	,,	"	21
12	5	60		••		•
13	4	52			of	a third of a spl.
14	4	56				
15	4	60				
$15\frac{1}{2}$	33	581	Bdls. are n	ade up in 1	1 hanks and	d 4 cuts.
16	នរ្នំ	56	•,		0 hanks and	
19	ខរ្មិ	591	ŕ			

```
Lia.
      Sple. Weight of Bdl.
18
              54 lbs.
       3
                       Bdls are made up in 9 hanks of a third of a spl, each.
19
       3
              57
20
       3
                                             18 hanks of a 1 of a spl. each.
              60
                                             16 hunks of a 1 of a spl. and 4 cuts.
21
       23
              377 ,,
22
              55
                                             15 hanks of a 1 of a spl.
                              "
       21
24
              60
                                             15
28
       2
              56
                                             12
                                                  ..
29
       2
              58
                                             12
30
       2
              60
                                             12
82
       17
              56
                                             14
                                                      of an ! of a spl.
```

The "bands" of the bundles are included in the quantity given in above particulars of hanks. The bands are usually recled to a size that will make them manageable for the tying up of the bundle In 7 lbs. yarn the bands are recled in 6 cuts; and for 20 lbs., are recled in 2 cuts. This is a matter of convenience to some extent.

An illustration of an ordinary bundling stool and also a small bundling press is given. This press is used for making small bundles, generally twisted yarns—that is, yarn in the ply.

Every attention should be given by the receirs, and by those in charge of the recling department, to see that the proper knot is made on the yarn. This knot is usually termed a "weaver's knot." This is a representation of it—



SCOTTISH YARN TABLE.

2½ yards = 1 thread. 120 threads = 1 cut. 300 ,, = 1 cut or lea. 600 ,, = 1 heer. 3,600 ,, = 1 hank. 7,200 ,, = 1 hesp. 14,400 ,, = 1 spyndle.

ENGLISH YARK TABLE.

2½ yards = 1 thread. 300 ,, = 1 lea. 3,000 ,, = 1 hank. 60,000 1 bundle. The grist or fineness of the heavy linen and jute yarns is estimated by the weight of a spyndle per lb avoirdupois—the finer qualities by leas, of which the following is the table and the rule for finding the same:—

TABLE.

Leas per 1b	Weight per spindle. Ibs oz dr	Levs por th	Weight per spindle
1	48 0 0	50	0 15 53
2	24 () ()	55	∪ 13 5 {
33	16 0 0	60	0 12 124
4	12 0 0	65	0 11 13
5	9 9 9½	70	0 10 154
6	8 0 0	7.5	0 10 3 3
7	6 13 111	80	$0 9 9\frac{1}{2}$
8	6 U U	85	0 9 0 🖁
10	4 12 123	90	0 8 8 1
12	4 (0)	95	0 8 14
11	$3 - 6 - 13\frac{3}{4}$	100	0 7 10}
16	3 0 0	110	0 6 15 🖟
18	2 10 101	120	0 6 6
20	2 6 6 4	130	0 5 14 🖟
22	$2 2 14\frac{1}{4}$	140	0 5 7 3
25	1 14 113	150	0 5 13
28	1 11 G\$	160	0 4 12 3
30	1 9 9 🖁	170	0 4 8]
35	1 5 15	180	0 4 41
40	1 3 3	190	0 4 05
45	1 1 1	200	0 3 13 🖁

Rule.—Divide the leas in a spyndle by the number of the lea yarn. Thus, for 16 lea yarn.—

16)48(3 lb. yarn.


WARPING MILL

Scale 11 To One Foot. Circumference = 13 yards.

ELEVATION SHOWING DRIVING WHEEL, HAKES, GUIDES, AND TRAVERSE MOTION.

11

Worm, single thread, \S^* pitch, \S^*_{\bullet} diameter. Worm wheel 46 teeth, \S^* pitch. Chain Wheel 25" diameter. Revs. of Chain wheel for one rev. of Warp Mill $= \frac{1}{46} \times 1 = \frac{1}{46}$ of a rev. Traverse of Hake per rev. of Warp Mill $= \frac{1}{46} \times 25 \times 3.1416 = 1.707$."

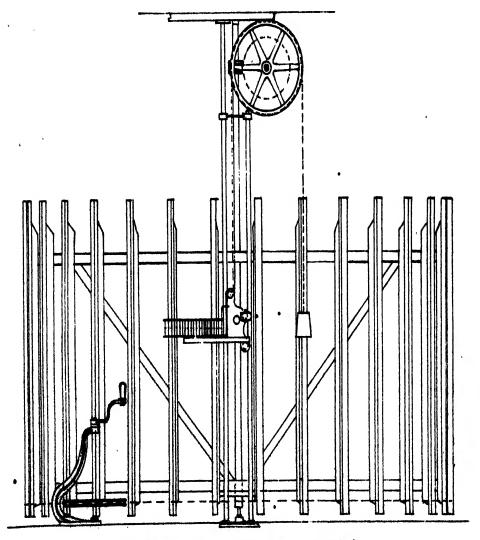

* For Description of the process of Warping sea " Art of Weaving."

BUNDLING PRESS.

SCALE 3" TO ONE FOOT.


Hand Wheel 36" diameter.


Pinion 13 teeth.


Wheel 32 teeth.

Pinion 10 teeth.


Break Wheel 66 toeth.

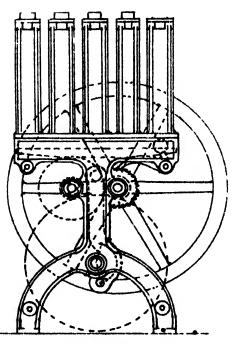

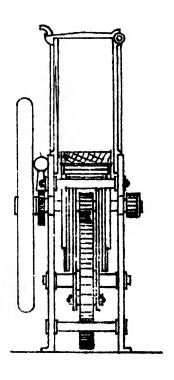

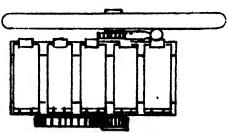

^{&#}x27;This Press is used for making small bundles—say from 8/16 lbs. each

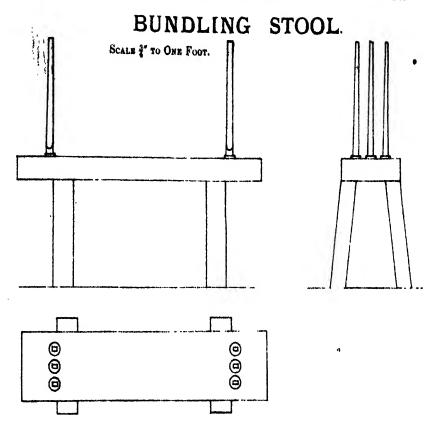

WARP WINDING.

If the warp yarn which has been soun is to be sent into the factory, it is taken to the warp-winding department. Here the spinning bobbins are wound upon a large bobbin—usually 8 inch by 5 inch—preparatory to being sent to the dressing machines. The machine illustrated is made by Messrs Thomson, Son, & Co. Three winders are usually employed upon each side; and one machine of the description illustrated will wind about 2,000 spyndles per week. The particulars of speed, &c., of this machine are also given. Here I may say that the yarns, both weft and warp, being winded from the spinning frames, should be carefully sampled three times each day, to ensure that the yarn is being kept to the weight required.


In the Cop and Warp Winding departments the cops and warp bolibins are weighed when taken from the winders—this should always be done with care and attention, as the winders in these departments are paid according to the weight of yarns wound by them.

WARP WINDING MACHINE BOBBIN

8 TRAVERSE.

SCALE 3" TO ONE FOOT.

(Messrs Thomson, Son, & Co.)

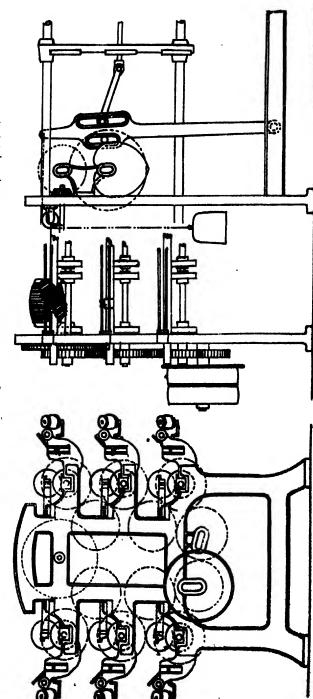

267 × $\frac{45}{45}$ = 267 revs. of bobbin drum per minute. 267 × $\frac{45}{45}$ × $\frac{130}{130}$ × $\frac{36}{130}$ × $\frac{135}{130}$ = speed of heart for traverse. Pulleys Pinion 48 teeth. Pinion on end of Bobbin Drum Shaft 48 teeth $220 \times \frac{17}{14} = 267$ speed pulleys Traverse Arrangement—Heart 6" lift. Pulleys 14" diameter.

CONCLUDING REMARKS.

WASTE-These pages would not be complete and would not fulfil their purpose if the author said nothing as to the question of the quantity of waste made, or that may be expected to be made, in the different departments during the various operations from batching to reeling, Waste and dirt always tend to make more waste and dirt, hence the necessity to do all that can be done to make as little dirt and waste as possible. It is the attention that is bestowed upon the seemingly small details that go to make the whole arrangement and organization complete, and in reference to this question of waste too much attention can hardly be given to it until you have been able to impress every one in charge with the importance of the matter. When the making of waste is tolerated you may be sure the tendency to make waste will always be on the increase, followed in every case by indifference and neglect. The waste in the batching, that is the dirt and root as it falls through the softener rollers to the floor, will be found to be about 3052 % but it is waste you want to get rid of, and you can only minimize this by as much care and attention as possible to the selection of the jute suitable for the yarn required.

The waste or droppings from the breakers and finishers to a certain extent is also what you wish to be rid of, but if there is inattention to the staves, if they are not kept sharp and regularly set in their proper relation to one another, you will make for a certainty more waste than is necessary, and the more waste you make here than is absolutely necessary, you are, of course, always adding to the cost of the batch you have laid down at the commencement. drawings and rovings are thoroughly swept out every day this will keep steadily before your eye what is being done in the matter of waste-from this the following is about the proportion of waste that will be made: 1st. From breaker about 1:36 %, from finishers about Of course the droppings from breaker and finishers will require to be shaken in a waste cleaner, and there will be 1.25 % of dust and 5% of pickings, the latter of which may be used for some of the coarser qualities of yarn. The waste from the Drawing and Rovings will be about 435 % of the quantity of rove made.

The waste from the spinning department, taking the average size at 9 lbs. per spyndle, two-thirds of which will be weft and one-third

warp, will be about 2.10 % on the yarn produced, and the reader will bear in mind that on this question of waste I am referring to the class of jute described in the chapter upon batching as necessary for the production of Hessian cloth of good standard quality, the jute for which has been carefully selected for the purpose intended.

To speak in a general way as to the total waste made during the manipulation of jute into yarn would not have much value. A statement, therefore, as to the quantity of jute put over the machinery involved in the process, showing at the same time the per cent. of waste made at each class of machinery, is necessary:—

BATCHING.

60 bales of jute (400 lbs. each), to which is added 3 % of oil and 15 % damp, was put over the softener in ten hours—a fair day's work, based upon the speed of the machine given in the chapter on batching.

From this was got $62\frac{1}{2}$ lbs dry and 35 ibs. wet refuse—say altogether $74\frac{1}{2}$ lbs. dry—equivalent to '3052 °/ $_{\circ}$.

PREPARING.

The following is based on the results of two working days, or 20 hours, producing 140 cwt rove and 3 cwt., 2 qrs. 10 lbs. waste:—

1 Double Doffer Breaker ---

Dollop 22 lbs., 2 deliveries of 22 lbs each for one round of clock.

· Cylinder making 185 revolutions per minute.

Cylinder Pinion, 44 teeth.

Worker ,, 33 ,, Draft ,, 34 ,,

31 tons can be put over this breaker in 10 hours, supplying

٠.

2 Single Doffer Finishers-

Oylinder making 193 revolutions per minute.

Cylinder Pinion, 60 teeth.

Worker ,, 58 ,,

Draft ,, 31 .,

Each finisher supplies 1 push bar drawing.

2 Push Bar Drawings of 2 heads each-

Speed of Pulleys, 145 revolutions per minute

Pulley Pinion, 32 teeth.

Draft. ., 54 .,

Each push bar drawing supplies 1 spiral 2nd drawing.

2 Spiral 2nd Drawings of 2 heads each-

Speed of Pulleys, 170 revolutions per minute.

Pulley Pinion, 28 teeth.

43 ,, Draft ,,

Each 2nd drawing supplies 1 roving of 56 spindles,

2 Roving of 56 spindles, $10'' \times 5''$ bobbin, make 35 cwt. of rove, 72½/75 lbs. per spindle each, in 10 hours-say 140 cwt. in 20 hours -

Speed of Pulleys, 220 revolutions per minute.

Twist Pinion, 35 teeth.

Cirist 36

Traverse ,, 28 Rack

15

The waste made The rove made

cwt. B . 140 0 0

., 143 2 10

The waste made at each class of machine was as follows :-

1 Breaker-

210 lbs. Dust ... 10 .. Pickings 220 ,. - 1.3680 °/2

2 Finishers-

Dust ... 28 ,, Pickings 84 ,, 112 ,, = '6964 '/_

4 Drawings and 2 Revings-

30 lbs. Dust ...

40 ,, **Pickings**

70 .. = '4352 "/.

= 1.6664 °/. * Total Dust ... 268 .. ≈<u>_</u> .8332 ,, , Pickings 134 ,,

2.4996 %

SPINNING.

The yarn spun from this rove was $\frac{2}{3}$ weft and $\frac{1}{3}$ warp, and the average weight per spyndle 9 lbs.; waste = $2\cdot1069$ % in the spinning process.

REELING AND COPPING.

The percentage of waste made in the reeling and copping departments are 5853 and 3800 % respectively; and if the production of the mill is to be two-thirds reeled and one-third copped, the overhead rate would be 5172

 $\frac{3}{5}$ 5853 - 3902 1 3809 = 1270

·5172 °/

SUMMARY OF WASTE PERCENTAGE.

Batching a	nd Softeni	ng	•••			·3052 °/
Preparing,	Breakers,	and	Finishers			2.0644
,,	Drawings	and	Roving			·4352
Spinning	•••			•••		2.1069
Reeling an	d Copping	•••	•	•••	•••	.5172
Tot	nl					5·4289 °/

These results are borne out by experience over a whole year, and can therefore be relied on.

The value of the different kinds of waste made in relation to the value of the raw material will be found to be as follows:—

The value of dust is equal to 4.1 %, of the original cost of the raw material.

17	pickings	25.0 ,,	•,	••	11
,,	spinners' waste.	29·L "	,,	**	,,
١,	reelers',,	58.3 ,,	,,	••	"
••	copping ,,	58.3 ,,	"	••	13

Speed to be put upon the Machinery.—I have in the chapter upon preparing machinery alluded to this as a question upon which there is much difference of opinion. While this is so, as to the surface speed of Card Cylinders, the speed of a breaker or finisher or any other of the machines in the various processes, is in a great measure a question of production. If a large production is wanted, the speed must be put upon the machines to bring it off; it is sometimes said that to much speed upon the machines will destroy the material, but if the speed put upon the machinery is

beyond the possible limit, you will destroy the machines long before you spoil the material. In the case of the preparing machinery it is not the speed put upon the machines that will make rove to produce bad yarn, it is the overloading of the different machines, that is-the putting on the Breaker in one round of the clock more weight of jute than the length of the Cylinder or other Roller pins will come up through, and also the overloading of the other machines in the same direction. If a moderate quantity is put on the machines the speed, although on the fast side, will do no harm to the material; and to the machinery, the speed if on the quick side, of course means more mechanical expense and attention on the part of those in charge of it, and the same remarks apply to the other machines in the preparing department. The question of speed is, therefore, in a great measure, to be determined by the amount of mechanical attention and expense you are prepared to give for the utmost production that can be taken out of the machine Of course, the reader will see at a glance that if the machinery is being kept on the fast side, more expense in the shape of oil and all other furnishings will be incurred. Against this, of course, you have the larger production than if you drive the machinery on the slow side. It is a question that need not be pursued further here. I merely wish to bring to the notice of the reader that increased speed of the preparing machinery is done at the expense of the machine and not at the expense of the material, as is often supposed. Experience will often prove that where the machinery is being driven slow it is no guarantee that it is being kept in better order than when it is being driven on the fast side. Rather the opposite will, as a rule, be found to be the case. If the limit of speed is being attained on the machinery experience will also prove that the machinery is being kept in good order, in fact, it must be so, if you are to keep it going.

The above remarks will only apply, to a limited extent, to the spinning frame. Here the spindles and flyers will only stand a certain speed, and they determine the speed of the other parts of the frame. If the flyers are driven beyond this speed by the centrifugalforce, the legs of the flyer will fly out, and break one another; but all the same, there may be a good speed upon the spindle without going to the extreme alluded to in the above remarks. Here again it is a question of up-keep. More oil, spindle bands, &c., will be necessary. To put it shortly, instead of oiling the spindle necks twice a day, you will require to oil them three times a day. To oil 6,000 necks twice a day will require about three-quarters of a gallon of oil,

and a half more of this quantity means an extra cost of about 4d per 10 hours day—not a large item if you are taking the production out of the machine.

UP KEEP OF JUTE PREPARING AND SPINNING MACHINERY .-- Jute Preparing and Spinning Machinery, owing to the sandy and gritty nature of the jute fibre, is liable to much wear. The dirt and sand finds its way in every direction through the machinery; the consequence is that the mechanical attention required to keep the machinery in good order is considerable, and on the mechanical energy displayed in the mill will greatly depend the general production and the working conditions of the different machines. All the details of the machinery must be kept as near as possible the same as when the machine was new. When a wheel or pinion is broken it should be replaced by a new one, and the new one should be a casting from the maker of the machine, if not from the maker at least of the same pattern. In the case of wheels and pinions this is of great import-To repair wheels and pinions by putting pins in them for teeth or to repair brackets and other parts of the machines by patches of plates is perfect folly, and nothing will in the end lead so much to the total deterioration of a mill than to pursue a course such as described, To give force, spirit, and celat to the whole mill is to keep the machinery in the very best order, and you thereby will have at your command effective tools for the work to be done. The same remarks apply to all the smaller details, furnishings, as they are generally called, belts, spindle bands, and many other small things which we need not specify further.

Bobbins in large quantities should always be kept in hand; if this is done you will have them well seasoned and in good working order. A very important point in the preparing and spinning departments—sometimes the full bobbins accumulate in the cop, reeling, and winding departments, and this will happen occasionally no matter how well you try to avoid it but while this is so there should always be enough bobbins at hand to cop with the emergency. There should on no account be a stoppage of the flow of full bobbins either from the preparing or spinning departments. In a mill, owing to the number of people employed, any stoppage of the flow of production very quickly increases the cost, hence the absolute necessity of removing every obstacle that will in any way impede the steady run of the work in

every department. Each department should be conducted on such lines as will make those who are responsible teel they themselves have the making of the production in their own hands. But while saying all this as to the general benefits to be derived from keeping everything in good mechanical order, and also the details up to the mark in every way, there is no necessity for extravagance, and no countenance should be given to it. Experience will prove that when those in charge know that it is necessary to keep everything in offective condition ready for immediate use, the result is always to strive to keep everything in order without unnecessary waste or extravagance. Nothing will sooner utterly destroy the production of a jute mill more thoroughly than the knowledge creeping into the minds of those in authority that the necessary repairs will not be allowed to be made upon the machinery for the making of good work - paralysis sure and certain will take possession of the spirit and working energy of the people.

ACCIDENTS TO THE MACHINERY.—Accidents to the machinery do happen, and will continue to happen, no matter how much care and attention has been taken to avoid them, but you can expect no spirit nor heart in those who are responsible if the machinery is allowed to run until it stops through sheer mechanical neglect. Inferior production, inferior everything in fact, can only be the result.

When the machinery is in want of repairs get the trained mechanic to do it, and on no account let others who have neither the mechanical knowledge nor the training necessary for this class of work attempt it. The "handy" man amongst machinery is very often the "expensive" man in the end. He should be kept strictly at the work which he has been engaged to perform. As a rule, he will have enough to do, and sometimes more than enough, if he tries to do it well.

TEMPERATURE OF THE MILL.—This is a matter that should engage the attention of those in charge. For a mill, as shown on the plan, four lines of heating pipes will be necessary—one line of pipes in batching house, one line in front of finisher cards, one line between first and second line of spinning, and the fourth line of pipes between the end of third line of spinning and the cop and warp winding machinery. These pipes should all be run into a receiver at the north side of mill, and as near the centre of that side as possible, and the waste water or condensed steam, should then be returned to the boilers.

It is of great importance that the mill be made comfortable for the workers in the cold mornings. If the temperature be below 70° the material will not work well, neither will the workers be able to work with freedom the different machines at which they are engaged; but the temperature should not be over 70°, and there should always be care taken to provide fresh air and plenty of ventilation.

When the mill is built on the shed principle, the temperature varies very much, and if attention is not given to this question of hoating arrangement, much loss of production and waste will ensue.

Sampling the Yarn.--This is a matter of great importance, The yarn that is to be wound into cops or upon warp bobbins for Dressing or Beaming Machines should be sampled three times a day. This is done by reeling 12 cuts upon a 90" reel, with 120 tooth "tell" wheel-that is a quarter spyndle. If a number of frames are spinning the same size of yarn, more than one sample should be taken-no allowance for loss of weight should be made on the yarn when sampled. The correct weight of yarn as it comes from the frame should be written into the book kept for the purpose. If the making of an allowance upon the yarn when sampled is encouraged, it only leads to the varn being spun above the weight. The yarn should be spun and should weigh the size it is, namely—if you are spinning 8 lbs, yarn it should weigh 8 lbs in the sample, neither more nor lessto make it so it should be the aim of all interested. It will help very much to keep the yarn upon the weight if the same frames are always supplied from the same rovings. This will sometimes require a little attention and arrangement to enable this to be carried out, but the result will be worth any trouble that may be taken to ensure this being done.

Note -- That the reel upon which the samples are recled should be kept for sample purposes.

Finishing the Work for the Day.—When the work for the day is finished, the mill should be left clean and tidy, and everything in perfect order. When this is done, it will be found of great service to the making of a good start in the morning. The floor should be cleaned up thoroughly, no roves nor rove bobbins, boxes, or anything of the kind left lying about—in short, the cleaner and smarter you leave everything, the better able are you to cope with the work at the start; and these remarks apply with equal force all through the works—boiler shed, engine-room, &c., &c.


ARRANGEMENTS FOR EXTINGUISHING FIRE.—All the tools in connection with the apparatus kept for the extinguishing of fire should be seen to every night when the works are stopped. The fire-cocks should have bends and keys fitted on, and everything left so that in an emergency it can be used without fuss or trouble, and when those in charge arrive at the works, everything will be found in readiness to cope with whatever may happen. It is the unexpected that always happens, and everything that can be done to provide against accident should always be attended to as fully as the resources of the works will allow.

I have now described the various machines, and the operations that are gone through during the conversion of jute in the bale into yarn; and we have followed it to each of the departments, to be made into cops, wound in warp bobbin for dressing machine, and also reeled in the bundle. While this may have been done somewhat imperfectly, enough has been said to enable the student to follow the The author of these pages has found the writing different processes. and preparation of them congenial work; and now that the work is done, he can only hope that they will supply what he believes to be a want in connection with the jute trade; and also that they will prove of interest, stimulate and encourage the young men to learn their business with thoroughness and with some degree of interest in the working of the machinery in whatever department of the mill they may be employed. In this book the writer does not for one moment pretend to have told everything; he has, however, explained many things which, from his own experience while loarning his business, he is sure will be very helpful to those anxious to know something of their work, and the proper way to set about the doing of The reader by this time will fully understand my motive in publishing these pages; and in offering them to the general public, however imperfectly they have been written, they will, I trust, be of service, and fulfil the purpose for which they were intended.

APPENDIX.

JUTE SNIPPER.

This machine, which we have illustrated by a plan and elevation, is not so much used now as it was some years ago. snip or comboff the root ends of the jute, and it did this, without doubt, very well, but the cost was too great. It not only took off the roots, but also made a great amount of tow. The very least taken off the streak of jute after it came through the machine, being about 15%; this tow was very inferior, and, of course, when you deducted the value of the 15% lost (or nearly so, comparatively speaking) this increased the cost of the jute left, and the machine is now not much used. It is found by the trade to be much better to cut the roots off with a knife or blade of steel, about 36" long x 6" broad, fixed to a wood This is often done when a yarn is wanted of fine quality and free from root. When the roots are taken off this way there is not nearly the same loss as with the snipper, and the roots can always be used without making the loss that was done by the snipper, the tow from which it was impossible to use up profitably without damage to the yarn it was put in The following is an illustration of steel blade showing attachment to wood frame (Scale 4" to One Foot).

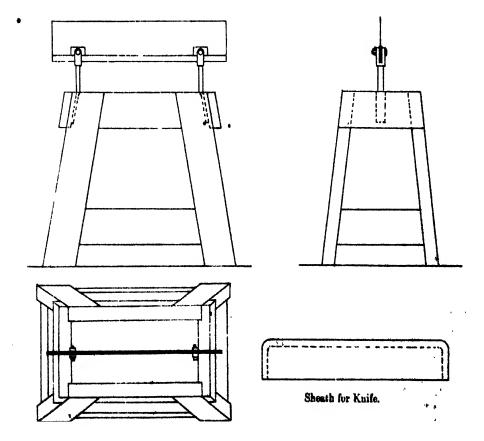


SNIPPING MACHINE FOR JUTE.

SOALE , th.


(For Diagram see Page 262).

AA	Driving Pulleys,		•••	20" dia.
BB	Pulleys for driving top cylinder,	•••		18" dia.
O	Pulley for driving chain wheel,	•••	• • •	6" dia.
Ð	Pulley carrying spur pinion,	•••		18" dia.
K	Spur Pinion		• • •	35 leeth.
F	Spur wheel on driving shaft,	•••		144 teeth.
G	Bevel pinion on driving shaft,	•••		18 teeth.
H	Bevel wheel on intermediate shaf	t,	•••	64 teeth.
I	Bevil pinion on intermediate shaf	t,		18 teeth.
J	Bevel wheel on chain wheel shaft,			64 teeth.
K	Pulley on driving shaft,	•••	• • •	18" dia.
L	Pulley on sheet roller shuft,		•••	5" dia.
MM	Endless chains for holding the jut	υ.		

JUTE SNIPPER.

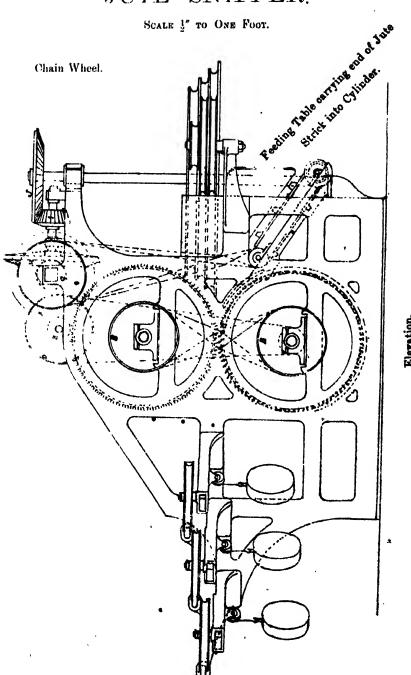


JUTE SNIPPER.

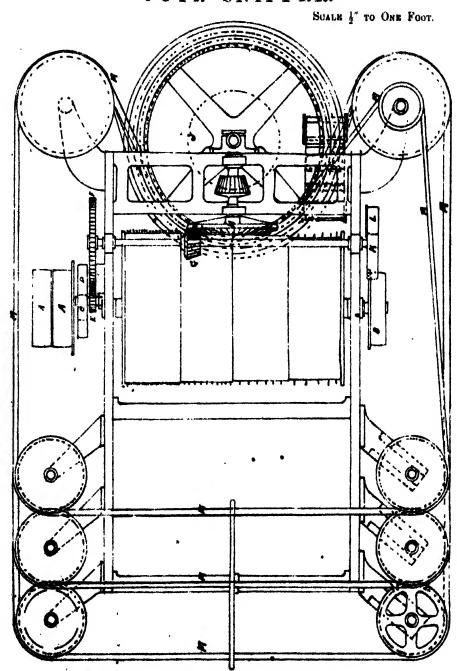

For particulars of Staves for Snipper Cylinder see page 111.

Lathe Attachment for Grinding Spinning Spindles. SCALE 14 TO ONE FOOT. 0 0 Elevation of Driving Gear for Emery Wheel, showing Spring for tightening tope

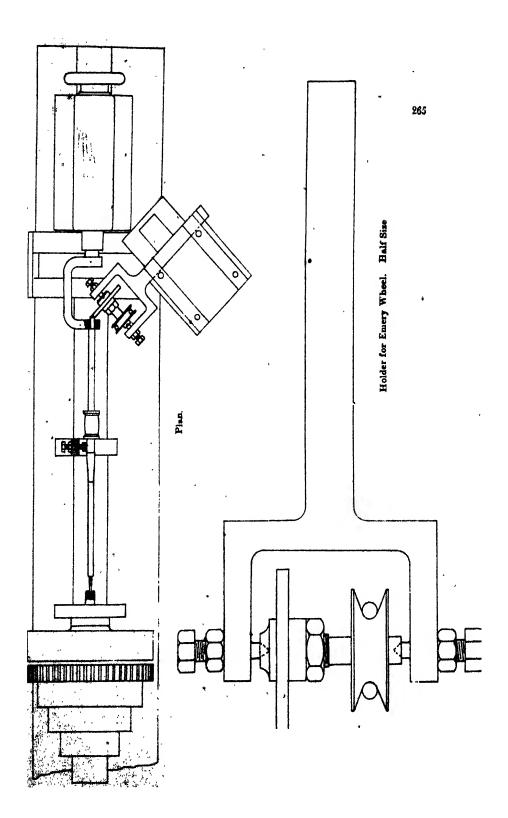

WASTE CLEANER.


This machine is used for cleaning the waste made at Breaker and Finisher Cards.* The waste is laid upon the feed cloth A and a quantity fed into the machine—this is allowed to remain in from a minute to a minute and a half, the dust falling through a circular grating below cylinder. • The waste fibre is allowed to pass out of the machine by the lifting of a flap cover at B, the dust drops into a bag at C, and the waste into a bag at D. The machine cleans the waste thoroughly, and the fibre or pickings, as previously explained in the chapter on Waste, can be utilised for the coarser qualities of yarn.

SCALE #" TO ONE FOOT.


Section of Cylinders.

The Waste made at Drawings and Rovings may also be cleaned in this Machine.

WASTE CLEANER

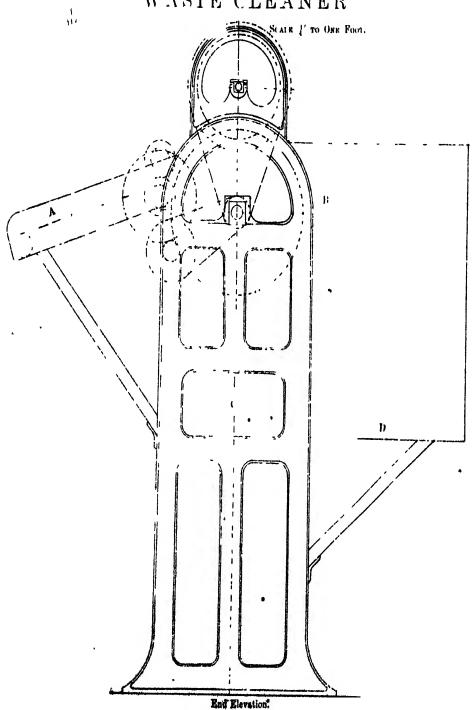

WASTE CLEANER.

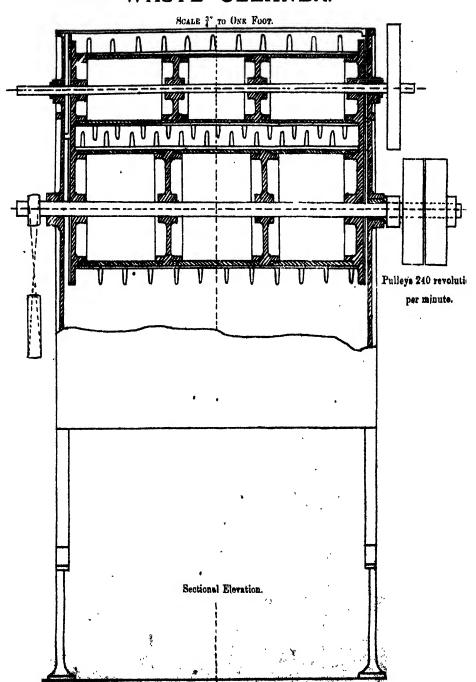

THE ADJUSTMENT OF THE BREAKER SHELL


This illustration is given to show how the shell is hung from the feed roller arbor, it being often necessary to move the shell either closer to, or farther away from the cylinder according to the jute being used. This can be done in a few minutes when required if the fixing of the shell is properly understood.

A radial bracket A is hung from feed roller arbor B, a sett screw C is provided for adjusting the distance of front of shell D from cylinder pins, two bolts E and F fix the shell to the radial bracket. In a breaker the shell is usually set \$\frac{1}{2}\$ from feed roller, and is seldom moved from that position. The position of fight of shell to cylinder pins is usually about \$\frac{3}{2}\$, but may be varied and often is so from a \$\frac{1}{2}\$ to a \$\frac{1}{2}\$, according to the quality and weight of material being put over a breaker in one round of breaker clock

In illustration the fixing of one end only of the shell is shown both ends being alike


DETAIL OF RADIAL BRACKET CARRYING SHELL



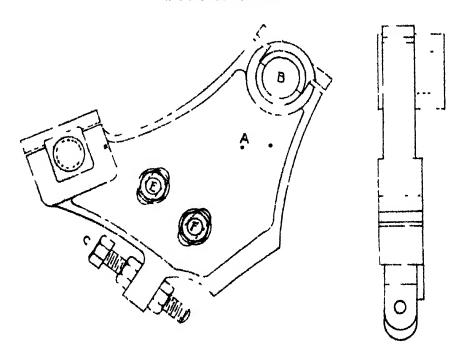


ARRANGEMENT OF RADIAL BRACKET FOR ADJUSTING SHELL TO CYLINDER.

SCALE 14" TO ONE FOOT.

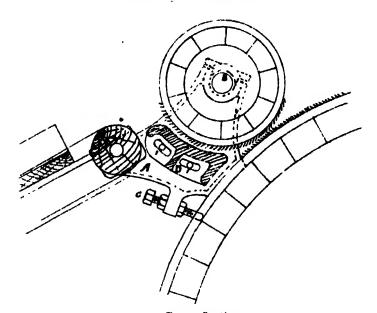

Cross. Section.

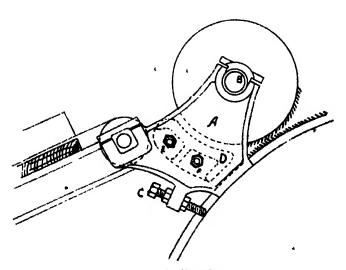

' End Elevation.

ADDENDA.

SEE PAGES 181 to 186.

Single D	ofter	Breaker	Worker	Pinion,	•••	• • •	60 (teeth
Double	,,	"	',,,	,,		• • •	32	,.
Single	••	11	Finisher	**	•••	•••	46	,,
Single D	oser	Brenker	Change :	Pinion fo	r Draft bet	ween		
Doff	fer an	d Drawi	ng Roller	·,	•••	•••	26	,,
Ditto for	Dou	ble Doffe	er Breake	er,	•••		28	.,
,,,	Sing	le .,	Finish	er	•••		28	

PAGE 194.

To find the speed of Spinning Frame Spindles:

PAGE 201.

If the grist pinion on end of drawing roller is 36 teeth, and is producing 9 lbs. yarn, what pinion will be required to produce 10 lbs or 12 lbs.?

Then—9:10::36:40 the pinjon required; or 9:12::26:48 ... "

\$. `

272 ADDENDA.

SAMPLING WEIGHT OF ROVE.

The rove should be sampled once every week to insure that the weight of rove wanted is being produced. This may be done as follows:—

Take one rove of each head of roving, reel 30 threads off each rove (90" reel) $-8 \times 30 = 240$ threads in sample, weigh this, and, for example, say it weighs 3 lbs. (that is 48 ounces)—then 48×3 and $\div 2$ will equal the weight of rove in lbs. per spindle.

Note.—You take 8 roves and 30 threads off each, multiply the weight of sample in ounces by 3, and divide by 2, and the answer will always be weight of rove being produced in lbs. per spyndle of 14,440 yards.

To prove this -5760 threads in one spyndle of 14,400 yards -

Threads Threads 0%
210: 5760:: 48

1: 24

48

192

96

16)1152

72 lbs. per spyndle = weight of rove; or

72 lbs per spyndle = weight of rove.

If the rove weighs 70 lbs. per spyndle, and you wish to spin 10 lbs. yarn this means a draft of 7 will be required on the Spinning Frame.

A TABLE CONTAINING THE CIRCUMFERENCES AND AREAS OF CIRCLES.

Circumferences and Areas of Circles from $\frac{1}{16}$ of an inch to 10 inches, advancing by $\frac{13}{16}$ of an inch; and by an $\frac{1}{8}$ of an inch, from 10 inches to 100 inches Diameter

Diameter.	Cirenin,	Area,	Diameter.	Circum.	Area,
1 6 1 8 1 6 1 6 1 6 1 6 1 6 1 6 1 6 1 7 6	.1963	-0030	J. 2 m.	. 6 2832	3.1416
j j	-3927	-0122	1.0	6.4795	3 3411
14	•5890	0276	1 1	6.6759	3.5465
1	.7854	-0490		6 8722	3.7582
iå l	.9817	-0767	4 '1"	7.0686	3 9760
#	1.1781	1104		7.2649	4.2001
7	1.3744	1503	12	7.4613	4.4302
4 1	1.5708	1963		7.6576	4.6664
200	1.7671	2485		7 8540	
3	1.9635	3068	2	8.0503	4·9087 5·1573
14	2:1598	3712		8.2467	
3	2.3562	4417		8 1130	5.4119
13	2.5525	5185	16	8 6391	5.6727
0 1 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	2.7489	6013		8.8357	5.9395
14	2.9452	6903	7	9.0321	6.2126
1"				9.2284	6.4918
l in.	3.1416	.7854	n 16 i	9.2284	6.7772
34	3.3379	-8861	. 3 in.	9:4248	24040
4	3.5343	9940		9.6211	7.0686
3,	3.7306	1.1075	13	9.8175	7.3662
T I	3.9270	1.2271	!	10 0138	7.6699
7.	4.1233	1.3529	11"	10.0138	7.9798
3	4-3197	1.4848		10 4065	8.2957
3.6	4.5160	1.6229		10.6029	8-6179
1	4.7124	1.7671	7 !	10.7992	8-9162
10	4.9087	1.9175	11	10.9956	9.2806
1 5"	5.1051	2.0739	2	11-1919	9 6211
ř.	5.3014	2.2365	1,6	11-3883	9.9678
3	5.4978	2 4052	1 ,5	11.5846	10.3206
	5.6941	2.5801	7 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1	11.7810	10.6796
7	5-8905	2.7611	14		11 0446
12	6.0868	2.9453	7,6	11·9773 12·1737	11-4159 11-7932

	1]			T
Diameter.	Circum.	Areu.	Diameter.	Circum.	Area.
1 .	12:3700	12 1768	1	20 4204	33.1831
10		1	9 16 8 11 16 3 4	20 6167	38-8244
4 in.	12:5664	12 5664	18	20.8131	34 4717
16	12 7627	12.9622		21.0094	35 1252
16	12 9591	13.3640	16	21.2058	35.7847
-7 3 5 - 4 5	13.1554	13.7721	1.3	21.4021	
- Կո մ	18:3518	14.1862	LG A		36.4505
4	13 5 481	14.6066	Ä	21 5985	37 1224
1,0	13:7415	15.0331	i ê	21.7948	37.8005
47-2-2-5-6	13.9408	15.4657	1 ~. 1	01 0010	
1,6	14:1372	15.9043	7 in.	21.9912	38.4846
9	14.3335		1,3	22 1875	89.1749
1,6		16:3492	1 8 1 % 1 %	22.3839	39.8713
3	14-5299	16.8001	1.	22.5802	40 5469
i ji	14 7262	17 2573		22.7766	41.2825
ĺ	14 9226	17:7205	138	22.9729	11.9974
i_si	15.1189	18:1900		$23\ 1693$	42.7184
<u>,6</u> ;	15 3153	18.6655	6 18 8 7 18 1-29 1,8	23.3656	43.4455
10	15 5716	19.1472	1 1	23.5620	44-1787
			134	23.7583	44.9181
5 in.	15 7080	19 6350		23.9547	45.6636
10	15 9043	20.1290	3.0	24:1510	46.4153
, i	16.1007	20.6290	jei I	21 3174	47.1730
16	16.2970	21.1252		24:5437	47.9370
1	16.4934	21.6475	[24.7401	48.7070
1.6	16-6897 _;	22.1661	15	21.9364	49.4833
; 8	16.8861	22.6907			
10	17:0824	23 2215	S in.	25 1328	50 2656
Ā	17.2788	23.7583	1,4	25.3291	51.0541
10	17:4751	24.3014	T I	25 5255	51.8186
4 '	17:6715	24 8505	8	25.7218	52.8994
11 .	17 8678	25.4058	1	25 9182	53.4562
i i	18.0642	25 9672	10	26:1145	54-2748
1 3	18 2605	26 5348	3" 1	26:3109	55.0885
13 13 8 14	18:4569	27:1085	7 1 d 2 2	26.5072	55.9138
10	18.6532 ,	27.6881	1	26.7036	56.7451
	1	į		26.8999	57.5887
6 in.	18.8496	28 2744	1 to 5 to	27.0968	58.4264
1	19 0459	28.8665	ũ	27.2926	59.7762
1 6	19 2423	29 4647	1 % 3 4 1 3 1 3	27.4890	60 1321
16	19:4386	30.0798	13	27 6853	60.9943
	19.6350	30 6796	¥" }	27.8817	61 8625
, K	19.8313	31-2964	13	27 0780	62.7369
7 1 d	20 0277	31.9192	14	21 0100	02 1308
7	20.2240	33 5481	9 in.	28-2744	62,6174
			• • • • • • • • • • • • • • • • • • • •	~0 ~177	63.6174

Diameter	Cinum	Arca	Dismeter	Cheum.	Area
Diminoral	C III WILL	11164	1 171 1110(01	*	74. CM
-	·			1	
1,6	28 4707	64.5041	i j	41 2338	135 2974
	28 6671	65 8968	1 22	41 6262	137 5867
7,0	28 8631	66 2957	k	12 0189	140 5007
1 1	29 0598	67 2007		42 4116	143 1391
16	29 2561	68 1120	1 1	32 4013	145 8021
1 1 1	29 4525	69 0293	1 ,	43 1970	148 4896
i a	29 6488	69 45 3 8	1 [13 5597	151 2017
1 1	29 8452	70 8823			
1	80 041)	71 4181	14 m	43 9524	158 9384
1 1	30 2379	72 7599	į	11 3751	156 6995
10	30 1312	73 7079	1 3	11 7676	159 4852
1 2	30 6306	71 6620	į	15 1605	162 2956
	30 8269	75 6223	*	45 5532	167 1303
1	31 0233	76 5887		15 9 159	167 9596
10	3, 3196	77 5613	1	16 3386	170 8786
1			•	46 7313	173 7820
10 m	31 4160	78 5 100			
1 1 1	31 8087	80 5157	15 in	47 1240	176 7150
1 1	32 2014	82 5160	į	47 5167	$179\ 6725$
	32 5911	84 5109	Ì	17 9094	182 6545
1	23 9864 °	86 5903	1 3	18 3021	185 6612
Spident a spin a see a	33 3795	88 6613	Ļ	14 69 14	158 6923
1 1	33 7722	90 7627	*	1 49 0575	191 7480
	34 1619	92 8858	1	49 4502	194 8282
			į	49 8729	197 9330
11 m	34 5576	95 0 33 4		İ	
	34 9503	97 2053	16 m	50 2656	201 0624
	35 3 130	99 4021	,	50 6588	204 2162
	35 7857	101 6234	Ì		207 3946
1 4	36 1284	103 3691	- 15	51 4437	910 5976
	36 5211	106 1394 •	• • • • • • • • • • • • • • • • • • • •	51 8361	213 8251
1	36 9188 ¹	108 4312	¥ H	52 2291	217 0772
1 1	37 3065	1107536	4	1 52 6218	220 3537
			, ,	53 0145	223 6549
12 in.	87-6992	113 0976		1	
1 1	38-0919	115 4660	17 m	58 4072	226 9806
1 1	38 4846	טענים 111	ı į	53 7999	280 3308
	38 5778	120 2766	4	54 1926	233 7055
•	39 2700	122 7187	3 8	54 5553	287-1019
4	39 6627	125 1854	1 1	34 9750	240 5287
	40 0554	127 6765		55.3707	243 9771
1 3	40.4481	130 1923	1 4		247 4500
}			1 7	56 1561	250 9475
13 in	43.8408	132 7326	1	1	
1		_	1	1 _	1

Diameter.	('iream.	Area.	Diameter.	Circum.	Area.
	56-5488	254-4696	23 in.	72.2568	415:4766
18 in.		258:0161	•	72-6495	420.0049
8	56-3415	261.3872	. ;	78 0422	424.5577
4 :	57.8842	265-1829	. 🛊 .	73.4349	429 1352
	57:7269	268:8081		78.8276	433-7371
¥.	58-1196	272:4479	5	74 2203	438 3636
4 1	58 5128	275,4475	, 8	74 6130	443.0146
<u> </u>	58:9056			75 0057	447.6992
4	59-2977	279 8110		10 000	111 0002
19 m	59-6904	283 5294	21 in.	75.3984	452.3904
10 111 1	60.0831	287-2723	3	75 7911	457-1150
ý,	60 4758	291.0397]	76.1838	461.8642
4 1	60.8685	294.8312	1 1	76 5765	466 6380
8	61:2612	298.6483	;	76 9692	471.4363
<u> </u>	61 6539	302.4894	N 3	77:3619	476-2592
ğ	62 0466	306 3550	1 1	77 7546	481-1065
-400 8-040 80040-5	62.4398	810.2452	-0.8-6 0.804cs	78-1178	485 9785
*			i	78.5400	490-8750
20 in.	62.8320	314-1600	25 in		495.7960
1 8	63-2817	318-0992	1 1	78.9327	500.7415
Ì	63 6174	322 0680	> \ \	79 3254	505.7117
3	64.0101	326-0514	بغ	79 7181	
Ä	64.4028	830-0613	1 1	80 1108	510.7063
Ô	64.7955	934.1018		80.5035	515.7255
ij	65:1882	338-1637	X - 600 X 100 X	80 8962	520.7692
Northead Months of the Control of th	65 5809	342-2503	1	81:2889	525.8375
21 in.	65:7936	346 3614	26 in.	81.6816	530 9304
1	66.3663	350-4970	l l	82.0743	536.0477
ĩ	66.7590	354-6571		82.4670	541-1896
Å	67:1517	858-8419	3	82 8597	546.3561
ĭ	67.5444	363-0511	1 1	83.2524	551.5471
ą	67-9371	367:2849	1 &	83 6451	556.7627
-	68:3298	371 5432	1 1	84.0378	562.0027
4	68-7225	875-8261	X - Indiana Advisor	84.4305	567-2674
22 in.	69-1152	380:1336	27 in.	84-8232	572-5566
22 10.	69:5079	384.4655	7.	85-2159	577-8703
*	69 9006	388 8220	, 1	85.6086	583-2085
4	70.2938	393-2031	1 1	86.0018	588-5714
ij	70.6860	397.6087	1 1	86.3940	593-9587
*	71.0787	402.0388	3	86 7867	599-3706
ž.		402.0366	3	87-1794	604-8070
4014- 4 032041-2	71.4714			87.5721	610-2680
ક્ર	71.8641	410.9728	il A	01 0141	010 2000

Diameter.	Circum.	Area.	Diameter.	Çiroum.	Area.
28 in.	87.9648	615-7586	93 in.	108-6728	855:3006
1	88-3575	621-2686	1	104-0655	861.7924
Ĭ,	88 7502	626.7982	3 1	104-4582	868-3087
1 !	89-1429	632-3574	·	104.8509	874 8497
	89.5856	687-9411	77070	105.2486	881-4151
į	89.0288	643 5491) <u> </u>	105 6363	888 0051
3	90-3210	649-1821	. 3	106 0290	894-6196
****	90.7137	654.8395	3	106.4217	901-2587
29 m.	91-1064	660 5214	34 in.	106-8144	907-9224
1	91:4991	666-2278	1	107 2071	914-6105
]]	91.8918	671-9587]	107-5998	921-3232
3 ;	92.2845	677.7143	}	107 9925	928 0605
ĵ,	92.6772	683-4943	ļ ģ	108 3852	934'8223
5	93 0699	689-2989) <u>j</u>	108-7779	941.6086
3	93:4626	695-1280	7 7	109-1706	948:4195
2.2. X - 2.0. X - 2.2. X - 2.2	93.8558	700.9817		109 5638	955 2550
30 in.	94.2480	706-8600	35 in.	109-9560	962-1150
j.	94.6407	712.7627	1	110-3457	968-9905
A-400 de 15'8 35 de 15	95 0334	718-6900		1107414	975.9085
1	95-4261	724-6419	į į	11111341	982-8422
i	95:8188	730.6183	}	111 5268	989 8003
4	96.2115	736.6193	1 2	111-9195	996.7830
3	96.6042	742-6447	1	112 3122	1003.7902
ž,	96.9969	748-6948	7	112 7019	1010 8220
31 in.	97:3896	751-7694	36 in.	118-0976	1017 8784
1	97.7823	760 8685	* * * * * * * * * * * * * * * * * * * *	113.4903	1024-9592
	98-1750	766-9921	1.	113.8830	1032 0646
3	98.5677	773-1404	T :	114 2757	1039 1946
1/2	98.9684	779-3131	, ,	114.6684	1046:3941
TODE - ONO A STAR	99.3531	785.5104		115 0611	1058 5281
*	99.7458	791 7322		115-4538	1060.7317
8	100-1385	797-9786	Á	115-8465	1067 9599
32 in.	100-5312	804-2496	37 in	116-2392	1075-2126
1	100.9240	810-5450		116-6319	1082:4858
1	101 3166	816 8650		117.0246	1089-7915
	101-7028	823-2096	TO PER BOARD PART	117.4178	1097-1179
į į	102.1020	829-5787		117.8100	1104-4687
g l	102-4947	835-9724	8	118 2027	1111-8441
7.000.747.6	102-8874	842-3903	3	118-5954	1119-2440
Z	103-2801	848-8333	3	118 9881	1126-6685

Diameter.	Circum.	Area.	Diameter.	Circum.	Area.
38 in	119:3808	1134.1176	43 in.	135-0888	1452.2040
,	119.7735	1141.5911)	135.4815	1460-6599
ï	120:1662	1149-0892	ì	135-8742	1469-1897
*	120.5589	1156.6119	3	136.2669	1477-634
ender zum zum zudenen	120.9516	1164-1591	Kondan kundan ku	136-6596	1486-1731
7	121:3443	1171.7309	2 5	137.0523	1491.7266
3	121.7370	1179 8271	i N	137:4450	1503:3046
4	122-1297	1186 9480	1 1	137.8377	1511 907:
Ŕ	122 1201	1100 0400	`	101 0011	1.711 5012
39 in	122.5224	1194.5934	44 in.	138-2304	1520-5344
	122.9151	1202-2633	1	138-6231	1529 1860
* X - 4 11 X - 4	123:3078	1209 9577		139.0158	1537-862
4	123 7005	1217-6768	1 4	139 4085	1546 5530
×	124.0932	1225-4203	1	139.8012	1555-2883
a D	124.1859	1233-1884	2 5	140-1939	1564-0389
* 3	124.9787	1240.9810	3	140.5866	1572.812
0 x 841- x	125-2713	1248 7982	400 A 240 V C 400 V	140.9793	1581-611
Ä	140 4110	1240 11072		140 010	1001011
40 in.	125.6640	1256.6400	45 in.	141-3720	1590-435
1	126 0567	1264-5062	1 1	141.7647	1599-289
7	126:4494	1272:3970]	142-1574	1608-155
4	126.8421	1280:3124		142.5501	1617-042
ì	127-2348	1288:2523	î	142.9428	1625 974
3	127.6275	1296-2168	ī,	143-3355	1634-920
j	128.0202	1304 2057	1 7	143.7382	1643-891
	128-4129	1312-2193	- X	144-1209	1652-886
•			1		
41 iu.	128 8056	1320-2574	16 m	144.5136	1661-906
ļ.	129 1983	1328-3200	'i 1	144.9068	1670.950
	129 5910	1336.4071	1 1	145 2990	1680 019
3	129 9887	1341 5139	1 2	145.6917	1689-103
ij	130:3764	1352-6551	1	146.0844	1698-281
ñ S	130 7691	1860-8159] }	146.4771	1707.873
	131-1618	1369.0012	-630-547	146.8698	1716 540
Ā	131.5545	1377-2111	<u>;</u>	147-2625	1725 732
40 :	101,0470	1998.4187	47 in.	147-6552	1704.049
42 in.	131.9472	1335.4456			1734-948
8	132-3899	1393.7045	4 8	148 0479	1744-189
į,	132.7826	1401 9880	. 4	148.4406	1753.454
ij	133-1253	1470.2961	Southern Section 2002	148-8333	1762-734
*	133.5180	1418-6287	1	149.2260	1772.058
ž	133 9107	1426.9859	1 3	149.6187	1781-397
# CARTER CO	134 3034	1435-3675	4	150-0114	1790-761
á	134.6961	1413.7738	1 8	150-4041	1800-149

Diameter.	Circum.	Area.	Diamoter.	Circum.	Ares.
48 in.	150-7968	1809-5615	53 in.	166 5048	2206-1886
Ł	151:1895	1818-9986	j j	166 8975	2216 6074
Ş	151 5822	1828-4602	Î	167-2902	2227 0507
3	151.9749	1837-9364	3	167-6829	2237-5187
Ĵ	152:3676	1847-4571	X -8 0 H 22 4	168.0756	2248-0111
į	152.7603	1856-9924	9	168-4683	2258-5281
7	153 1530	1868-5521	3	168 8610	2269 0696
*	153:5457	1876-1365	1 3	169-2537	2279-0857
49 in.	159-9384	1885:7454	51 io.	169 6464	2290-2264
1 i	154.3311	1895:3788	1	170.0391	2800-8415
ĵ	154.7238	1905.0367		170.4318	2311-4812
3 :	155-1165	1914-7093	1 2 2 1	170.8245	2322-1455
Ĭ.	155 5092	1924.4263	ij	171:2172	2332-8343
Z-19-24-52-52	155.9019	1934-1579		171.6099	2343-5477
ÿ	156.2946	1943-9140		172.0026	2354-2855
, K	156 6873	1953-6947	{	172-3593	2365 6480
50 in.	157 0800	1963-5000	55 in	172 7880	2375-8350
Į.	157-4727	1973-3297	1 1	$173 \cdot 1807$	2386-6465
Ĭ,	157.8654	1983-1840	1 1	173:5734	2397-1825
i .	158:2581	1993-0529		178 9661	2408-3432
j ;	158-6508	2002-9663	1	174/3588	2419-2283
K 45108 D47-8	159 0435	, 5015-8043	: A - B - E - C - C - C - C - C - C - C - C - C	174 7515	2430.1833
4	159.4362	2022:8167	7	175-1442	2441-0772
Ž.	159-8289	2032 8238	Ž	175-5369	2452.0301
51 in.	160-2216	2042.8254	56 in.	175 9296	2463 0144
, ,	160.6143	2052-8515	1 4	176-8323	2174-0222
	161 0070	2062 9021		176 7150	2485-3546
i i	161-3997	2072-9764	1 1	177 1077	2496-1116
j	161.7924	2083 0771	1 1	177-5004	2507-1931
ST - STS H STS	162 1851	2093 2014	# - # 0-10 M 234 7.4	177-8931	2518 2992
1	162.5778	2103.3502	1 1	178-2854	2529-4207
ħ	162-9705	2113-5236	4	178-6785	2543.5849
52 in.	163.3632	2123-7216	57 in.	179.0712	2551-7646
1	163.7559	2133-9440	1	179.4639	2562-9688
1	164-1486	2144-1910		179-8566	2574-1975
1	164:5413	2154.4626		180-2498	2585-4509
1	164-9340	2164-7587	î î	180 6423	2596-7287
ğ	165-3267	2175-0794	Ź	181-0347	2608-0311
. 5	165-7194	2185-4245	} }	181-4274	2619 3580
ar special special states	166-1121	2195 7948	1	181-8201	2630-7095

CIRCUMFERENCES AND AREAS OF CIRCLES.


Diameter.	Circum.	Area.	Diameter.	Circum.	Area.
58 in	182-2128	2612:0856	63 in.	197-9208	3117-2526
1 8	182-6055	2653 1861	ļ	198:3135	3129.6349
8	182:9982	2364.9112	- 2 - 4:	198.7062	8142.0117
:	183:3909	2676.3609	. 3 	199.0989	3154.4732
Ĭ,	183 7836	2687 8351	5	199-4916	3166 9291
: 5	184 1763	2699:3338	:	199.8843	3179 4096
i	184.5690	2710:8571	j j	200 2770	3191 9146
Y- →\$ -: Y .2.##€-70	181-9617	2722:4050	1	200-6697	3204.4449
59 in.	185:3514	2733 9774	64 in.	201:0624	3216-9984
H	185 7471	2745 5743	1 1	201:4551	3229.5770
4	186.1398	2757-1957	2	201:8478	3242 1782
,	186:5325	2768 8118	: :	202 2405	3254.8080
F 31 : E 4	186 9252	2780.5123	i i	202-6332	3267-4603
ä	187:3179	2792-2071		203.0259	3280:1372
7	187:7106	2803-9270	-142.K.	203.4186	3292.8385
7	188-1033	2815 6712	-	203-8113	3306.5645
60 in.	188 4960	2827 4100	65 in.	201.2010	3318-3151
1 8	188 8887	2839-2332		204.5917	3331.0900
	189 2814	2851 0510	1	204-9894	3343-8875
3 1	189.6741	2862/8931		205:3821	3356 7136
h l	190.0668	2874.7603	ij	205 7748	3369 5623
à	190.4595	2886 6517	. <u>.</u>	206.1675	3382:4355
- 4	190.8522	2898-5677	4	206 5602	3395-3332
ĥ	191-2419	2910 5083	1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-	206-9529	3408 2555
61 in.	191-6376	2922-4734	66 m.	207:3456	3421-2024
i i	192 0303	2934.4630		207 7383	3434.1737
سكاست المناوية المنابعة	192.4230	2916-1771	į į	208-1310	3447-1676
ą	192.8157	2958-5159	. 8	208.5237	3468-1901
î	193:2084	2970 5791	1	208-9164	3473-2351
3	193.6011	2982-6669	The St. Just St. Villed All	209.3091	3486-3047
3	193.9931	2994-7792	7	209 7018	3499-3987
કે	194:3865	3006.9161	ã	210-0945	3512-5174
62 in.	191.7792		67 jn.	210-1872	3525 6606
7	195-1719	3031-2835	! 1	210.8799	3538-8283
1	195.5646	3043-4740	. 1	211-2726	3552-0185
3	195.9573	3055.7091	. 32	211.6653	3565-2374
†	196:3500	3067-9687	; ;	212-0500	35784787
5	196:7427	3080-2529		212.4507	8591-7446
Rivelic R of the Killebour.	197:1354	3092-5615	- 6-44532 picture 1200-44.	212 8484	3605.0350
š	197-5281	3104-8948	8	213-2361	3618-3300
			·		1

Diameter.	Circum.	Area.	Diameter.	Cu cum.	Arca.
60 !	213-6288	3631 6896	73 in.	229-3368	4185-3966
68 in.	214 0215	3645-0536	, , ,	229.7295	4199-7424
Ř	214 4142	3658-1102		230 1223	1214-1107
1 :	214.8069	3671.8551	1 3	230 5149	4225-5077
K minero K minero street	215-1996	3685 2931	. 4	230-9076	4242 9271
<u> 중</u> :	215.5923	3698 7554	3	231:3003	4257:3711
. 3	215 9850	3712-2421	, i	231 6930	4271-8396
4	216 3777	3725 7535		232 0857	4286 3327
8			Ϊ "	1	
69 in.	216-7701	3739-2894	74 in.	232-1784	4300.8504
Å	217-1631	3752.8498	1	232 8711	1315 8926
î	217-5558	3766-4327	ï {	2 to 2638	1329-9572
3	217 9485	3780.0113		233-6565	4314-5505
À	218 3412	3793-6783	d A	1 284-0492	4359-1663
3	218 7339	3807:3369	É È	234 4419	4373-8067
3	219-1266	3821-0200		234 8346	4888-1715
明日 17、3、 中間 17、18、7年日 18・28	219 5193	3834.7277	7	235-2273	4403-1610
70 in.	219.9120	3848-4600	75 m.	235-6200	4117 5750
win.	220-3047	3862 2167		236-0127	4132 6135
Ř	220.6974	3875-9960	1	236 4054	4447:3745
4	221.0901	3889.8039	1 1	236 7981	: 4462-1612
Ä	221 4828	3903 6343	di H	237-1908	1176 9763
2	221.8755	3917 4893	4 8	237:5835	4491 8130
1 5	222 2682	3931-3687	1 1	237-9762	4506 6742
Z-qpacz bet-z	222 6699	3745-2728	38.36.873.88	238:3689	4521-5600
8			i 7		
71 in.	223.0536	3959 2014	76 in.	238 7616	4536-4704
1	223 4463	3073-1545	1	239 1543	4551.4023
1 1	223 8390	3987-1801		239 5470	4566.3626
	224.2317	4001 1344		259-9397	4581 3486
l j	224.6244	4015-1611		240 3324	4596:3571
1 1	225.0171	4029-2121		240 7251	4611 3902
A - Secure of the second	225.4098	4043-2882	5 7 39 47 4	241 1178	4626:4177
1 %	225.8025	4057-3886	1 6	241 5105	4641.5299
72 in.	226.1953	4071-5136	77 in.	211-9032	4656-6366
1	226 5879	4085-6631	ļį ,	212-2959	1671-7678
1	226.9806	1099-8350	1	242-6886	4686 9215
1	227:3733	4114-0356	3	243-0813	4702-1039
H	227.7660	4128-2587	1 1	243-4740	4717:3087
	228-1587	4142-5064	1 3	243.8667	4732-5381
3	228 5514	4156-7785] }	244 2594	4747-7920
Aria-th-orange in	228.9441	4171-0753	#B-14-91 R692 1777-49-55	244 6521	4763 0705
, B.		1	1 "	1	4

78 in.	245:0148 245:4375 245:8302 246:2229 246:6156	1778·3736 4793 7012 4809 0512	83 in.	260:7528	
1	245:4375 245:8302 246:2229	4793 7012		200 1020	1 5110 6200
8	245:8302 246:2229			261:1455	5126.9299
	246-2229		l K	261 5382	5443 2617
				261.9309	5159.622
ï	916 6136	4821 4299	: 5 - 1: 5:7:4-5	262:3236	5476 0051
		4839-8311	đ t	-	5492 4118
•	217 6083	4855 2568	Š	262:7163	
1	217-1010	4870-7071	í	263.1090	5508-8416
Ŕ	247 7937	4886 1820	'	263:5017	5525-3019
79 m.	218 1864	4901.6814	84 in	263 8944	5541-7824
1	248 5791	4917:2053	6	$264 \cdot 2871$	5558 288
1	248:9718	4932 7517	Ī	261:6798	5574.816
	249 3645	4948 3268	1 K	265-0725	5591.8730
į,	219:7572	4963 9248	*	$265 \ 4652$	5607.952
- 1	250 1499	1979 5456	2	265 8579	5624-555
1	250 5426	4995-1930	3	$266 \cdot 2506$	5641-1848
1	250 9353	5010-8612	i i	$266\ 6433$	5657 835
80 in.	251:3280	5026-5600	85 m.	267:0860	5674-150
1111	251.7207	5042-2803		267:1287	5691-251
4	252-1134	5058 0230	š l	267-8214	5707-941
!	252.5061	5078-7914	1	268-2141	5724-694
7	252 8988	5089 5883	ä.	268-6068	5741.470
, i	253-2915	5106:4060	2	268-9997	5758-269
3 1	253 6842	5121 2497	3	269 8922	5775 095
-0.8-6 o 8.040-7	254 0769	5187 1173		269.7849	5791 944
	054.4000	5 1 5 0 Octo 1	≻6 m.	270:1776	5808:818
81 in.	254-4696	5158 0094	cu in.	270.1710	5825 716
4	254-8623	5168-9260	ķ	• • • • • • • • • • • • • • • • • • • •	5842 637
1	255-2550	5181,8651	4	270.9630	1
3	255 6477	5200-8329		271-3557	5859-587
ą i	256 0404	5216 8231	•	271-7184	5876-559
Š	256.4331	5232.8371	8	272.1411	5893 554
En (Mess cressor)	256 8258	5218-8772	7-10-00 00 0-10-7	272 5338	5910 576
ķ	257 2105	5264:9411	8	272 9265	5927-622
82 in.	257 6112	5281 0296	87 in.	273-3192	. 5955 692
1	258.0039	5297 1426 -	1 8	273.7119	; 5961:797
ï	258 3966	5813-2780	1	274.1046	5978-904
ğ	258:7893	5329 4421	8	274 4973	5996 050
ä	259.1820	5345 6287	Ä	274 8900	6013-218
ģ	259 5747	5361.8891	5	275-2827	6030-410
X-lenk(Z S) Alb Z(Spee)	259-9674	5378-0755		275-6754	6047-629
3	260-3601	5394 3358	78	276 0681	6064.871

Diameter.	Circum.	Area.	Diameter.	Circum.	Area.
88 in.	276.4608	6082-1376	93 in	292 1688	6792 9248
	276.8535	6099 4287		292.5615	6811.197
Ą		6116.7422	Î	292-9542	6829:492
•	277.2462	6134-0814	4	293-3469	6847:816
3	277.6389		ķ I	293 7396	6866-163
	278 0316	6151-4491	APER TO SHEET	294-1323	6884-533
\$	278 4243	6169.8376	, i	294 5350	6902 929
3	278.8170	6186-2591	4	294 9177	6921-349
Ä	279 2097	6203-6905	1	204 0177	0021 010
89 in.	279-6024	6221-1534	94 in.	295-3101	6939-794
1	279 9951	6238 6408	1	295.7031	6958 263
ĵ,	280:3878	6256-1507	1	296 0958	6976 755
1	280.7805	6273 6893	1 1	296:4885	6995-275
1	281-1732	6291 2503		296 8812	7013 818
Ä	281-5659	6308 8351	i i	297 2739	7032:385
ã	281-9586	6326 4460		297 6666	7050 977
12-13-14-14-14-14-14-14-14-14-14-14-14-14-14-	282:3513	6344-0807	11.00	298 0593	70 6 9 594
99 m.	282-7440	6361 7400	d 95 in.	298 4520	7088-285
1	283-1367	6879.4238	i k	298 8147	[*] 7106 900
ş	283 5294	6397-1300	- 3: #FK	299 2374	7125-588
4	283-9221	6424-6649	3	299 6301	7111 305
Ä	284-3148	6482-6223	l î	300 0228	7163 044
Ť,	284 7075	6450:4039		300:4155	7181 807
ă	285-1002	6468 2107	1 7	300.8082	7200 596
en elektrik in de senten elektrik	285.4929	6486 0418	1 1	301 2009	7219-409
.,	405.0050	6508 8974	96 in.	301-5936	7238 240
91 in.	285·8856 286·2783	6521.7772	f	301-9863	7257-108
ş		6539 6801		302 3790	7275 992
4	286-6710	6557:G114	j• 3•	802 7717	7291-907
ş	287 0637		H #	303-1644	7313-841
ģ	287-4564	6578 5651	* -510 6 774	303 5571	7832-800
ĝ	287.8491	6593 5431	5	303-9490	7351 783
Complete Com	288-2418	6611.5162	4 }	304-3125	7370-794
Á	288 6345	6629 5736	i *	John The State of	
92 in.	289-0272	6647-6258	97 in.	304-7852	7389-828 7408-886
Į.	289-4199	6665.7021	1 5	305-1279	,
Ä	289-8125	6683-8010		305 5206	7427-967
3	290 2053	6701.9286		305-9133	7447-076
ì	290.5980	6720 0787		306-3060	7466-208
` Ē	290-9907	6738 2530	8 8	306-6987	7485 364
ã	291-3834	6756 4525	* - 422 F 450 W 4 4 4 50	307 0914	7504-540
ž	291.7661	6774-6763	N 2	309 4841	7523.75

Diameter	Circum	Area.	Diameter.	Circum.	Area.
98 in.	307 8768 808 2695 308-6622 309-649 309-4476 309-8403 310-2330 310-6257 811-0184	7542-9818 7562-2862 7581-5182 7600-8189 7620-1471 7639-4995 7658-8771 7678-2790 7697-7056	100 in.	311·4111 311·8038 312·1965 312·5892 312·9819 313·7673 314·1600	7717·1563 7736·6297 7756·1318 7775·6563 7795·2051 7814·7790 7834·3772

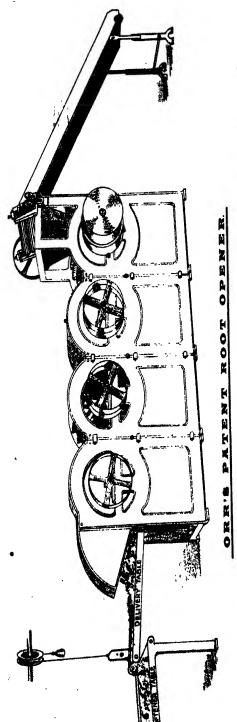

tings. The Machine consists of four strongly built cylinders all revolving in the same direction. These cylinders beary steel pins, which intersect stationary pins fixed into breast plates. The rubbing action opens and cleans the roots, and the dirt and sand fall out through gratings underneath the cylinders. The cuttings or roots are fed evenly on feed table, and are carried up to a pair of flitted rollers, which pass them into the hopper, and then into the Machine. The Root Opener should be placed in such a position to deliver direct on to the feed table of the Softening Machine, labour, and this arrangement insures an even feed for the Softener, which in turn is most important for Open and Clean Jute and other fibrous roots, generally known in the Jute Trade uniform betching. Buives as outlings. to the chus

This Machine is capable of opening and cleaning sufficient material for a Softening Machine, making the working a none process. If, however, the Softener is required to work long Jute, the delivery table of the Root Opener can be instantly raised to allow the operators to feed long Jute. continuous process.

Outlings can be opened and cleaned rapidly, and at a minimum cost They are prepared and delivered on to the Softener table in a condition most suitable to receive the batching mixture. The roots having been opened, and the fibre loosemed, the oil and water are rapidly absorbed and remain in the fibre during the process of carding. This is not the case when cuttings have not been previously cleaned and prepared, and it will be found that much of the batching mixture

In treating cuttings with an opener and getting rid of the dirt and sand, there is a great saving in card covering, much less tear and wear to the Cards and other Machines that follow. these Root Openers are at work in Indian Jute Mills, and they are giving every satisfaction

Sole Makers:

JAMES F. LOW & CO., Ltd.,

TRLEGRAMS-KEAY, DUNDEE.

NATIONAL TREEPHONE No. 346.

THOMAS C. KEAY,

ENGINEER AND MACHINE MERCHANT,

MACHINERY ADCTIONEER AND VALDATOR,

Northern Machine Works, Ogilvie Street, Dundee.

NEW AND SECOND HAND

Jute,

Flax.

Hemp, &

Tow Machinery



Sack Printing Machines.

Engines,

Boilers.

Lathes.

Machine Tools,

MAKER OF

Evaporative Steam Condensers, Sack Cutting Machines.

Sack Printing Machines. Yarn Power Reels.

Drawing Rollers for Drawings, Rovings, Spinning Frames, &c.


Arbors for Spinning Frame Wood Pressing Rollers.

Loom and Sack Sewing Machines Spare Parts, etc.



PLANS AND ESTIMATES
GIVEN FOR
MILLS AND FACTORIES.

ON APPLICATION.



Sack Cutting Machines.

THOMAS C. KEAY,

MILL FURNISHER, SHUTTLE, PICKER, and BOBBIN MAKER,

Engineer, Machine Merchant, Machinery Auctioneer & Valuator,

17 BALTIC STREET, DUNDEE.

SPECIALTIES-

Bobbins, Shuttles, Baffalo and Leather Pickers, Planetree Rollers, Bobbin Ends, Picking Arms, Bank Pins, Reel Spokes, Buffalo Skips, Belting—all kinds, Bolts and Nuts, Oils, Picking Bands, Cotton Banding, Belt Laces, Martingale Strapping, and every requisite in Furnishings for Jute and Flax Mills.



Bobbins all sizes.



Union Bag Sewing Machine.



Beech and Persimmon Wood Shuttles.



Buffelo Pickers.



Government Waterproof Belt Dressing.

GEORGE H. LORD & SON

(ESTABLISHED 35 YEARS)

ENGINEERS & MACHINE MERCHANTS,
MILL AND FACTORY FURNISHERS.

PARK MACHINE WORKS, DUNDEE.

LICENSED AUCTIONEERS & VALUERS,

Mill; Factory, and Rope Work Property and Plant Valued (for Insurance, Partnership, and other Purposes), also arranged for disposal either by Public or Private Sale.

FIRE ASSESSORS.

Fire Claims prepared and adjusted on behalf of the assured or others.

A LARGE STOCK ALWAYS ON HAND OF SECOND HAND
Preparing, Spinning, Winding, Weaving, and Finishing

MACHINERY.

Suitable for Hemp, Flax, and Jute, also for Manilla, Russian, Italian, and other Hemps for Binder Twines, Ropes, Cords, &c.

DEALERS IN ENGINEERS' TOOLS.

Estimates given for Machinery Overhauled and put into Good Working Order.

Postal Address: CHAMBERS-13a Ward Road, Dundee, Scotland.

BOBBIN MAKING MACHINERY

FOR

JUTE BOBBINS.

THREAD BOBBINS.

SPINNING BOBBINS; also

General Woodworking Machinery.

THOMAS WHITE & SONS,

LAIGH PARK WORKS,

PAISLEY

WRITE US FOR FULL PARTICULARS.

THE DUNDEE PATENT OFFICE.

GEO. C. DOUGLAS & CO., Consulting Engineers and Patent Agents,

Managing Partner—GEO. C. DOUGLAS, C.E. Chartered Patent Agent.

PATENTS, DESIGNS, and TRADE MARKS Obtained for the United Kingdom,
the Colonies, and all Foreign Countries. Advice as to the Patent Laws, Cases of Infringment, and
every assistance offered to Patentees and Inventors.
conducted. Working Drawings and Tracings Made. Technical and Scientific evidence.

Particulars of Cost on Application

THE STURROCK PATENT Smoke Consuming Furnace Bridge Coy.

Head Office-41 Reform Street, Dundee.

These Patent Bridges have been giving unqualified satisfaction in land and marine boilers, and enquiries are solicited for fitting these to boilers working with either natural or forced draught.

EDWARD LUCAS & SON,

DRONFIELD FOUNDRY, near SHEFFIELD.

MAKERS OF



For Flax, Jule, Worsted, Cotton, &c.; also

Roving Spindles and Flyers.

ALSO MAKERS OF

WARP, LOOM, & SILK SPINDLES.

INQUIRIES SOLICITED.



SAML. LUCAS'S PATENT SPINDLE has a collar hardened and fixed under the screw, which can be replaced; and Spindles worked down at the shoulder can have this Patent Collar put on at a small cost. The advantage of this Collar is that it prevents the shoulder at the bottom of screw becoming untrue by the flyer coming down on shoulder when working, the collar being equal in temper to the flyer. Many thousands of these Patent Spindles are now running, and are much approved.



Maileable Iron Bastings of Superior Quality for all Purposes.

Telegraphic Address—"LUGAS, Dronfield."

AGENTS-

Messrs RICHARD L. BAXTER & CO., 81 Murraygate, Dundee.

Telegraphic Address-"TURBINE," Dundee.

Telephone No. 402.

THOMSON, SON, & CO.,

LIMITED.

Engineers, Millwrights, & Machine Makers, Iron and Brass Founders,

DOUGLAS FOUNDRY, DUNDEE.

JOHN STRACHAN, SECRITARY JOHN M. MALLOCH,



MACHINE MOULDED WHEELS.

Spur and Bevel, either Plain or with Helical, Teeth.



Makers of Spinning and Weaving Machinery, for Flax and Jute; Machinery for Washing, Bleaching, and Finishing Yarns and Cloth; Calenders, Mangles and Hydraulic Presses; Steam Engines. Water Wheels, and Turbines; Pumping Machinery; Fire-proof Beams, Pillars, and Castings of all kinds; Wrought Iron Work; Belt and Rope Gearing of every description; Millwright and general Engineering Work.

Plans and Specifications for Mills and Factories furnished in connection with

JAMES F. LOW & CO.,

LIMITED.

MAKERS OF FLAX, HEMP, & JUTE MACHINERY,

IRON & BRASS FOUNDERS,

MONIFIETH FOUNDRY,

MONIFIETH,

SCOTLAND



FAIRBAIRN LAWSON COMBE BARBOUR,

LIMITED.

Hope Foundry, LEEDS, England.

Makers of MACHINERY for

Preparing and Spinning Flax, Tow, Hemp and Jute,

AND OF

Special Machinery for the Manufacture of Twines.

ALSO OF

GOOD'S COMBINED HACKLING & SPREADING MACHINE, LONG-REACH SCREW-GILL DRAWING FRAMES, CHAIN-GILL DRAWING FRAMES with apron head.

Patent High-Speed Horizontal and Automatic Spinning Frames for MANILLA.

AND

Other Special Machinery for the manufacture of Rope Yarns & Binder Iwine $_q$

IMPROVED LAYING MACHINES,
HASKELL-DAWES TUBING TWISTERS.

Brownell's Patent Twisting and Laying Machines for Twines.

COMPLETE PLANS & ESTIMATES FOR FLAX, TOW, HEMP & JUTE MILLS
TRAWL TWINE FACTORIES & STEAM ROPEWORKS.

Telegraphic Address - "FOUNDERS," Dundee.

Telephone No. 398.

ROBERTSON & ORCHAR, LIMITED,

WALLACE FOUNDRY, DUNDEE.

Engineers, Millwrights, Machine Makers, and Founders.

MAKERS OF

Preparing, Weaving, and Finishing Machinery for all Classes of Linen, Hemp, Tow, and Jute Fabrics.

PATENTEES AND MAKERS OF THE FOLLOWING MACHINES:-

Warp Winding Machines.

West Winding Machines.

Weft Softening Machines.

Patent Yarn Dressing Machines with two to eight Cylinders

Dry Yarn Beaming Machines.

Power Looms.

Double and Single Cloth Damping Machines.

Cloth Starching Machines.

Cloth Mensuring Machines.

Patent Hydraulic and Lever Pressure Roller Mangles of all widths.

Patent Hydraulic and Lever Pressure Five Roller Calenders from 90 to 180 inches in width.

Improved Calenders of three, four, and five Rollers, with special Lever Pressure.

Cloth Crisping Machines.

Candroys for Rolling Cloth

Patent Overhead Sack Sewing Machines, &c.

*EVERY DESCRIPTION OF MILLWRIGHT AND GENERAL ENGINEERING WORK CAREFULLY EXECUTED.

SPECIALTY.

Founders and Makers of all kinds of Machine Moulded Wheels, including Double and Single Helical Toothed Wheels, Spur and Bevel combined, Worm Wheels, &c., &c.

EDWARD SIMPSON & CO.,

Glasgow Spindle and Jool Works, RUTHERGLEN, near GLASGOW.

Manufacturers of

SPINNING SPINDLES AND FLYERS,

ALSO

BRASS NECKS AND STEPS

FOR

JUTE & FLAX MACHINERY.

CAREFUL ATTENTION DEVOTED TO THE

REPAIRING OF SPINDLES AND DRY SPINNING FLYERS.

MANUFACTURERS ALSO OF

Improved SCOTCH SCREW AUGERS and BRACE SCREW BITS for the Hardest Timbers known.

TELEPHONE NO. 01970.

R. C. STIVEN & CO.,

OIL MERCHANTS, MILL & FACTORY FURNISHERS,


3 MEADOW PLACE, MEADOWSIDE

(OPPOSITE LADYWELL CALENDER)

DUNDEE.

JOHN M. INCHES,

Boiler and Steam Pipe Coverer,

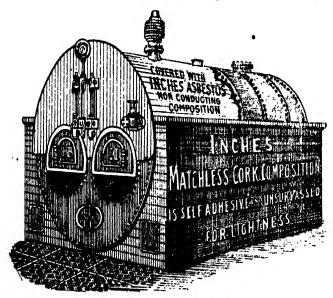

44 FOUNDRY LANE, DUNDEE.

Now amalgamated with the DUNDEE BOILER COYERING COMPANY, Tay Street, DUNDEE.

EDWARD PARKER, CURRIER AND LEATHER MERCHANT,

MERCHANT AND MANUFACTURER OF

BELTING, HOSEPIPES, ROLLER COVERS, LACES, STRAPS, TEMPER BANDS, MARTINGALE BUCKLES, PICKING STRAPS, PICKERS,

ENGLISH AND FOREIGN BUTTS, BELT BUTTS, BUFFALO HIDE SKIPS, AND GENERAL LEATHER FURNISHINGS.

SEAMLESS FLAX AND INDIARUBBER HOSE, BELTING WHOLESALE AND FOR EXPORT, HOSEPIPE FOR MILL AND SHIP USE, FIRE APPLIANCES,

BELTING OF ALL GENERAL WIDTHS ALWAYS IN STOCK AT

eather has surred leading words,

38 SOUTH TAY STREET, DUNDEE.

WILLIAM R. STEWART,

MANUFACTURER OF ALL KINDS OF

HACKLES, GILLS, AND WOOD CARD COVERING.


STEELFACED

CARD

COVERING

Α

SPECIALITY.

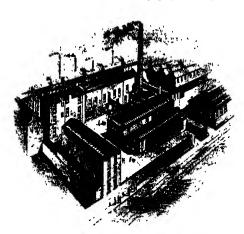

AND
CARD PINS,
GILL RIVETS,
&C.: &C.

HILLBANK HACKLE WORKS, 30 Dens Road, DONDRE.

TELEGRAMS- "FERGUSON."

TELEPHONE No. 94.

Robert Ferguson & Sons,

OIL MERCHANTS, &c.,

MILL FACTORY, & ENGINEERS' FURNISHERS,

All kinds of Oils for Lubricating and Batching Purposes, Belting (all kinds), Laces, Picking Bands, (Green, Chrome, or Oak Tanned), Shuttles, Buffalo Pickers, Bobbins, Plane Tree Rollers, Roller Cloth Dressers Flannel, India Rubber Goods, Spindles and Springs of every kind, Bolts and Nuts, Set Screws, Brass Goods, &c.

FOREIGN INDENTS SPECIALLY ATTENDED TO

11 to 15 Royal Exchange Lane, Dundee.

Fairmuir, Tinplate, Plumber, and Sheet Metal Works.

JOHN GALLOWAY,

IRONMONGER, TINSMITH, PLUMBER, & GASFITTER.

Every description
of Mill and
Factory work done
Gas, Water, and
Steam
Pipes Fitted.

Manufacturer of the Special Machine made Silver Cans and Spinning Conductors, &c. Cop Paus, Pirn Trays, Shuttle Grooves

These Caus are made (with Special Machines) of the hest P.C. and Black Sheet Steel. Corrugated in Mouth, and specially Stamped Bottom, firmly riveted with 6 inbase piece, and extra strong Hoop to body of Can.

Delivery from 600 to a00 per week, as may be arranged for.

PICKER GROOVES OF CHANNELS —to Lengths as ordered Stamped Figures and Letters in Iron, Steel, or Sheet Brass—various sites.

Maker of the New Improved Machine-made Spinning Conductor.

for "
any quantity.

Special Discount

Estimates given

for large quantities.

Special Van sent for Broken Cylinders (on receipt of Telephone message), and immediately returned when repaired.

SHOP & STORE-309 & 311 HILLTOWN, DUNDEE.

Workshops-FAIRMUIR and FAIRFIELD STREETS.

Telephone 1081.

THOS. FERGUSON & CO.,

TEXTILE ENGINEERS,

MILL, FACTORY, AND ENGINEERS' FURNISHERS,

35 COWGATE, DUNDEE.

SOLE AGENTS FOR-

GEORGE ANGUS & CO., Ltd., St John's Leather Works, Newcastle on-Tyne.
Victoria Gas Engine. and "Gilbert" Wood Split Pulleys.

J. J. SAVILLE & CO., Steel and File Manufacturers, Sheffield.
WALKER, MITCHELL. & CO, Gas Engineers, and Faller Makers.

LIST OF GOODS.

LEATHER—Belting, Single and Double; Butts, Picking Bands, Laces—Brown, White, Helvetia, and Raw Hide, Buffalo Pickers and Skips.

ASBESTOS—Patent Pipe and Boiler Covering Composition, Packing Yarn Joints, &c., Silicate Cotton Pipe Coverings.

RUBBER-Valves, Hose, Washers, Belting Mats, &c.

STEEL AND FILES—Triumph Self-hardening Steel, Diamo id Steel, Sperial Magnet Steel, Mining Steel, Steel for Granite, Files, Engineers' and Sledge Mining Springs and Spindles, Milled Steel Fallers or Gill Bars for Flagspecial Fallers without Gill Stocks, Pinned through the Bar.

SUNDRIES.

Oils—Batching and Lubricating; Wheel, Rope and Bear Royes, Bobbins, Spools, Electric Lamps; Soft and Bar Soaps, yanow, Rosin, Glue, &c.